




## 8W-40 INSTRUMENT CLUSTER


<b>Component</b>	<b>Page</b>
Clockspring .....	8W-40-4
Cluster .....	8W-40-2, 3, 4, 5, 6, 7
Control-A/C-Heater .....	8W-40-4
Fuse 6 .....	8W-40-2
Fuse 8 .....	8W-40-6
Fuse 20 .....	8W-40-2
Fuse 25 .....	8W-40-2
Fuse 36 .....	8W-40-2
Fuse 38 .....	8W-40-3
Fuse 55 .....	8W-40-3
G200 .....	8W-40-3
G301 .....	8W-40-3
Lamp-Center Bezel .....	8W-40-4
Lamp-Dome-Front .....	8W-40-7
Lamp-High Mounted Stop .....	8W-40-7
Latch-Door-Left Front .....	8W-40-5
Latch-Door-Left Rear .....	8W-40-5
Latch-Door-Right Front .....	8W-40-5

<b>Component</b>	<b>Page</b>
Latch-Door-Right Rear .....	8W-40-5
Module-Front Control .....	8W-40-2, 7
Module-Fuel Pump .....	8W-40-7
Module-Integrated Power .....	8W-40-2, 3, 6
Sensor-Sun .....	8W-40-4
Solenoid-Brake Transmission Shift .....	8W-40-7
Switch-Headlamp .....	8W-40-6
Switch-Horn .....	8W-40-4
Switch-Ignition .....	8W-40-3
Switch-Multifunction .....	8W-40-4, 6
Switch-Parking Brake .....	8W-40-7
Switch-Remote Radio-Left .....	8W-40-4
Switch-Remote Radio-Right .....	8W-40-4
Switch-Seat Belt-Driver .....	8W-40-3
Switch-Transfer Case Selector .....	8W-40-4, 6
Switch-Window/Door Lock-Driver .....	8W-40-6
Switch-Window/Door Lock-Driver Express ..	8W-40-6
Switch-Window/Door Lock-Passenger .....	8W-40-6

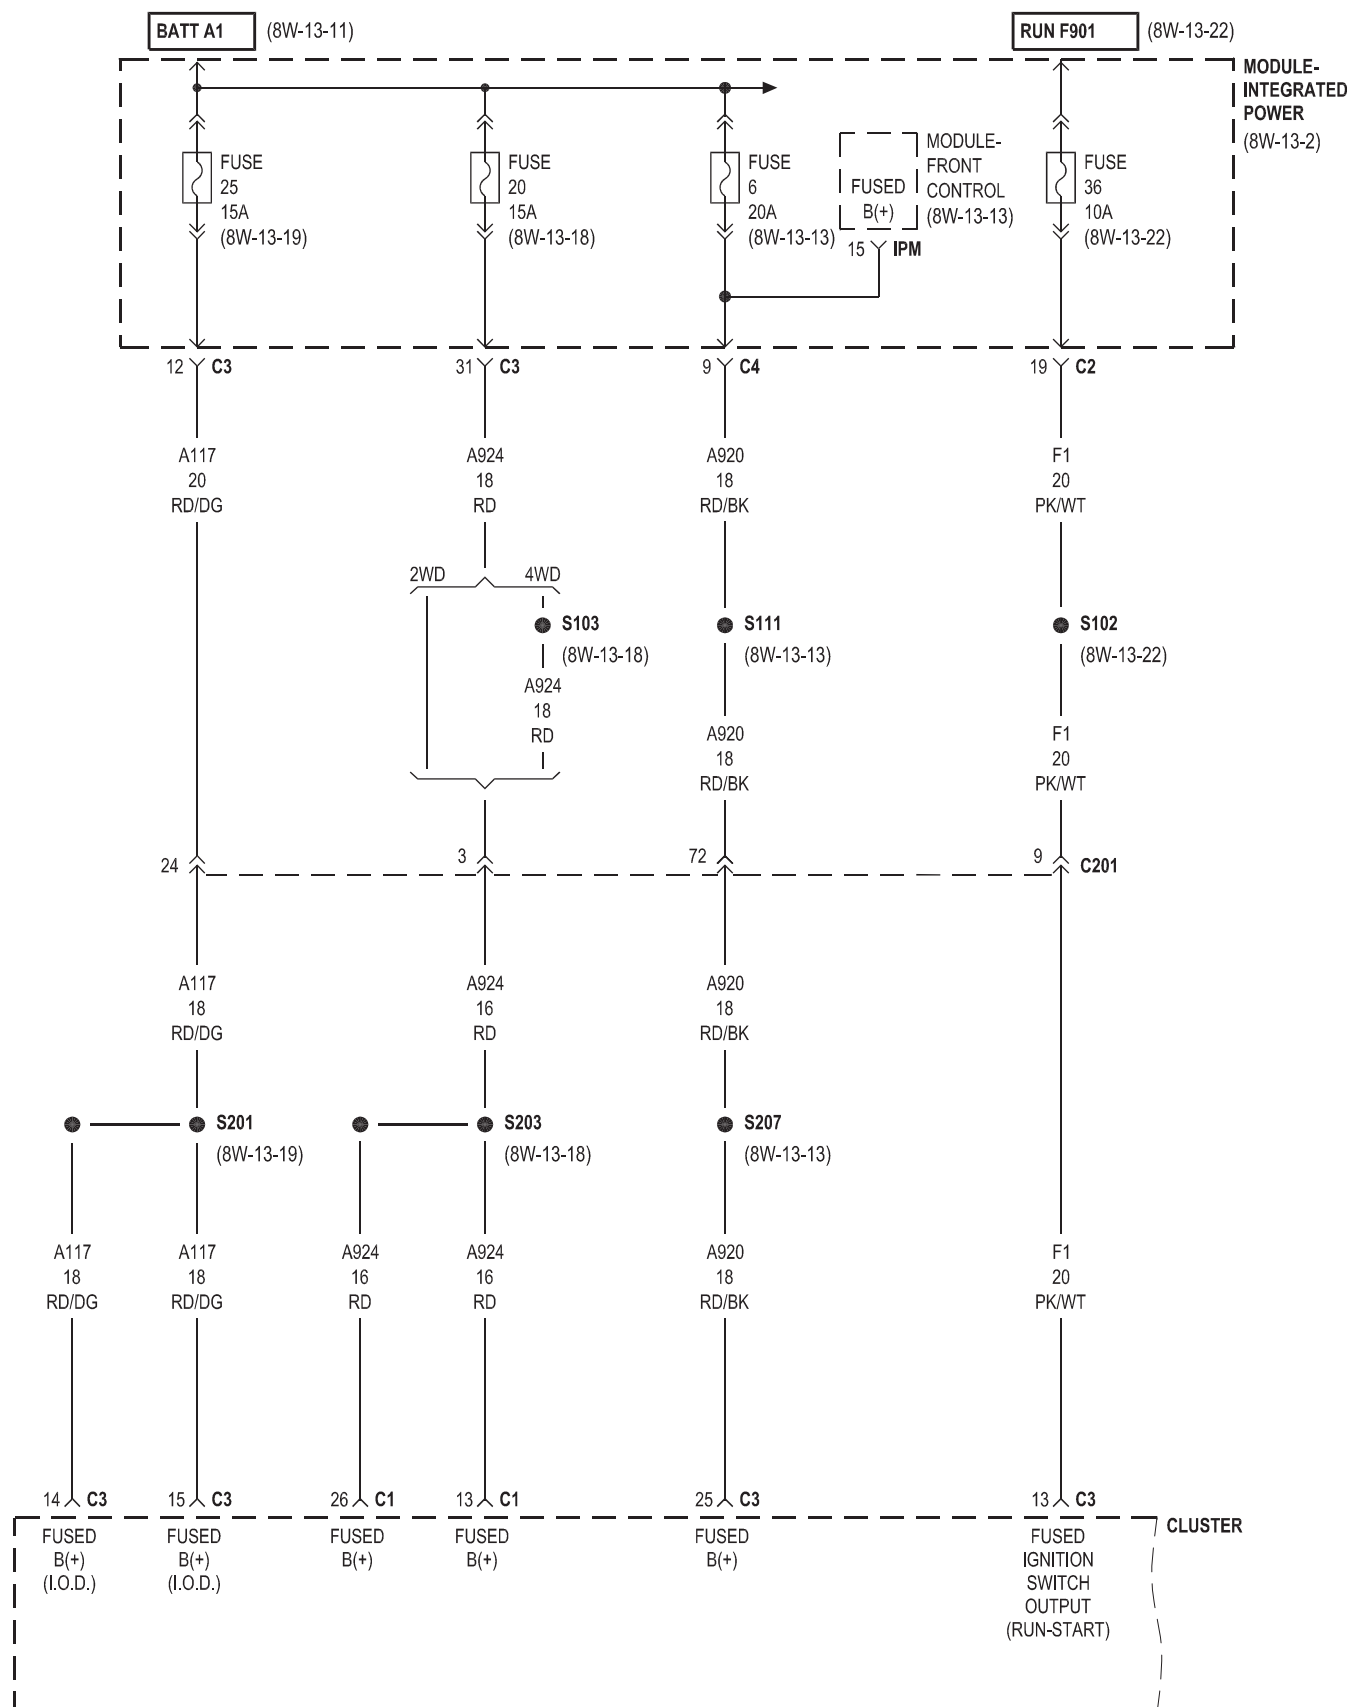

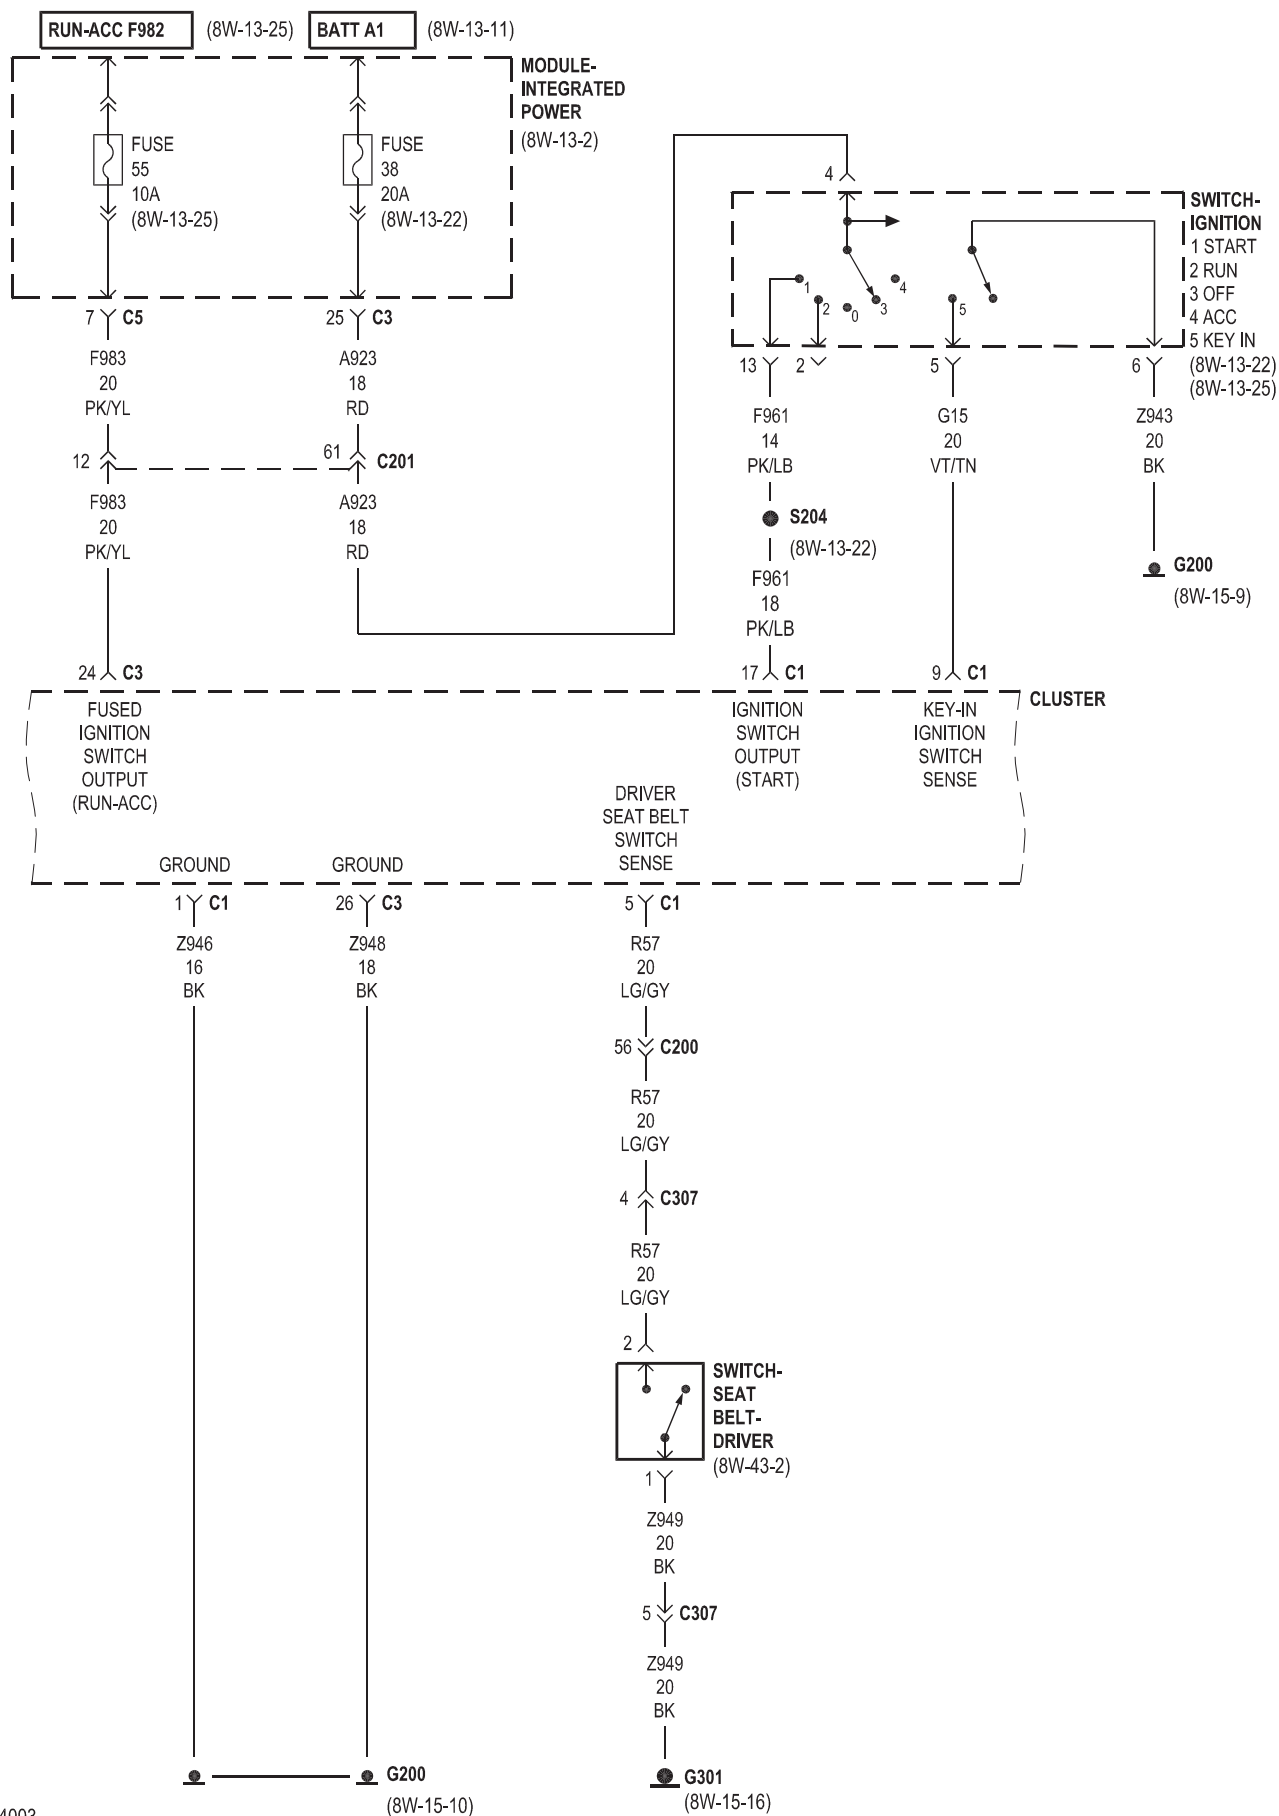

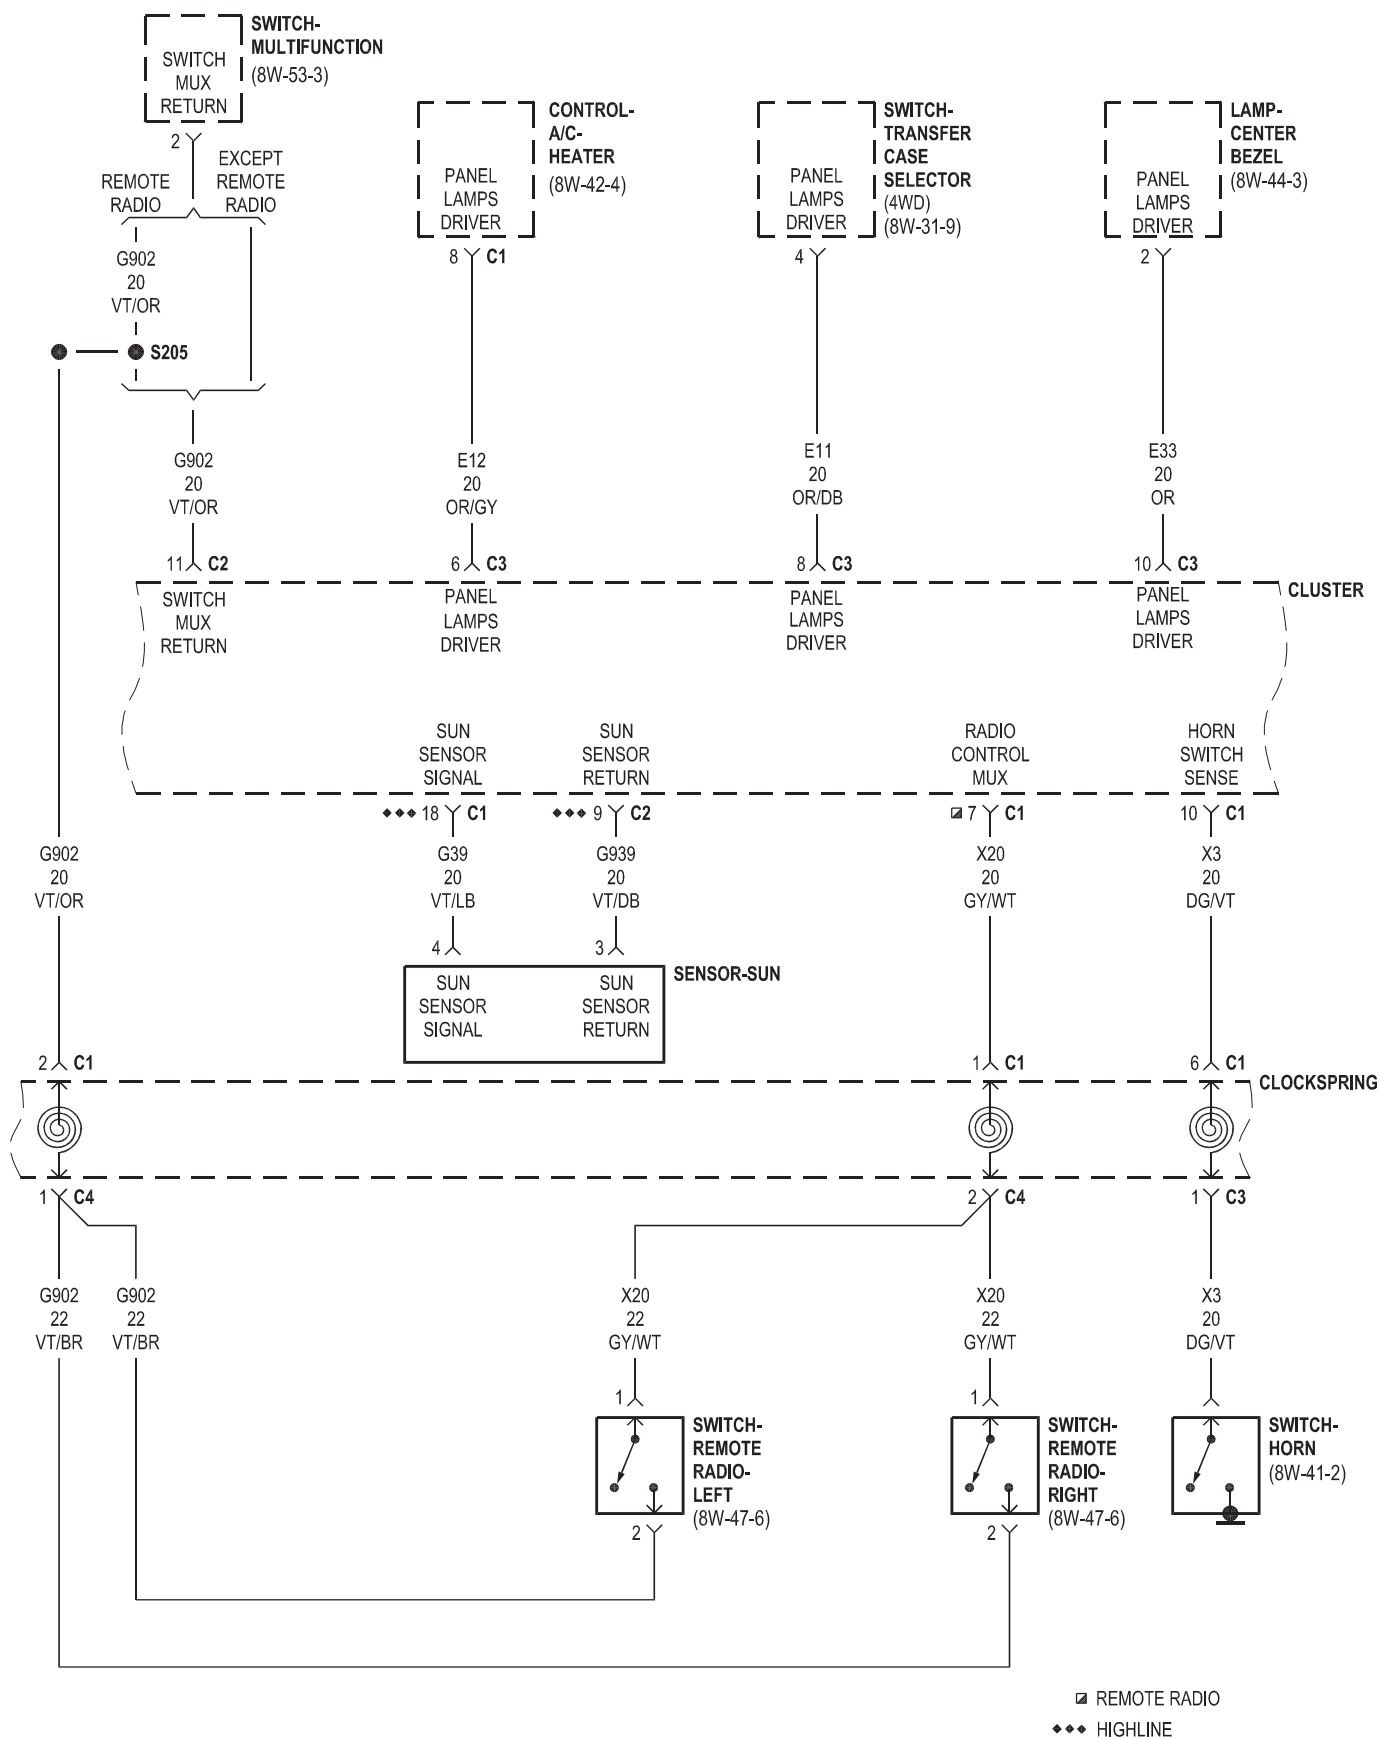

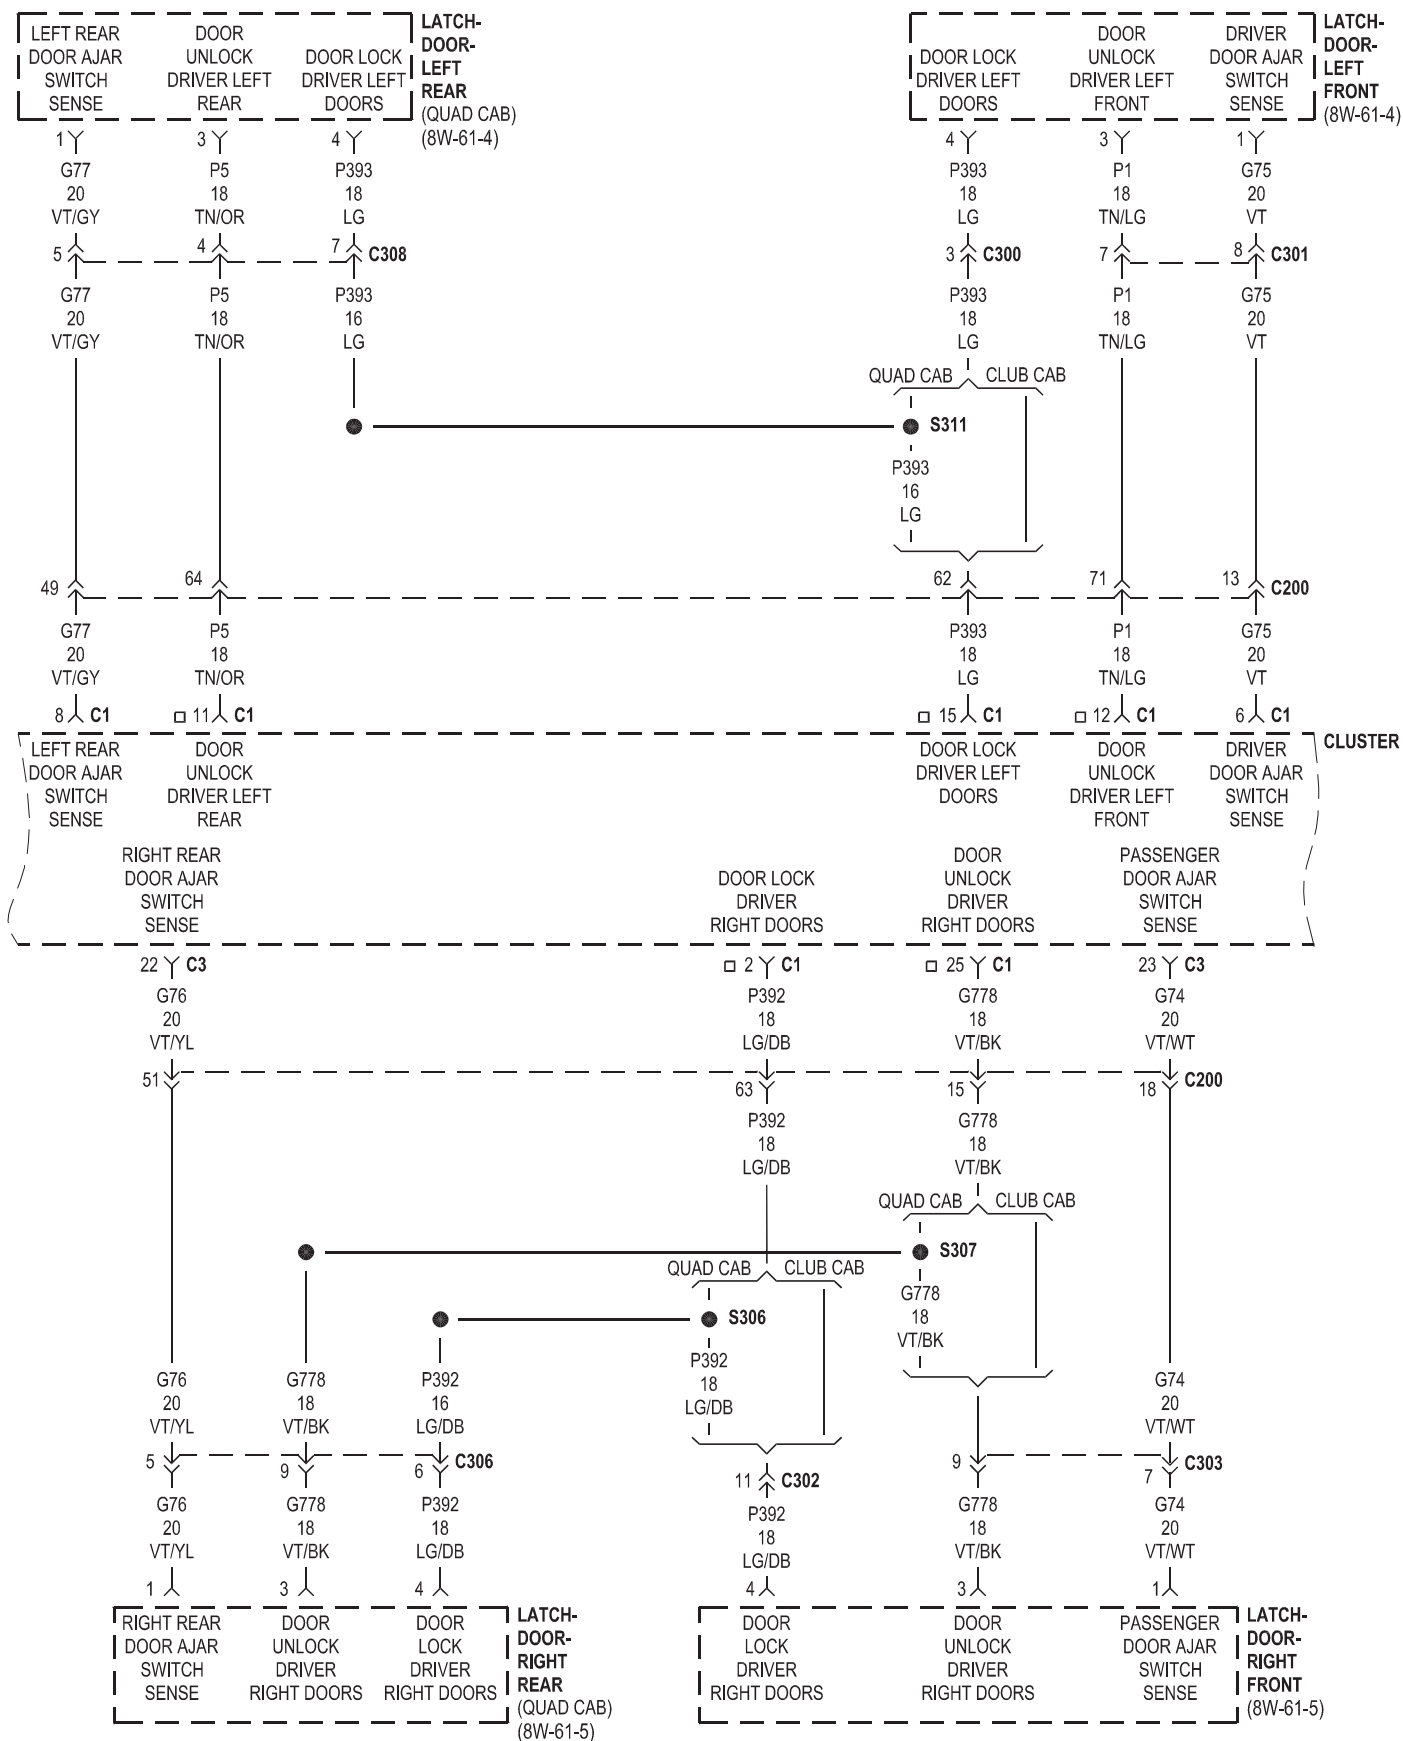

□ POWER CONVENIENCE



