




8W-30 FUEL/IGNITION SYSTEM


Component	Page	Component	Page
Assembly-Exhaust Gas Recirculation		Injector-Fuel-No. 7	8W-30-5
Valve	8W-30-7, 8	Injector-Fuel-No. 8	8W-30-5
Assembly-Natural Vacuum Leak		Module-Anti-Lock Brakes	8W-30-6
Detection	8W-30-4	Module-Front Control	8W-30-6
Assembly-Transmission Solenoid/TRS	8W-30-8	Module-Fuel Pump	8W-30-2, 4
Capacitor-Ignition	8W-30-3	Module-Integrated Power	8W-30-2, 3
Clockspring	8W-30-6	Module-Powertrain	
Cluster	8W-30-4	Control	8W-30-2, 3, 4, 5, 6, 7, 8, 9
Coil-Ignition-No. 1	8W-30-5	Motor-Iac	8W-30-6
Coil-Ignition-No. 2	8W-30-5	Relay-A/C Clutch	8W-30-2
Coil-Ignition-No. 3	8W-30-5	Relay-Auto Shut Down	8W-30-3
Coil-Ignition-No. 4	8W-30-5	Relay-Fuel Pump	8W-30-2
Coil-Ignition-No. 5	8W-30-5	Relay-Starter	8W-30-2
Coil-Ignition-No. 6	8W-30-5	Sensor-Ambient Air Temperature	8W-30-6
Coil-Ignition-No. 7	8W-30-5	Sensor-Camshaft Position	8W-30-7
Coil-Ignition-No. 8	8W-30-5	Sensor-Crankshaft Position	8W-30-7
Data Link Connector	8W-30-8	Sensor-Engine Coolant Temperature	8W-30-8
Fuse 7	8W-30-2	Sensor-Intake Air Temperature	8W-30-7
Fuse 18	8W-30-2	Sensor-Knock	8W-30-7
Fuse 24	8W-30-2	Sensor-Map	8W-30-7
Fuse 33	8W-30-3	Sensor-Oxygen-Left Front	8W-30-9
Fuse 37	8W-30-2	Sensor-Oxygen-Left Rear	8W-30-9
G100	8W-30-4	Sensor-Oxygen-Right Front	8W-30-9
G107	8W-30-2, 4	Sensor-Oxygen-Right Rear	8W-30-9
G108	8W-30-8, 9	Sensor-Throttle Position	8W-30-7
Generator	8W-30-3	Sensor-Transmission Range	8W-30-8
Injector-Fuel-No. 1	8W-30-5	Sensor-Wheel Speed-Abs-Rear	8W-30-6
Injector-Fuel-No. 2	8W-30-5	Servo-Speed Control	8W-30-3
Injector-Fuel-No. 3	8W-30-5	Solenoid-EVAP/Purge	8W-30-3
Injector-Fuel-No. 4	8W-30-5	Switch-Clutch Interlock	8W-30-8
Injector-Fuel-No. 5	8W-30-5	Switch-Oil Pressure	8W-30-6
Injector-Fuel-No. 6	8W-30-5	Switch-Stop Lamp	8W-30-6




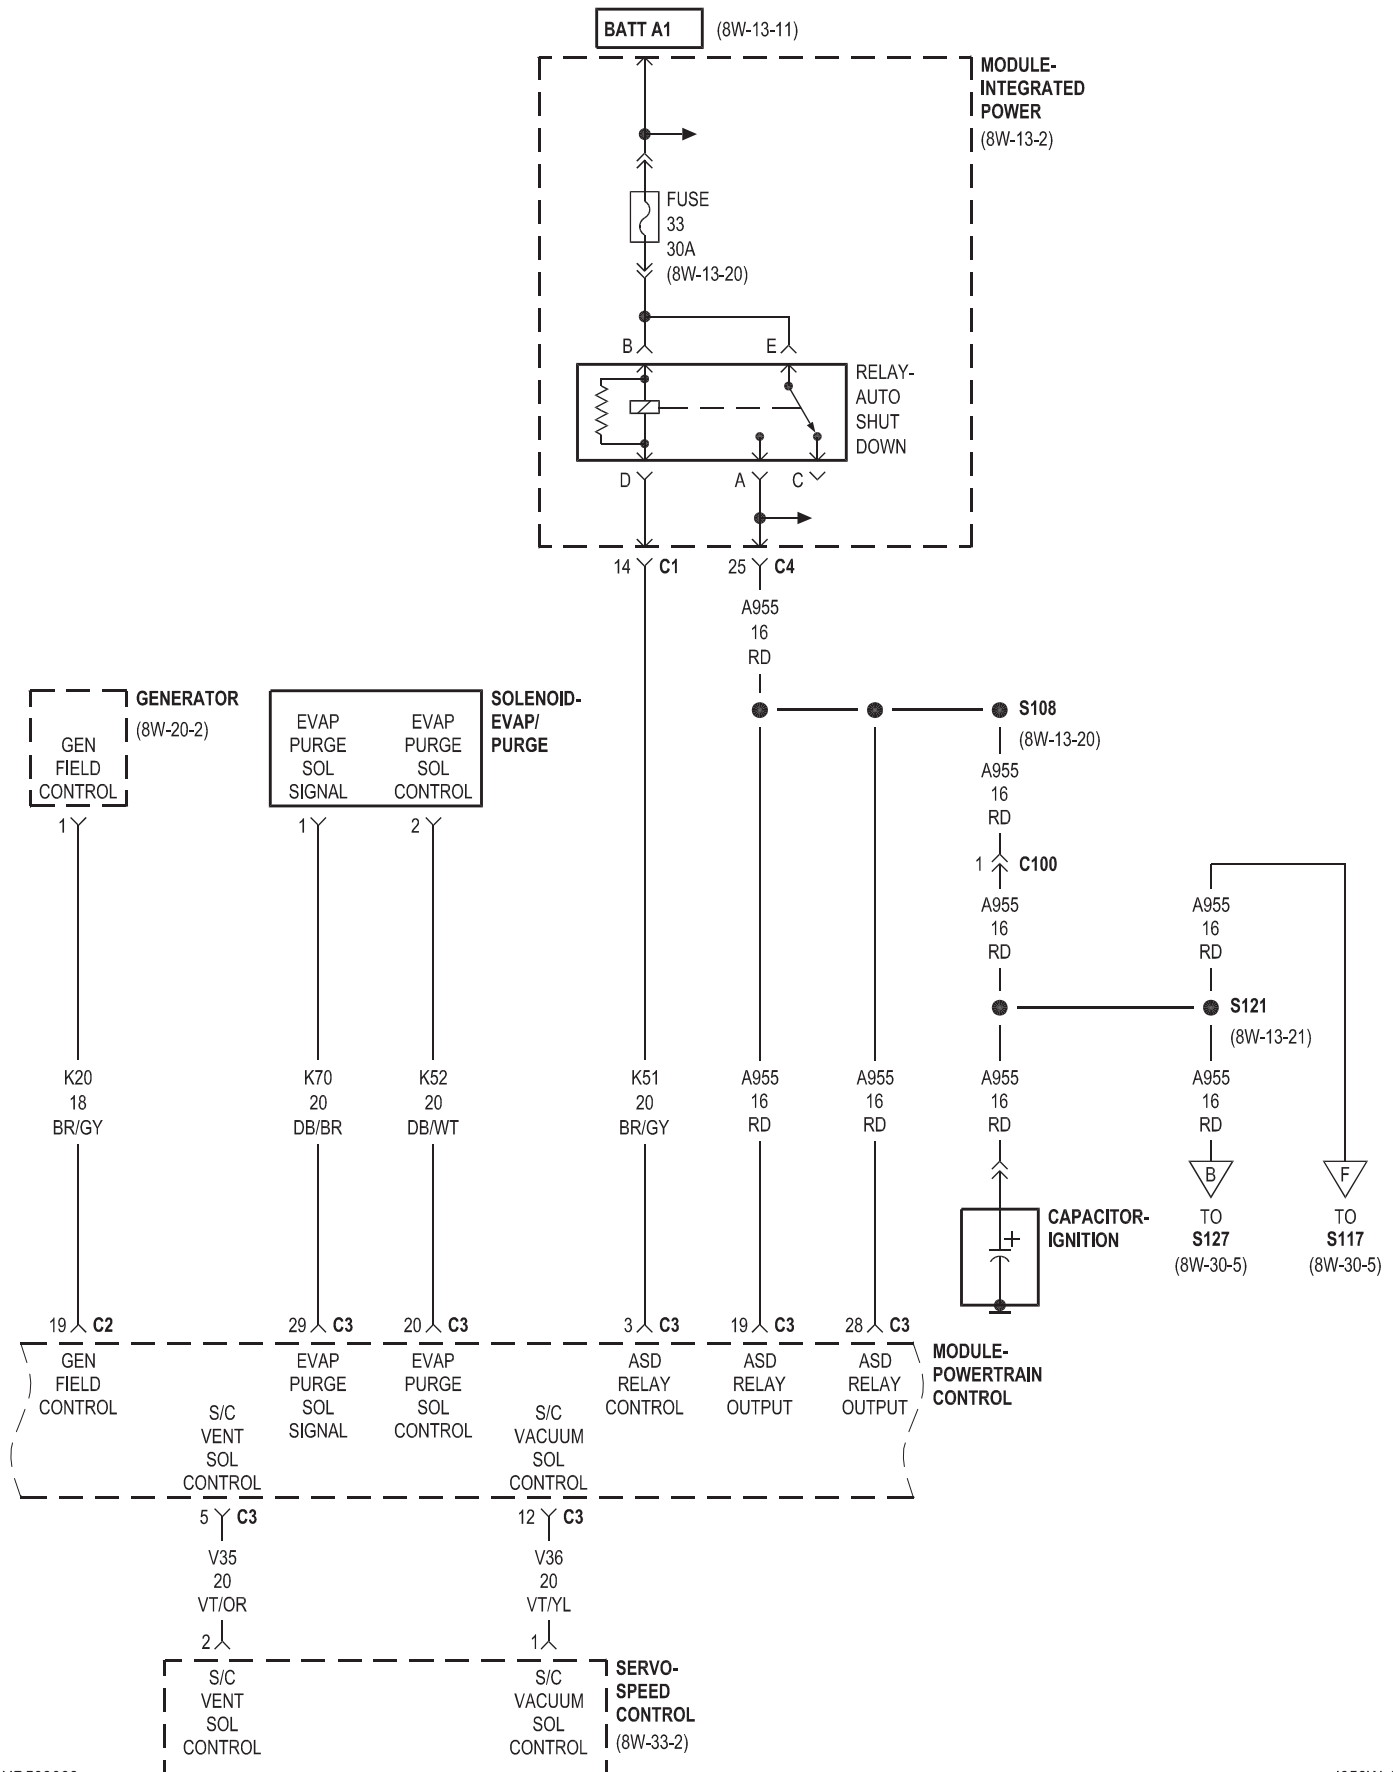

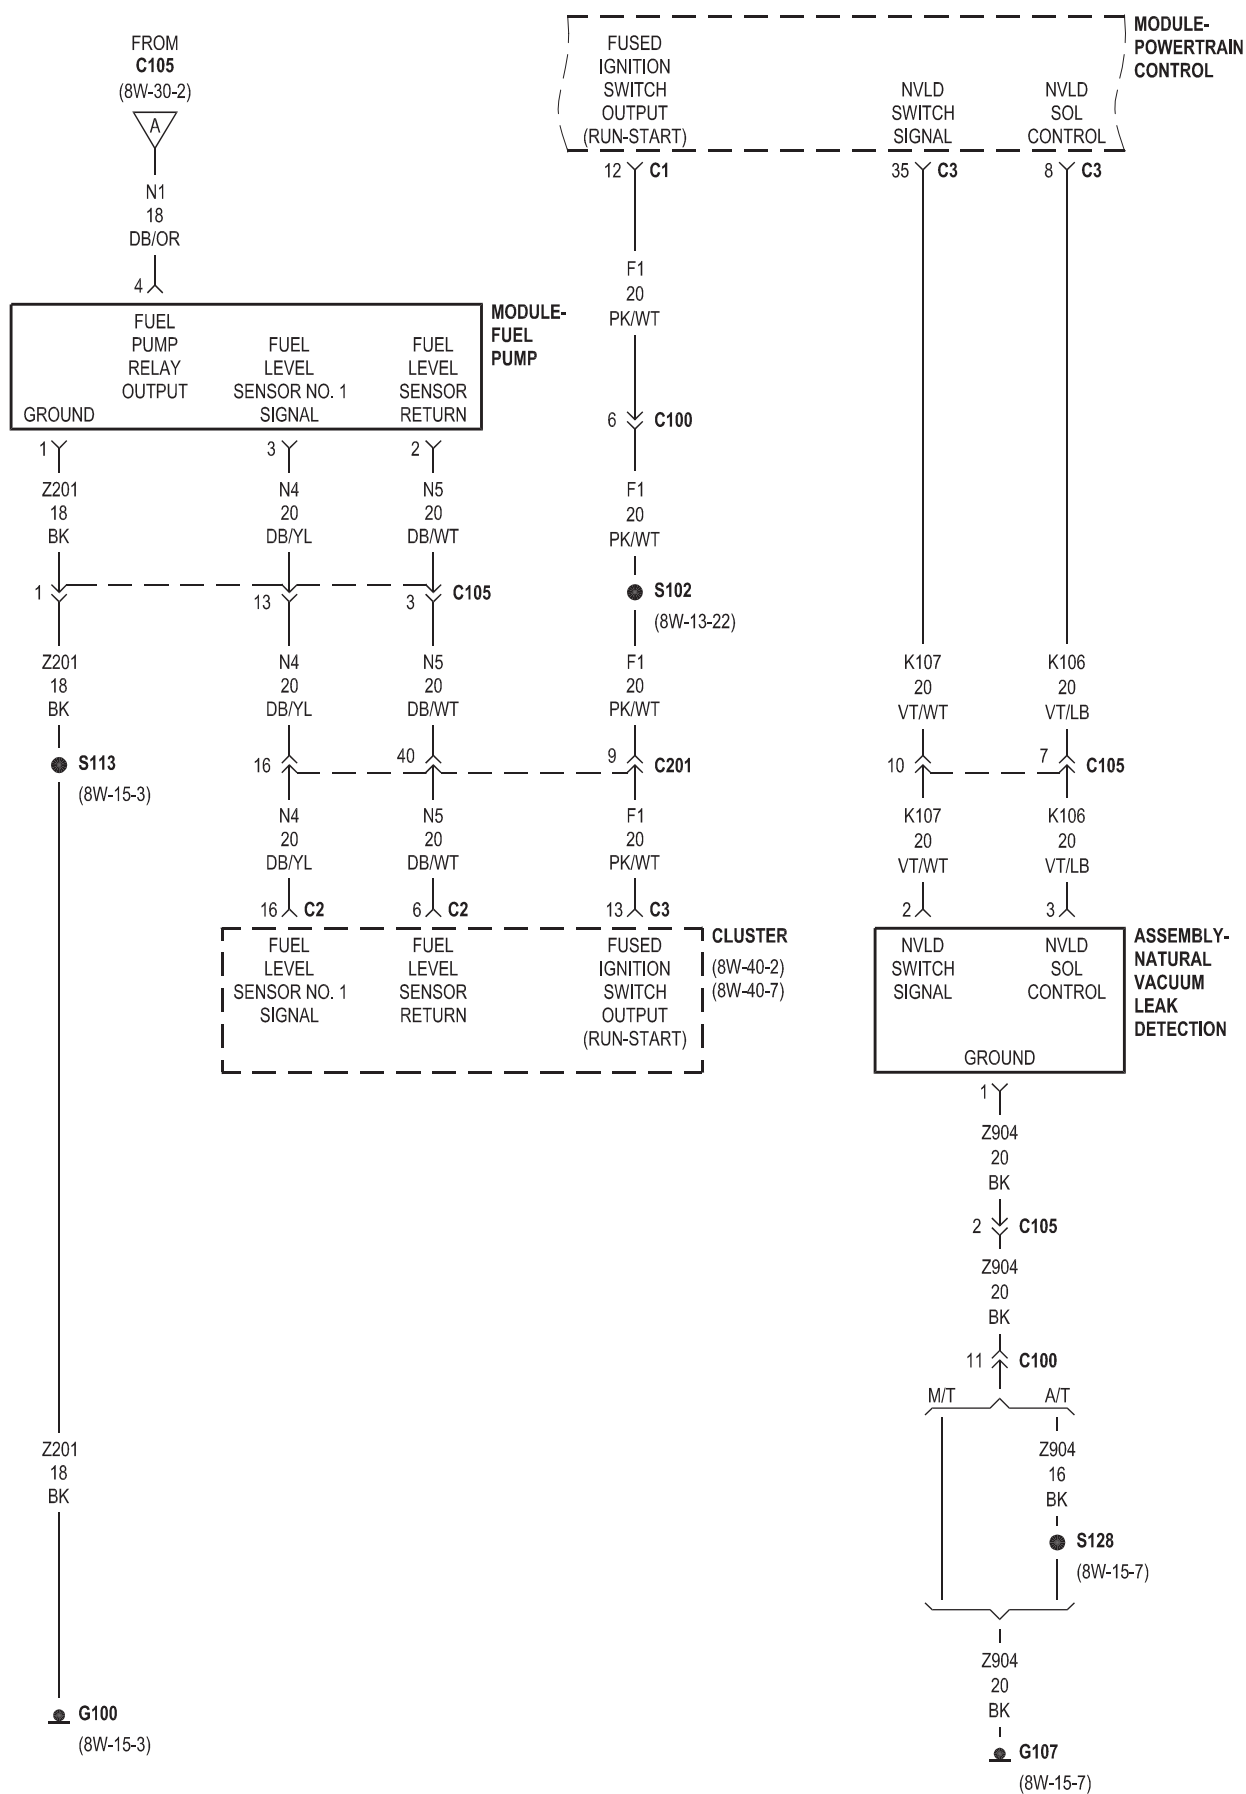

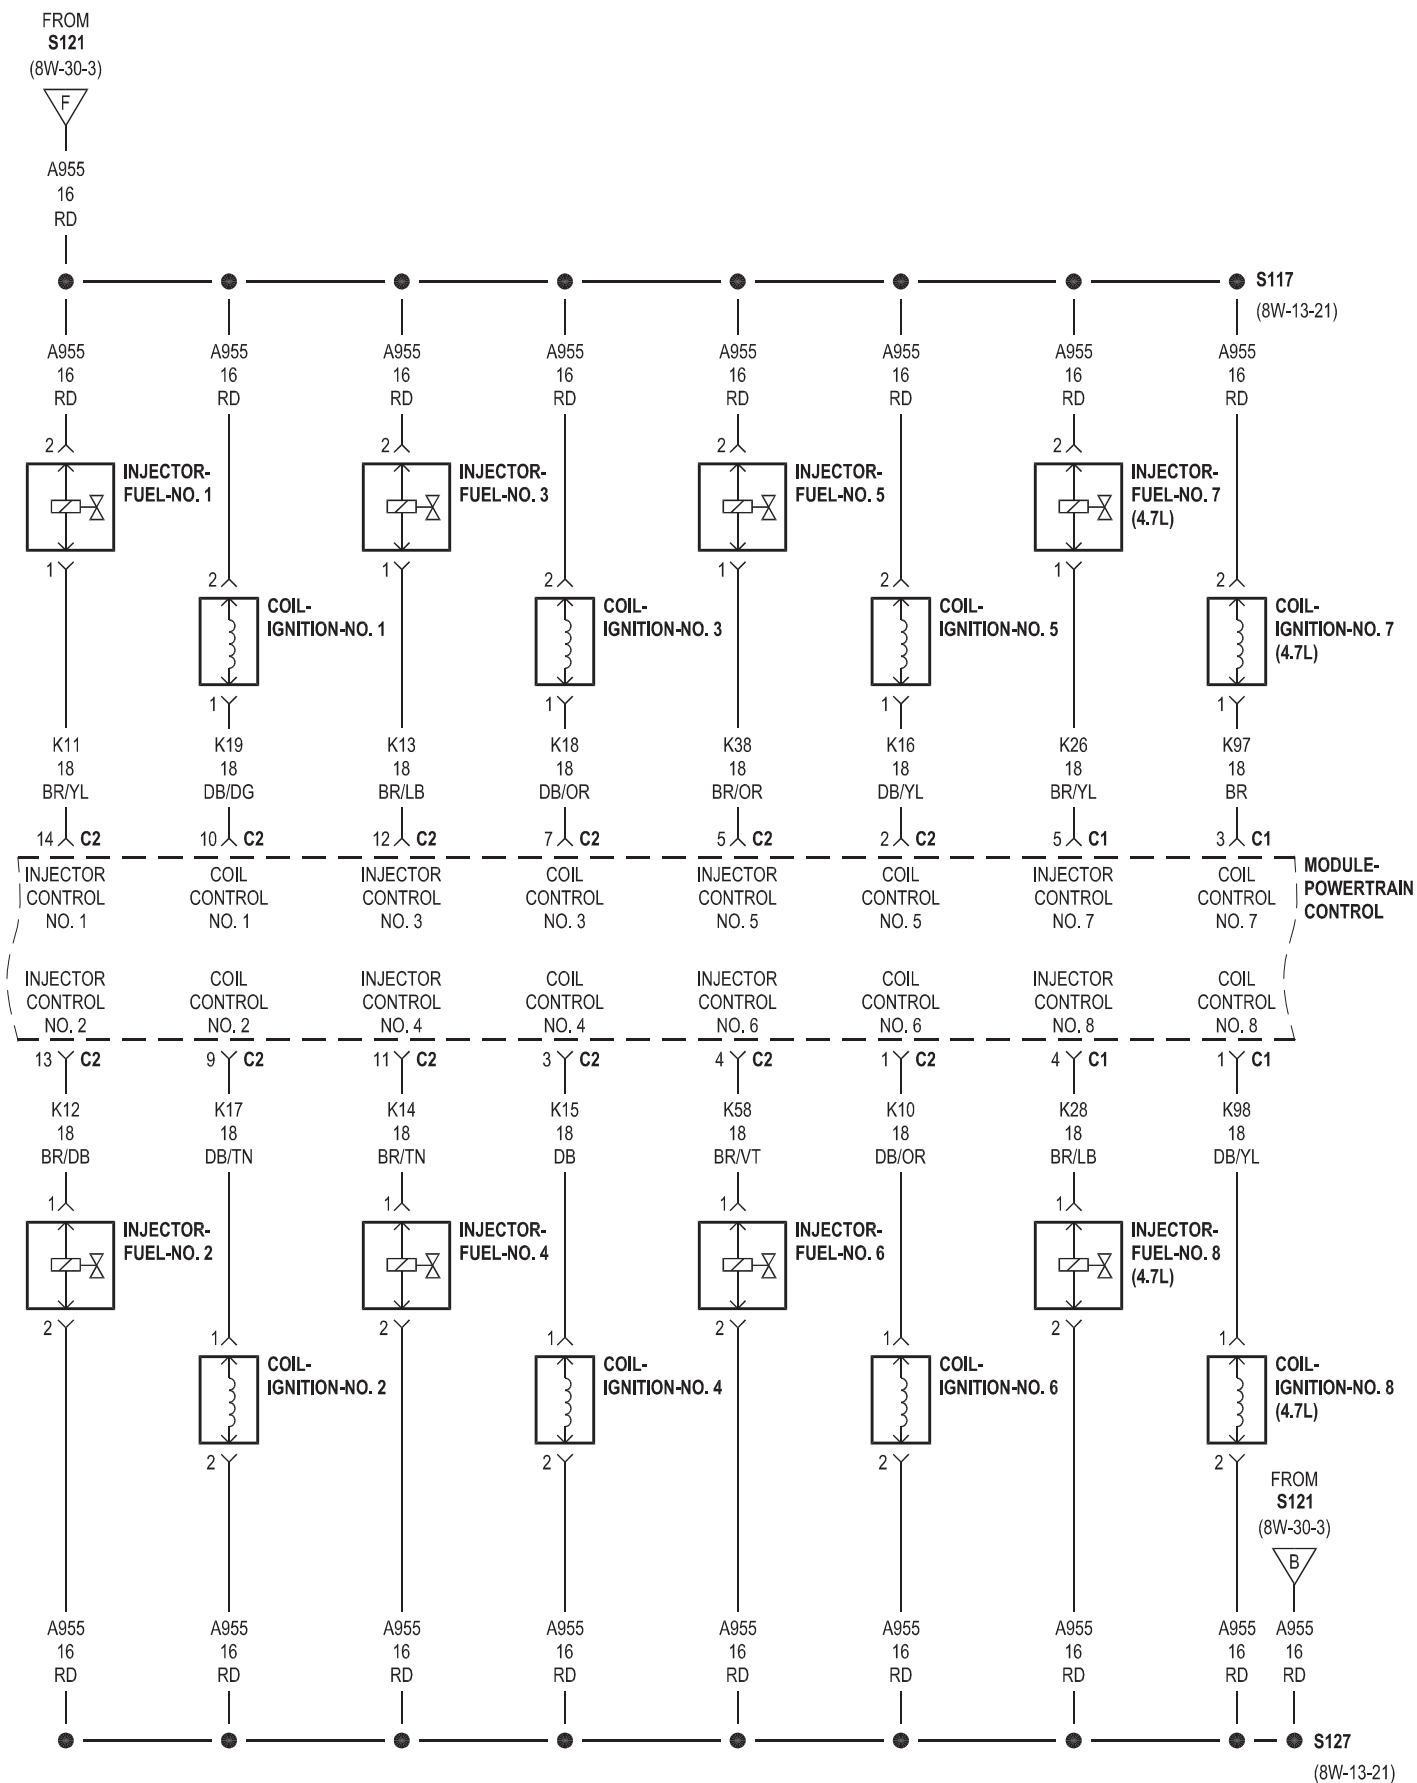

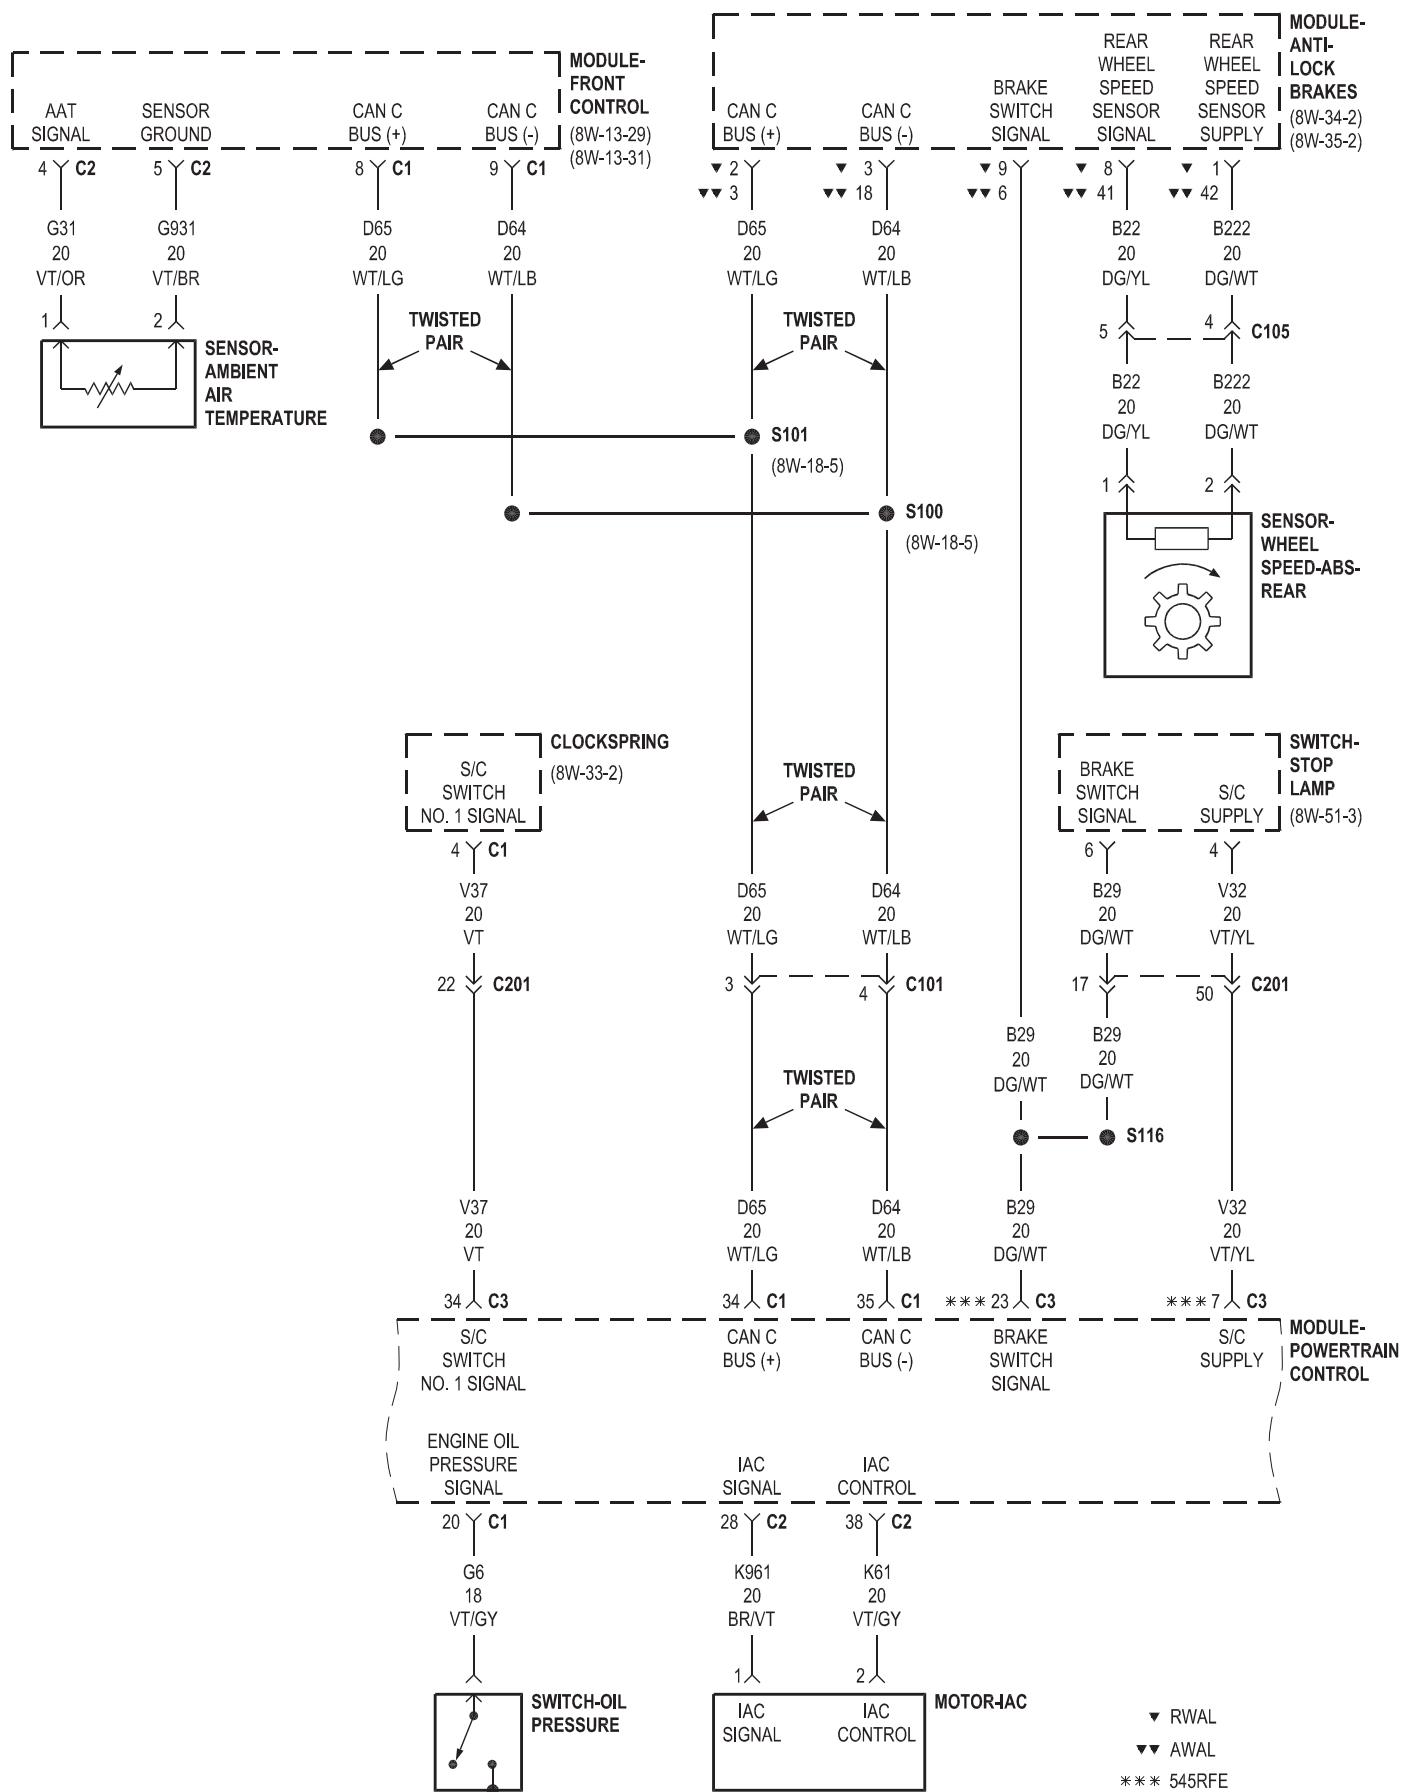

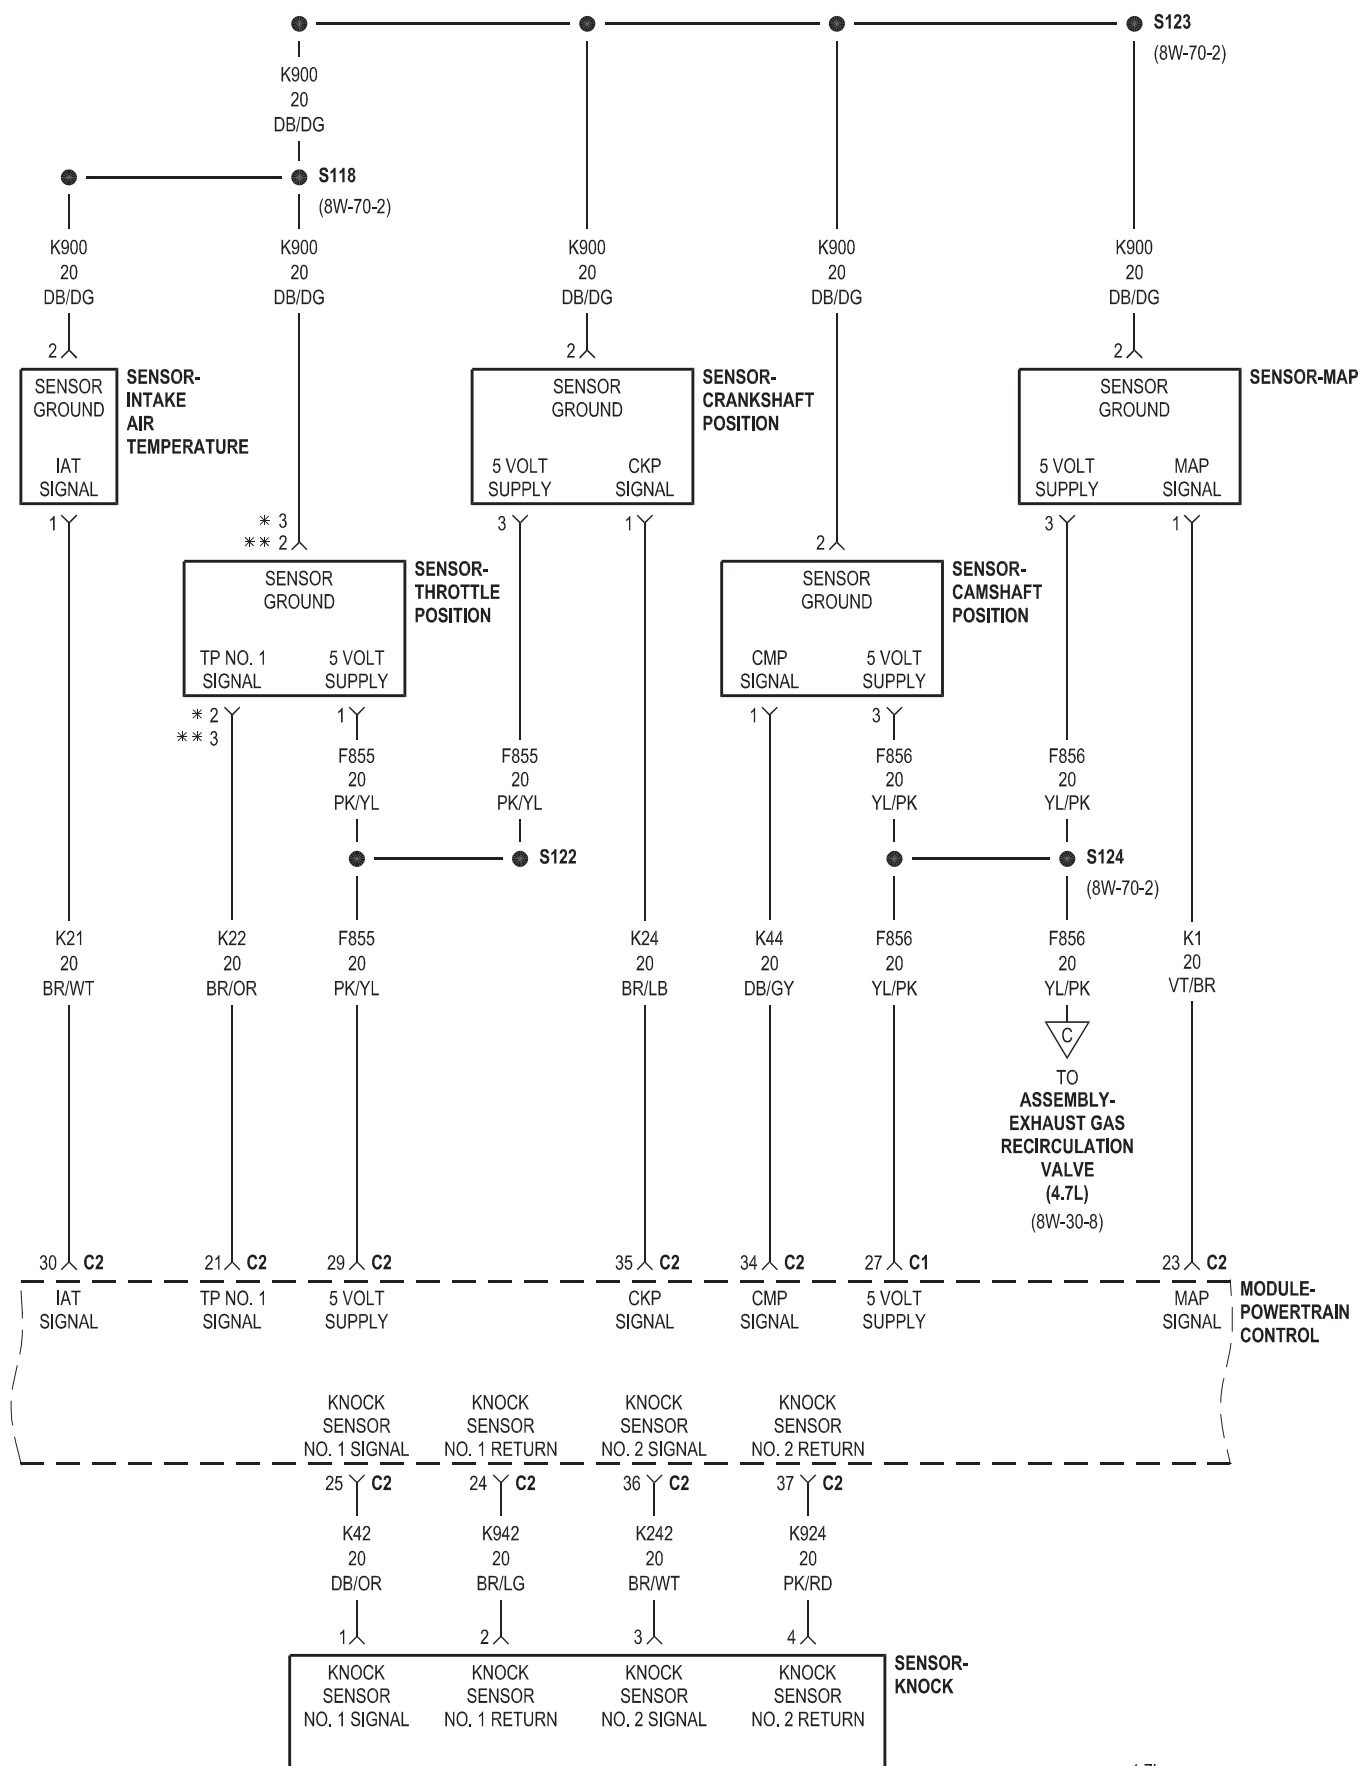

* 4.7L

** 3.7L

