

## 8W-18 BUS COMMUNICATIONS

<b>Component</b>	<b>Page</b>
Amplifier-Radio . . . . .	8W-18-3, 4
Cluster . . . . .	8W-18-3, 4
Control-A/C-Heater . . . . .	8W-18-3, 4
Data Link Connector . . . . .	8W-18-2
Fuse 14 . . . . .	8W-18-2
G200 . . . . .	8W-18-2
Module-Anti-Lock Brakes . . . . .	8W-18-5
Module-Electronic Overhead . . . . .	8W-18-4
Module-Front Control . . . . .	8W-18-2, 3, 4, 5

<b>Component</b>	<b>Page</b>
Module-Hands Free . . . . .	8W-18-3, 4
Module-Integrated Power . . . . .	8W-18-2
Module-Occupant Classification . . . . .	8W-18-3, 4
Module-Occupant Restraint Controller . .	8W-18-3, 4
Module-Powertrain Control . . . . .	8W-18-2, 5
Module-Sentry Key Remote Entry . . . . .	8W-18-3, 4
Radio . . . . .	8W-18-3, 4
Receiver-Satellite . . . . .	8W-18-3, 4









