




8W-40 INSTRUMENT CLUSTER


Component	Page
Clockspring	8W-40-4
Cluster	8W-40-2, 3, 4, 5, 6, 7
Control-A/C-Heater	8W-40-4
Fuse 6	8W-40-2
Fuse 8	8W-40-6
Fuse 20	8W-40-2
Fuse 25	8W-40-2
Fuse 36	8W-40-2
Fuse 38	8W-40-3
Fuse 55	8W-40-3
G200	8W-40-3
G301	8W-40-3
Lamp-Center Bezel	8W-40-4
Lamp-Dome-Front	8W-40-7
Lamp-High Mounted Stop	8W-40-7
Latch-Door-Left Front	8W-40-5
Latch-Door-Left Rear	8W-40-5
Latch-Door-Right Front	8W-40-5
Latch-Door-Right Rear	8W-40-5


Component	Page
Module-Front Control	8W-40-2, 7
Module-Fuel Pump	8W-40-7
Module-Integrated Power	8W-40-2, 3, 6
Sensor-Sun	8W-40-4
Solenoid-Brake Transmission Shift	8W-40-7
Switch-Headlamp	8W-40-6
Switch-Horn	8W-40-4
Switch-Ignition	8W-40-3
Switch-Multifunction	8W-40-4, 6
Switch-Parking Brake	8W-40-7
Switch-Remote Radio-Left	8W-40-4
Switch-Remote Radio-Right	8W-40-4
Switch-Seat Belt-Driver	8W-40-3
Switch-Transfer Case Selector	8W-40-4, 6
Switch-Window/Door Lock-Driver	8W-40-6
Switch-Window/Door Lock-Driver Express ..	8W-40-6
Switch-Window/Door Lock-Passenger	8W-40-6

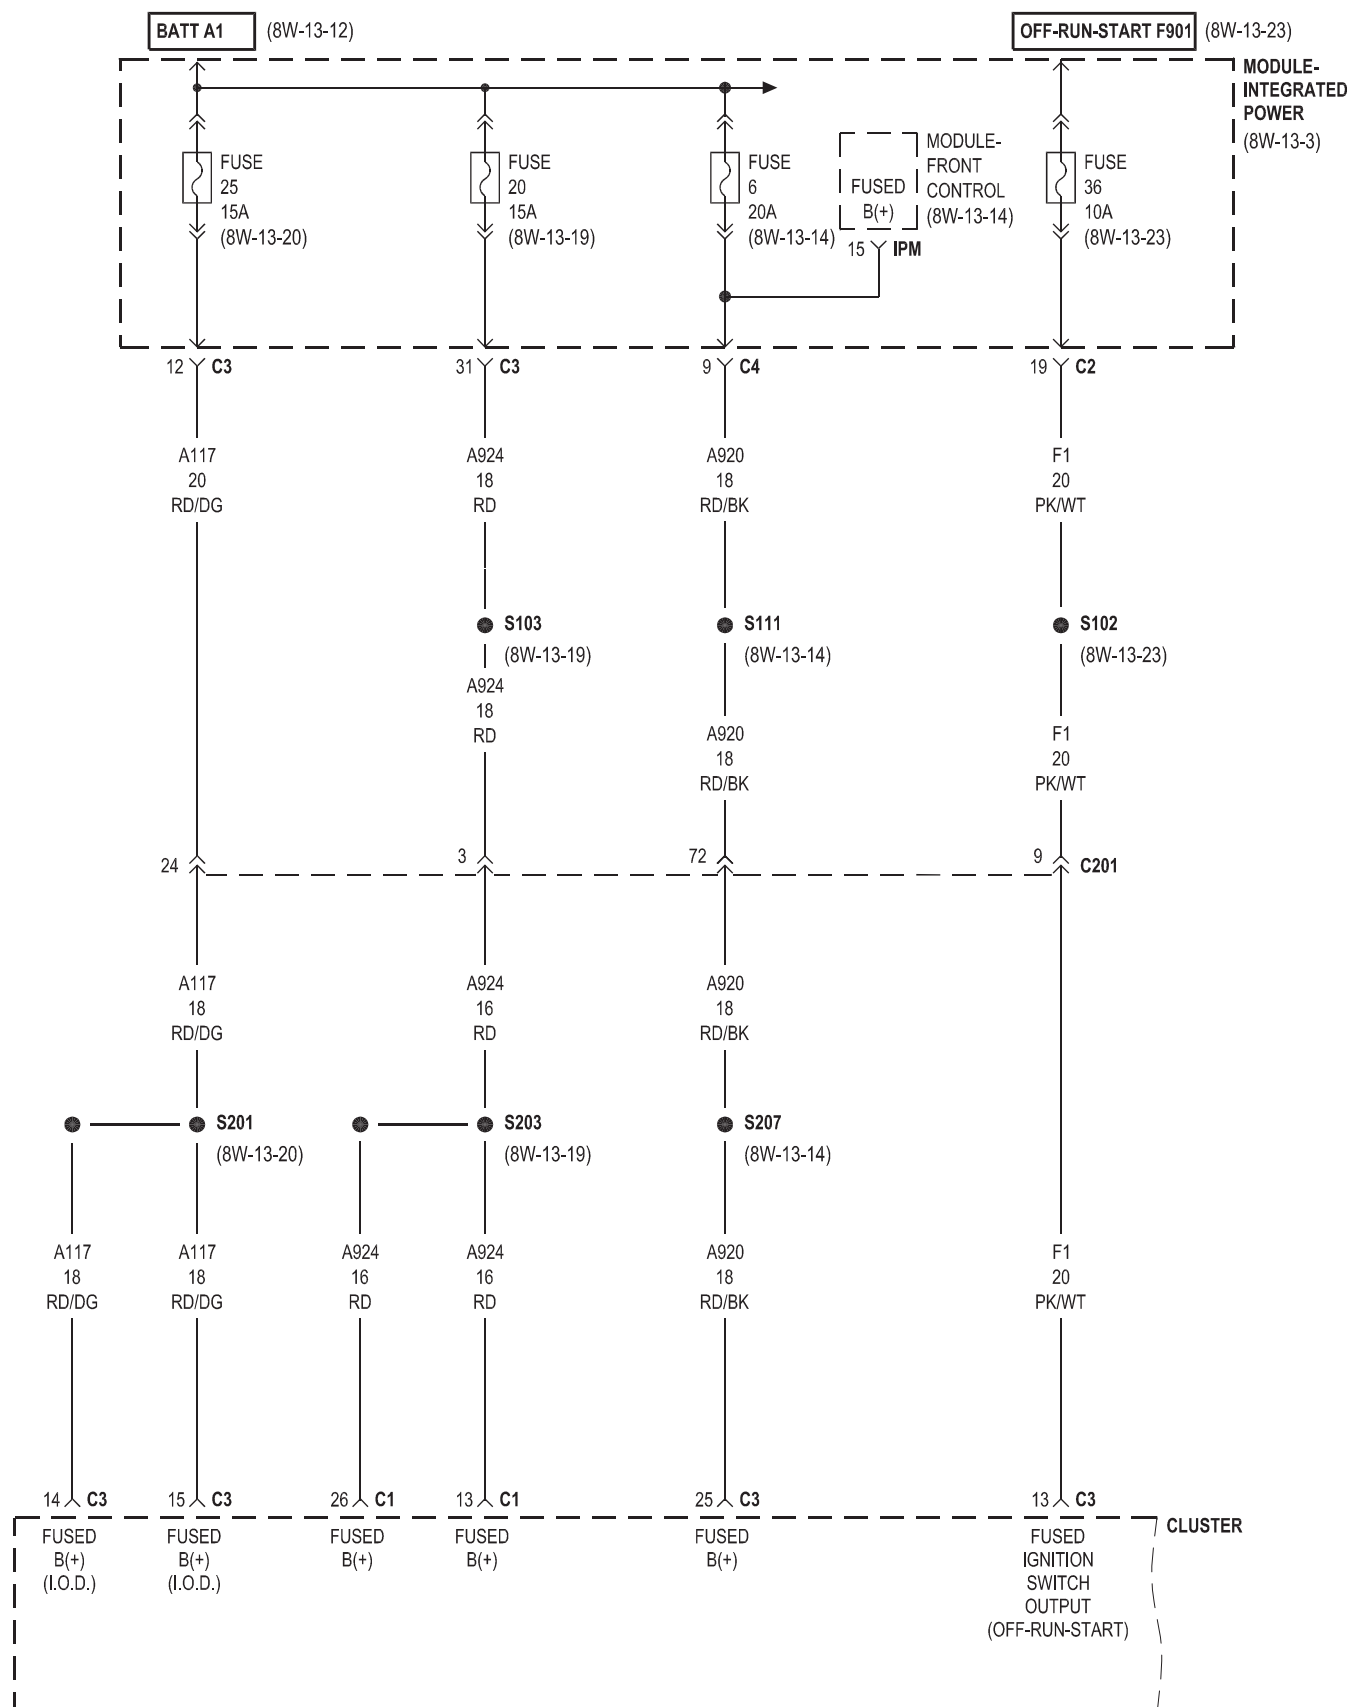

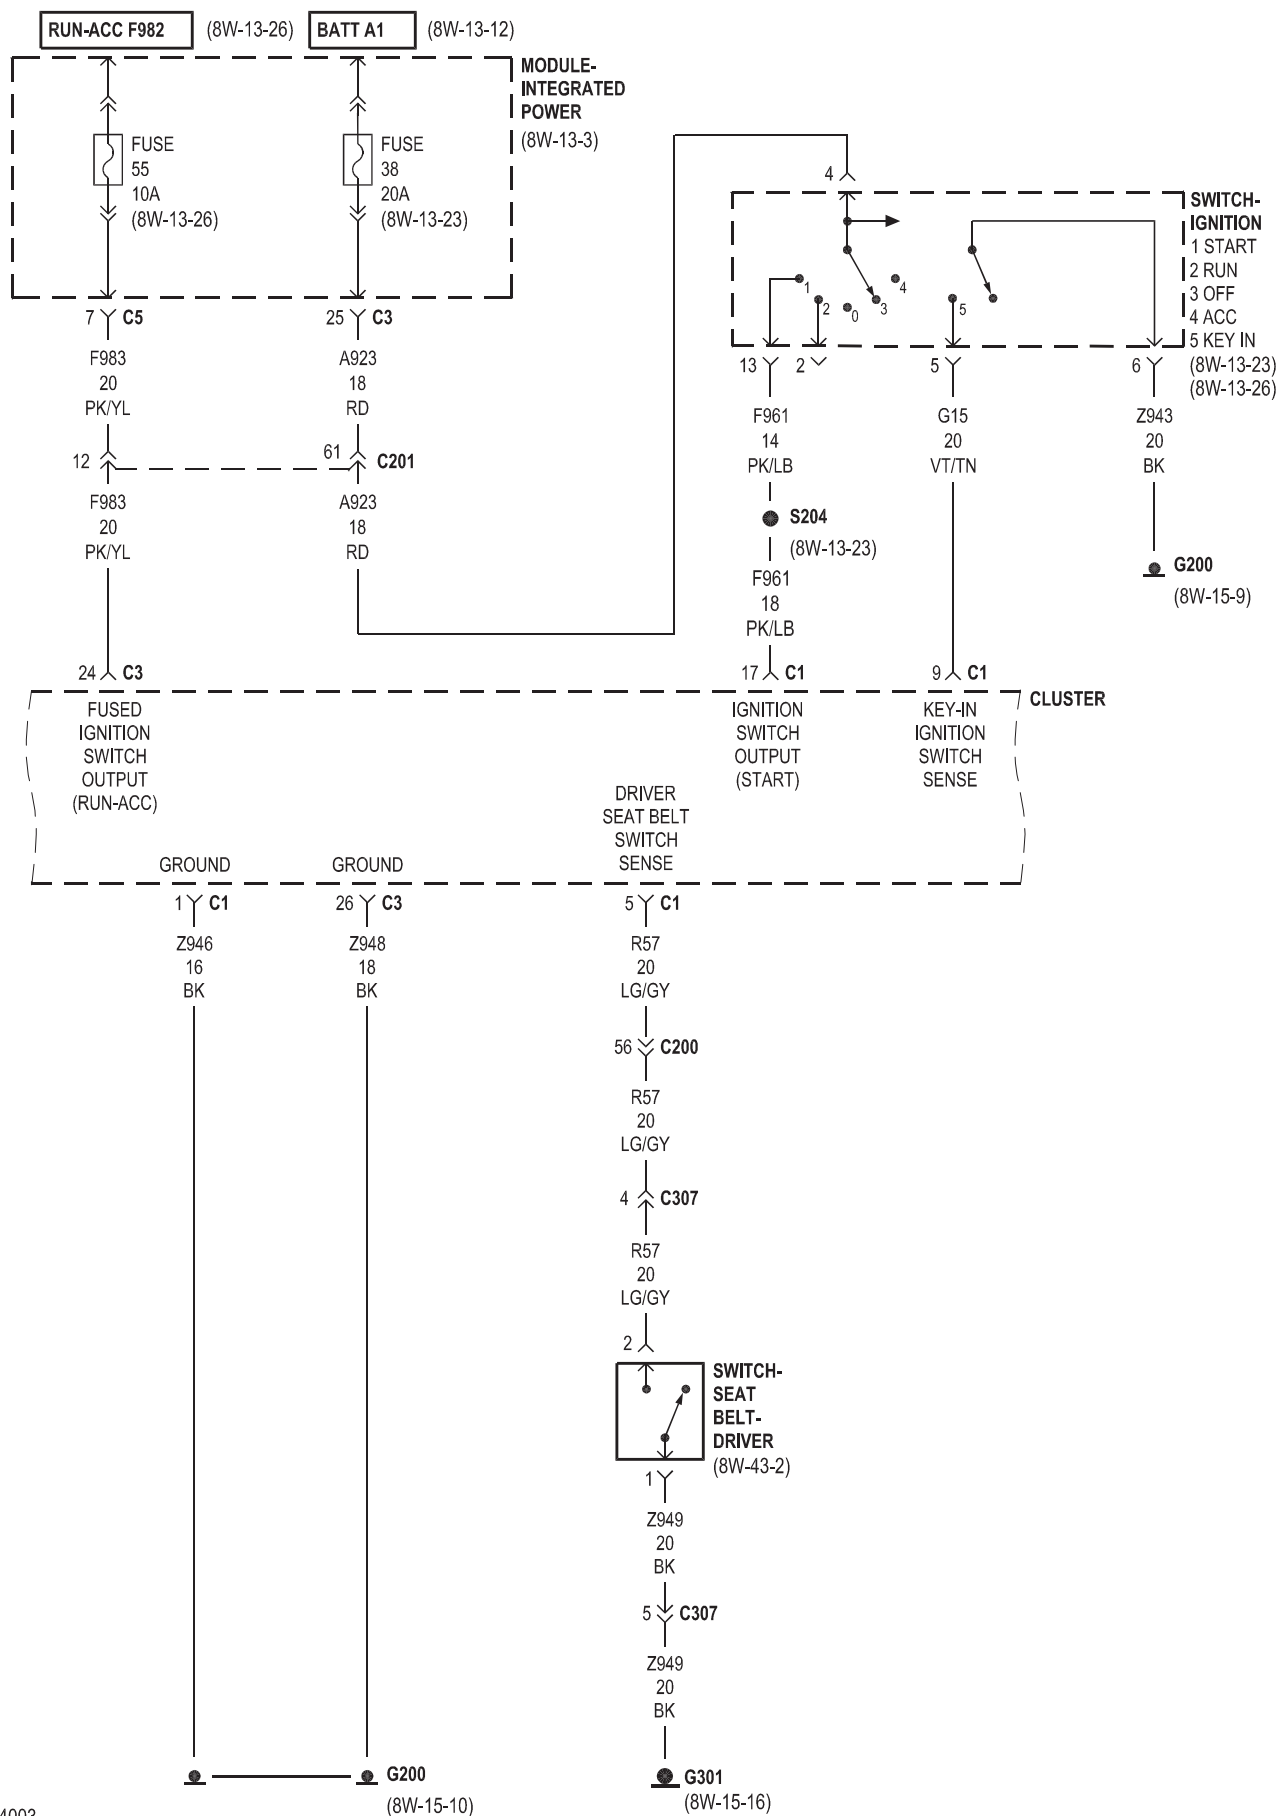

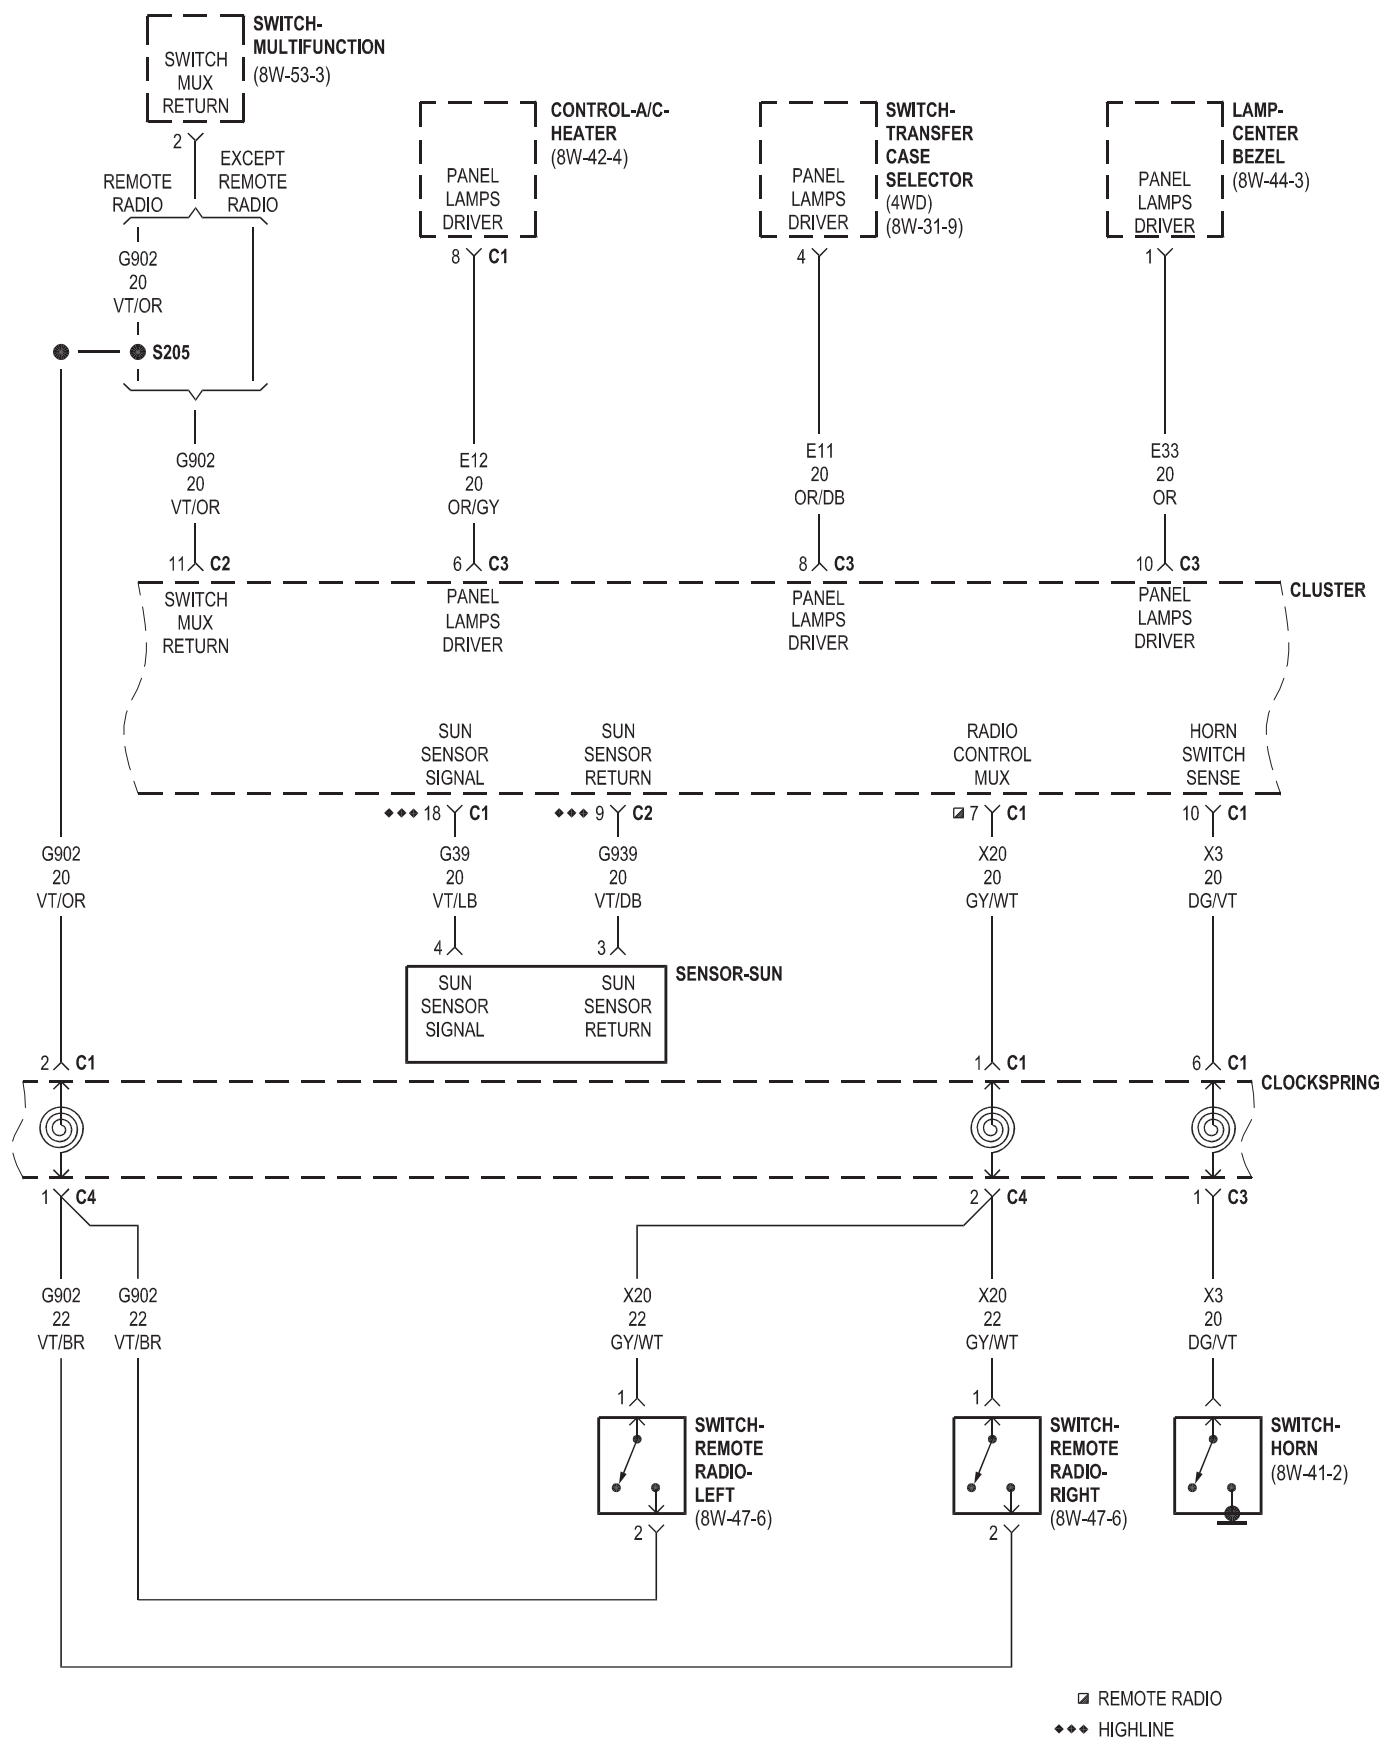

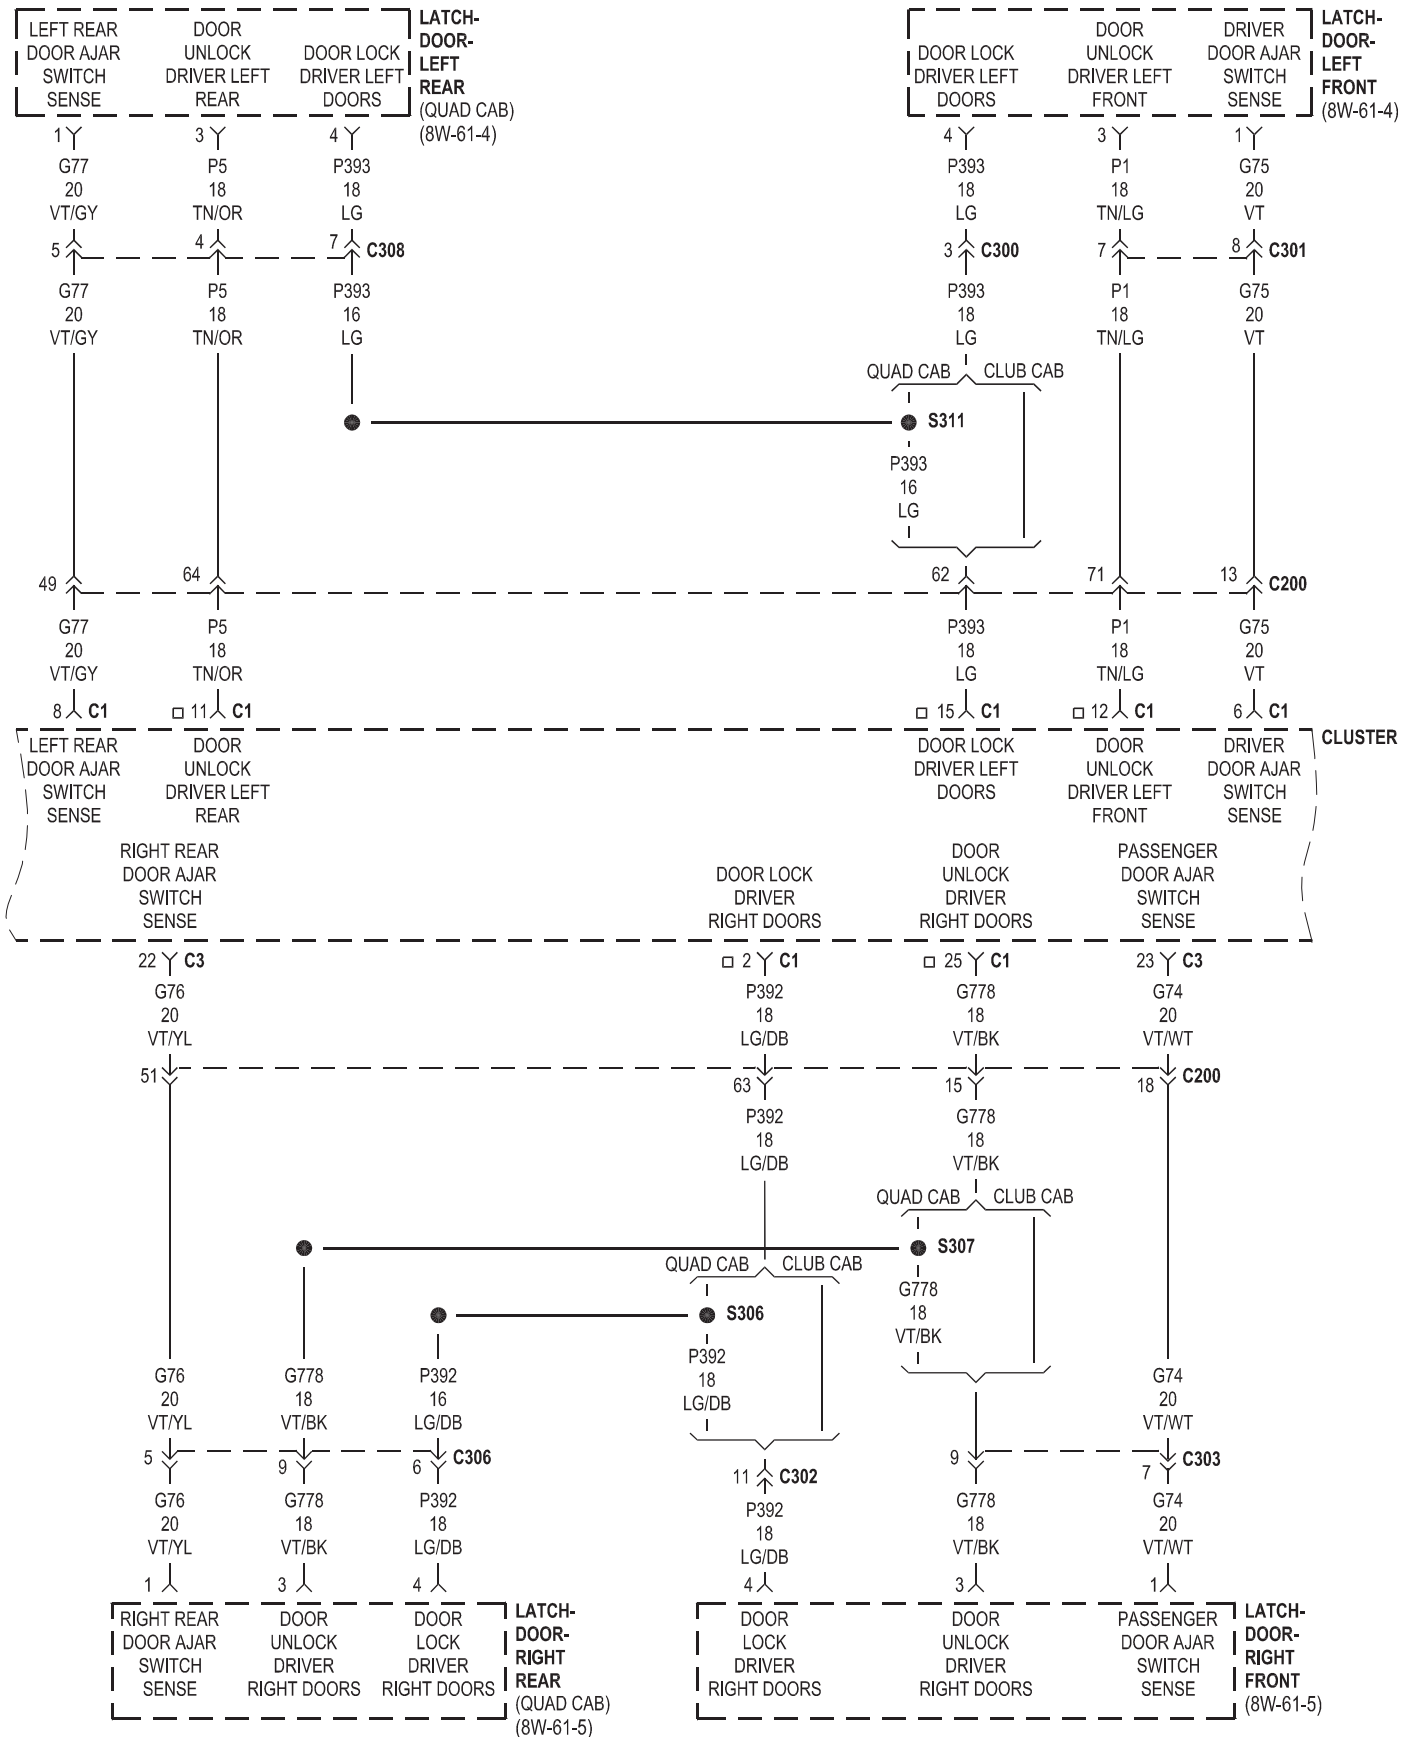

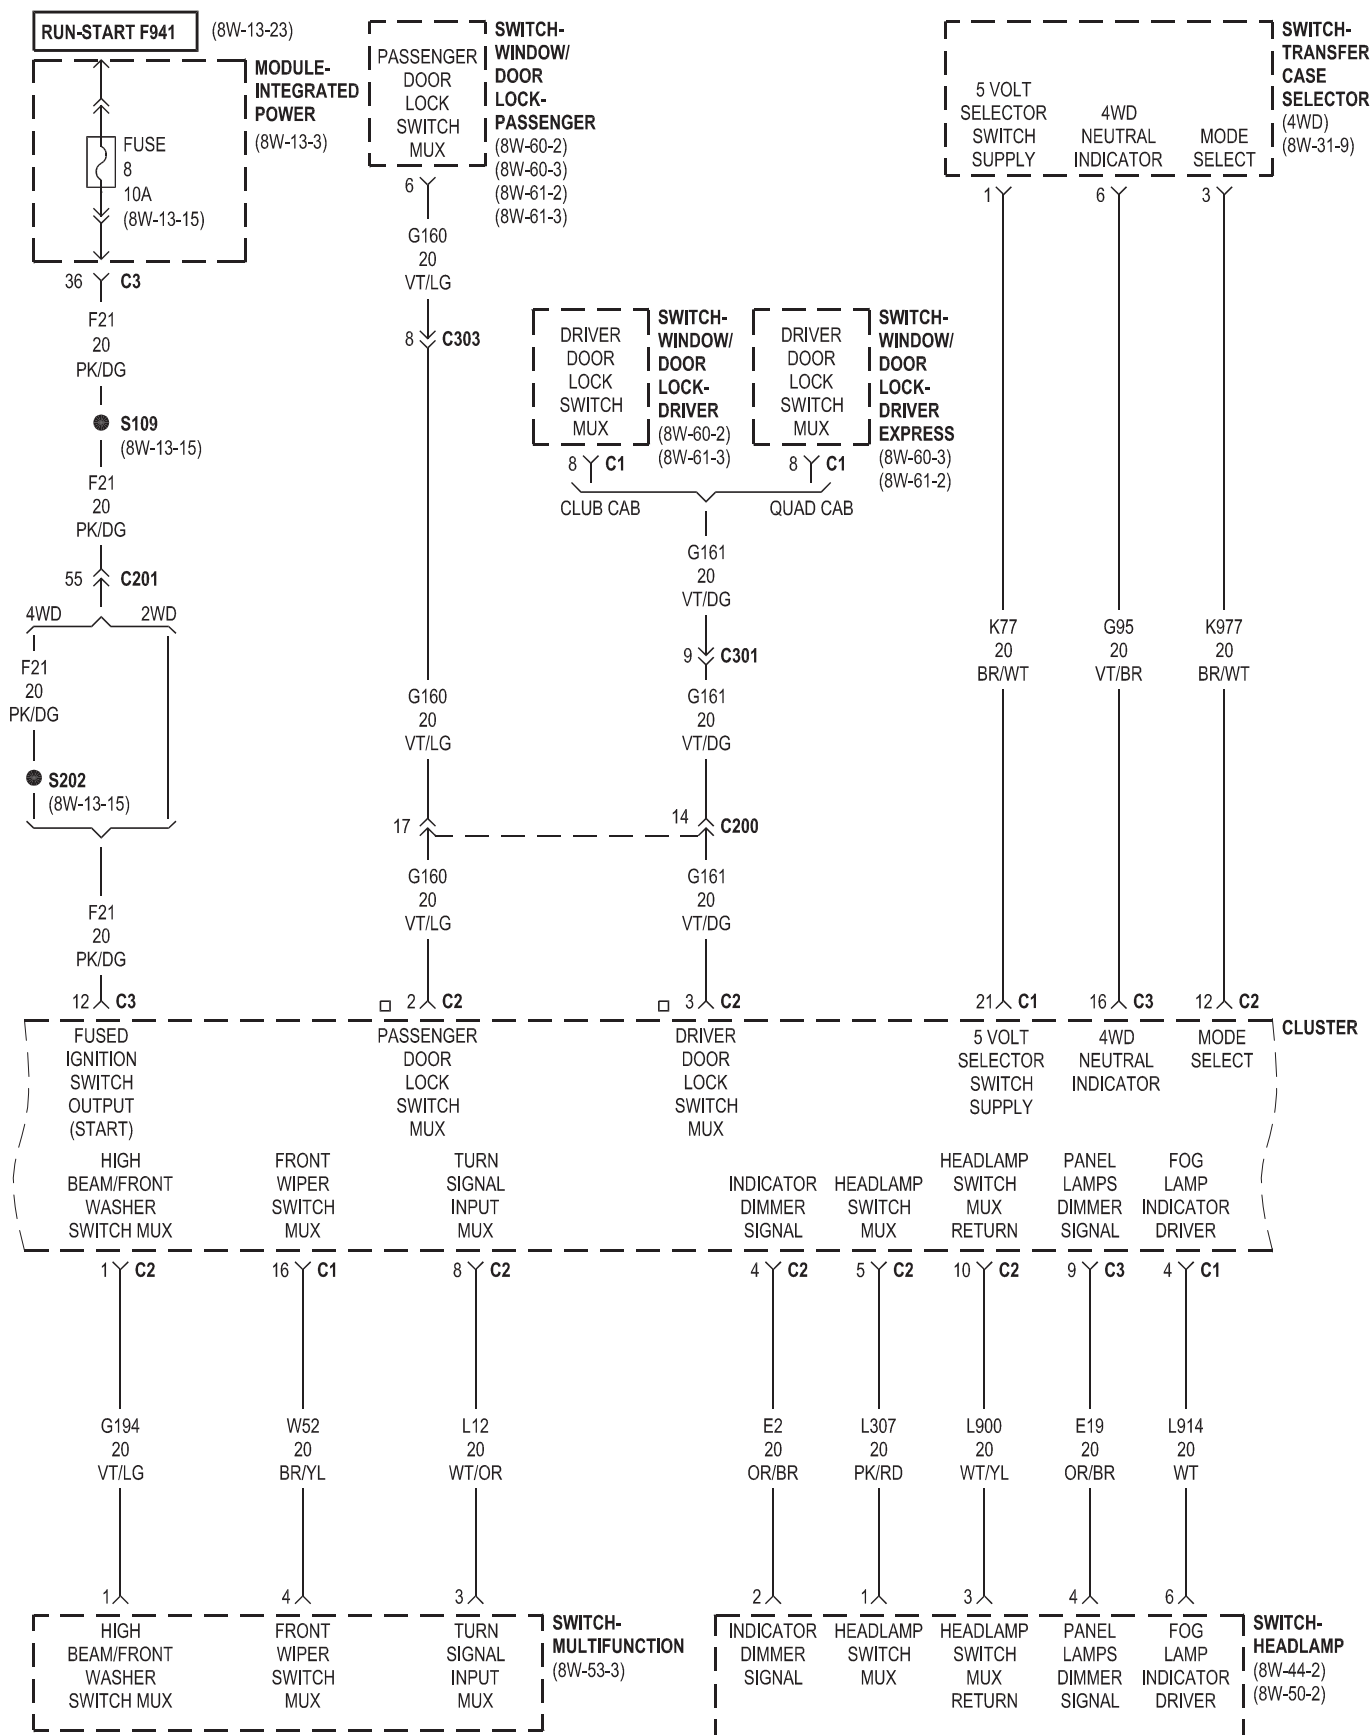

□ POWER CONVENIENCE

