

8W-21 STARTING SYSTEM

Component	Page	Component	Page
Battery	8W-21-2	Module-Integrated Power	8W-21-2
Fuse 37	8W-21-2	Module-Powertrain Control	8W-21-2
Fuse 39	8W-21-2	Relay-Starter	8W-21-2
G105	8W-21-2	Starter	8W-21-2
G106	8W-21-2		

