



## 8W-31 TRANSMISSION CONTROL SYSTEM


<b>Component</b>	<b>Page</b>	<b>Component</b>	<b>Page</b>
Assembly-Line Pressure Sensor/Variable Force Solenoid . . . . .	8W-31-2, 3	Module-Front Control . . . . .	8W-31-2, 10
Assembly-Shift Motor/Mode Sensor . . . . .	8W-31-10	Module-Integrated Power . . . . .	8W-31-2, 3, 5, 9, 10
Assembly-Transmission Solenoid/Pressure Switch . . . . .	8W-31-2, 4	Module-Powertrain Control . . . . .	8W-31-2, 3, 4, 5, 6, 7, 8, 9
Assembly-Transmission Solenoid/TRS . . . . .	8W-31-2, 5, 6, 7	Relay-Starter . . . . .	8W-31-3, 5
Cluster . . . . .	8W-31-9	Relay-Transmission Control . . . . .	8W-31-2
Fuse 8 . . . . .	8W-31-9	Sensor-Input Speed . . . . .	8W-31-8
Fuse 15 . . . . .	8W-31-2	Sensor-Line Pressure . . . . .	8W-31-5
Fuse 20 . . . . .	8W-31-10	Sensor-Output Speed . . . . .	8W-31-8
Fuse 37 . . . . .	8W-31-3, 5	Sensor-Transmission Range . . . . .	8W-31-2, 3
G101 . . . . .	8W-31-2	Solenoid-Brake Transmission Shift . . . . .	8W-31-9
G107 . . . . .	8W-31-2	Switch-Backup Lamp . . . . .	8W-31-2
G108 . . . . .	8W-31-2	Switch-Clutch Interlock . . . . .	8W-31-2
G200 . . . . .	8W-31-9	Switch-Tow/Haul Overdrive Off . . . . .	8W-31-9
G201 . . . . .	8W-31-9	Switch-Transfer Case Selector . . . . .	8W-31-9
		Transducer-A/C Pressure . . . . .	8W-31-10





## 42RLE

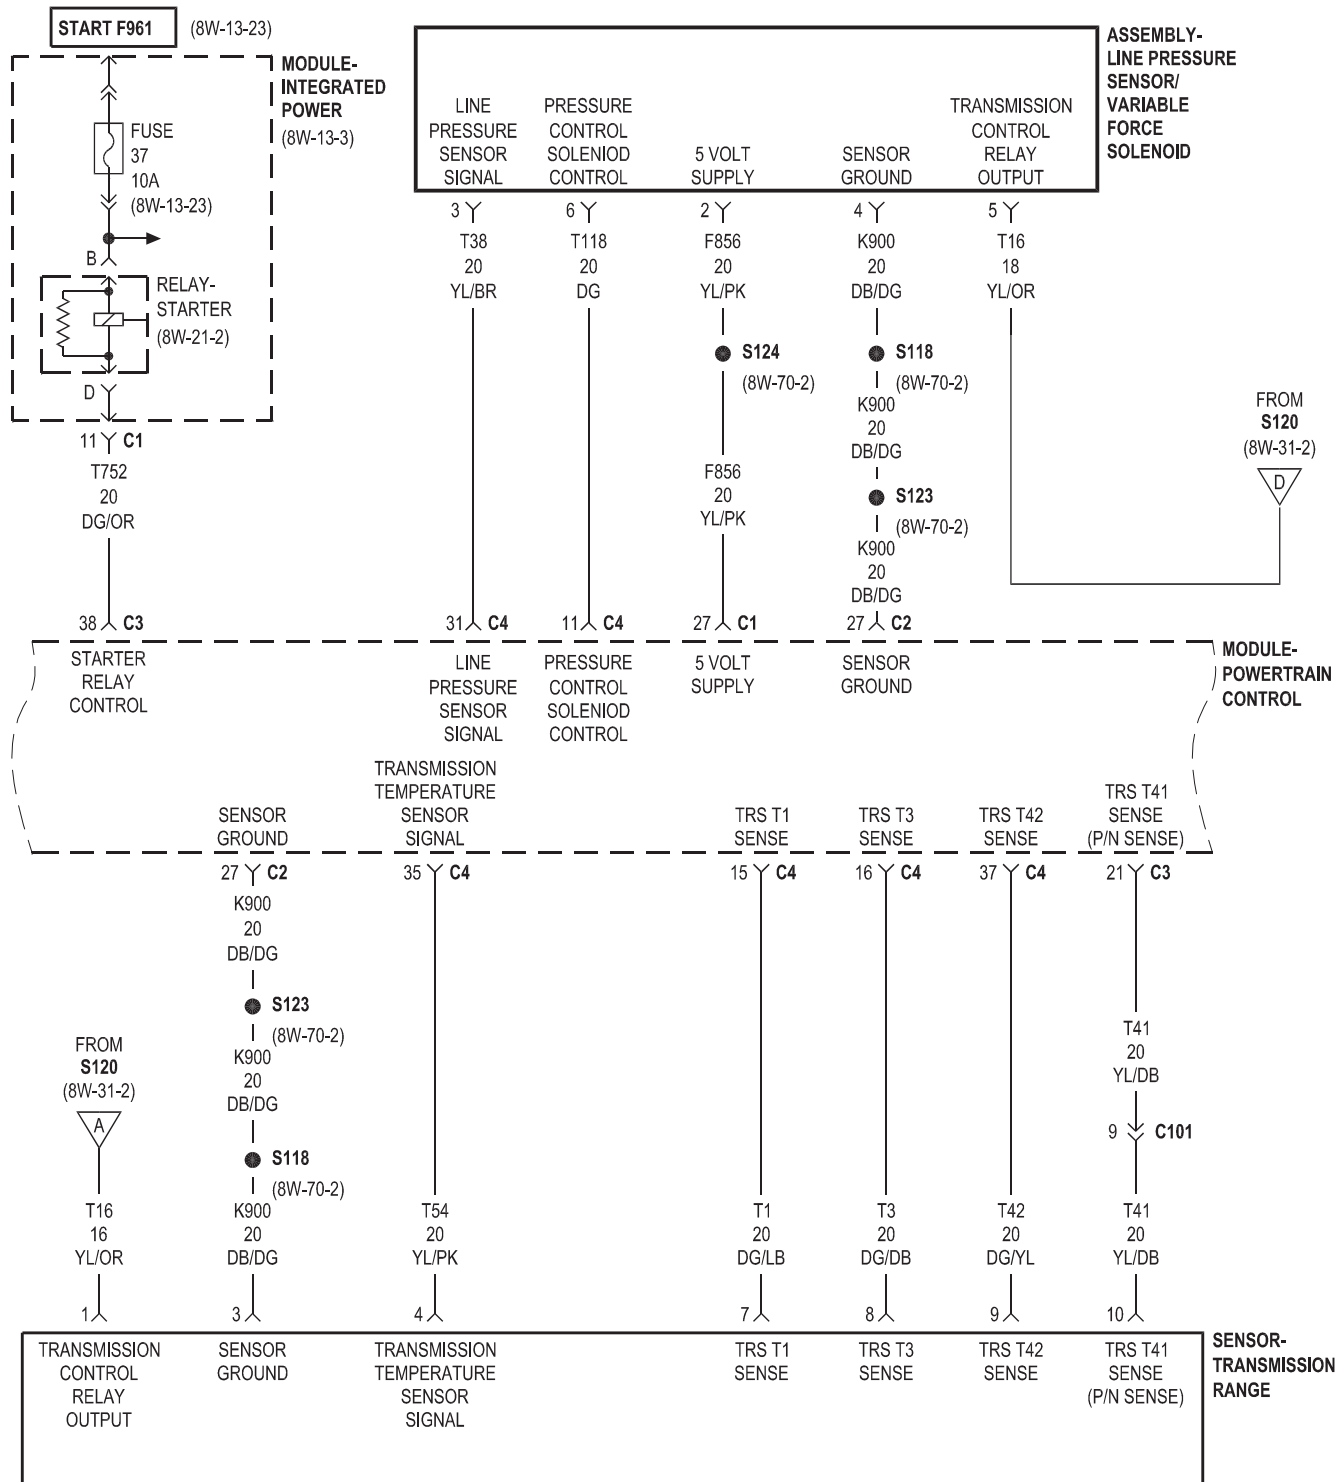

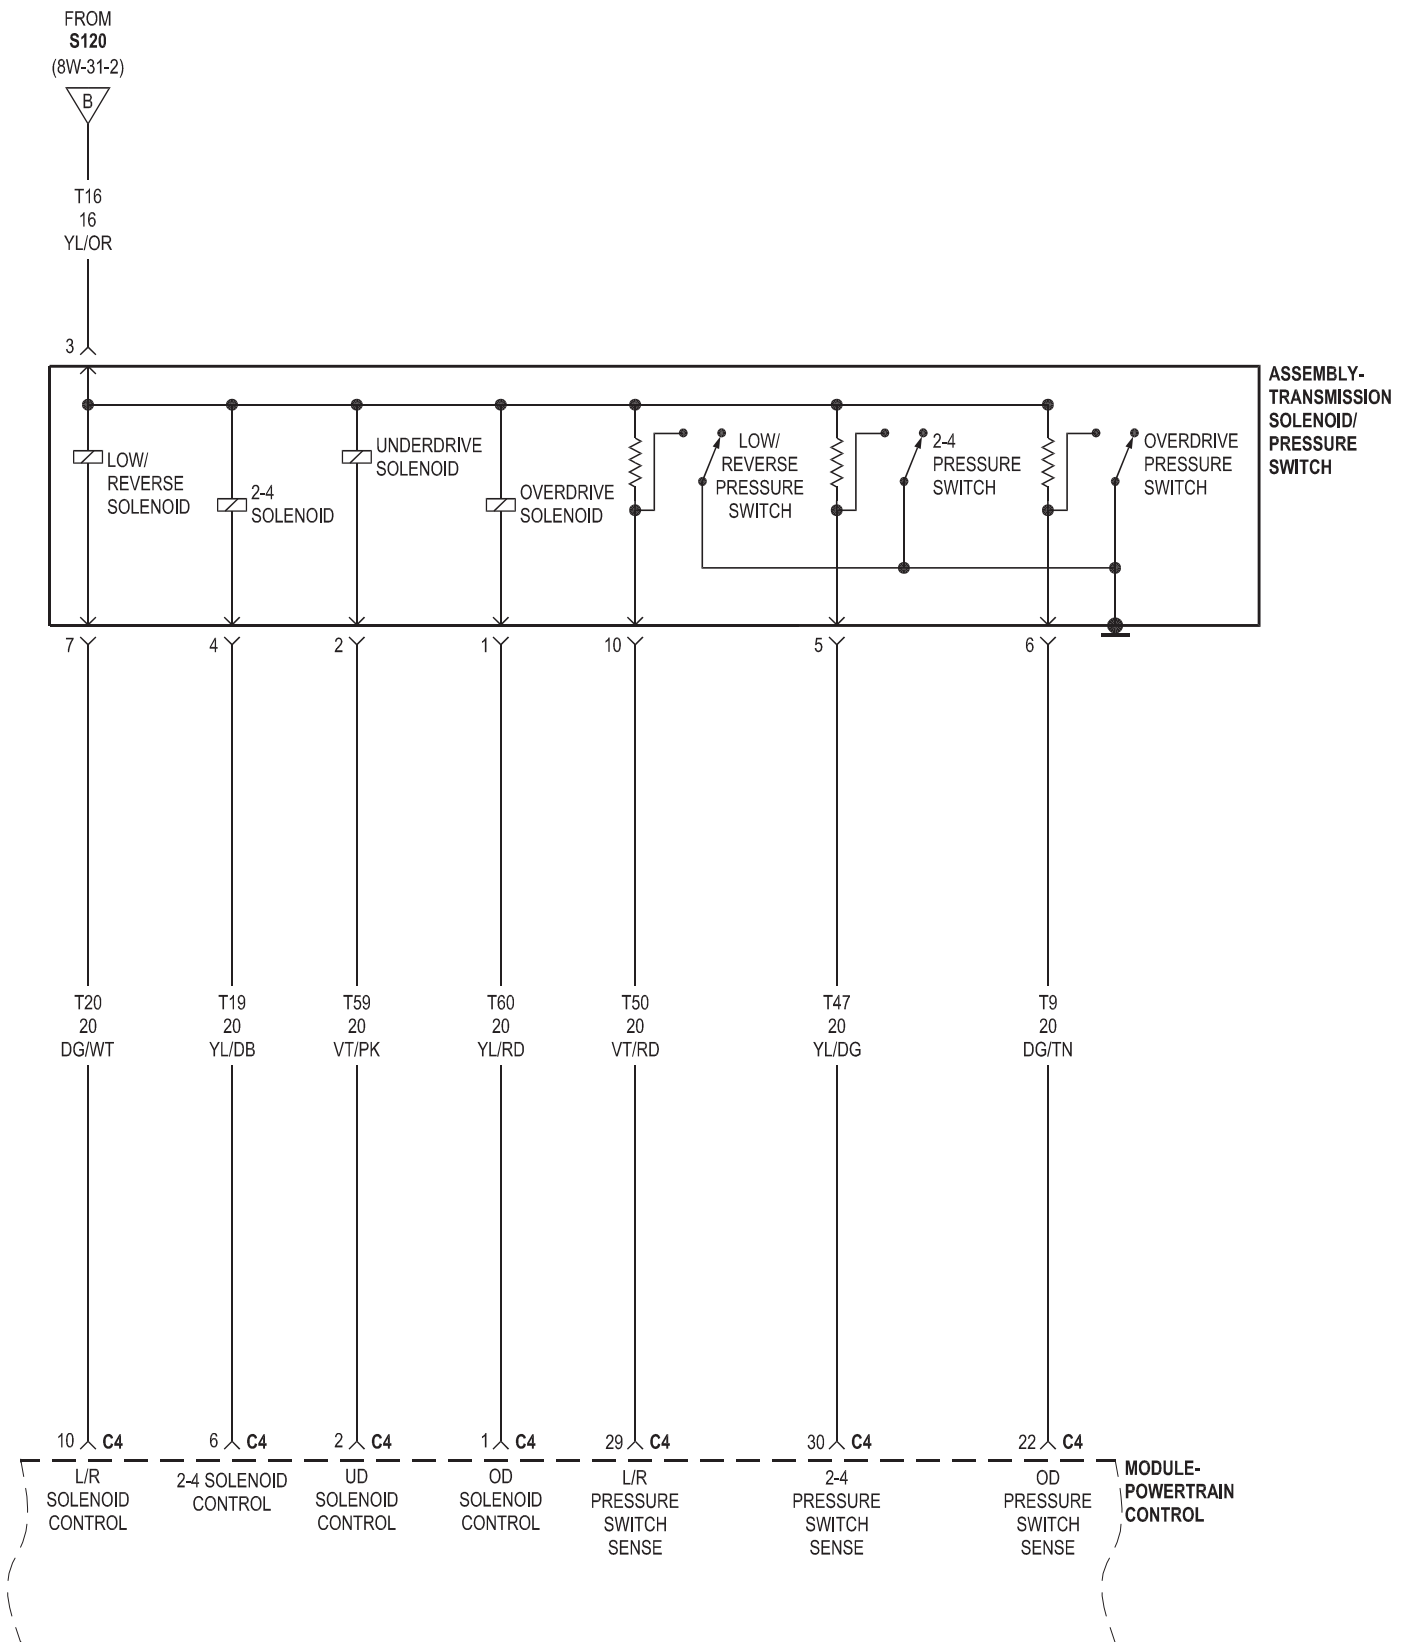

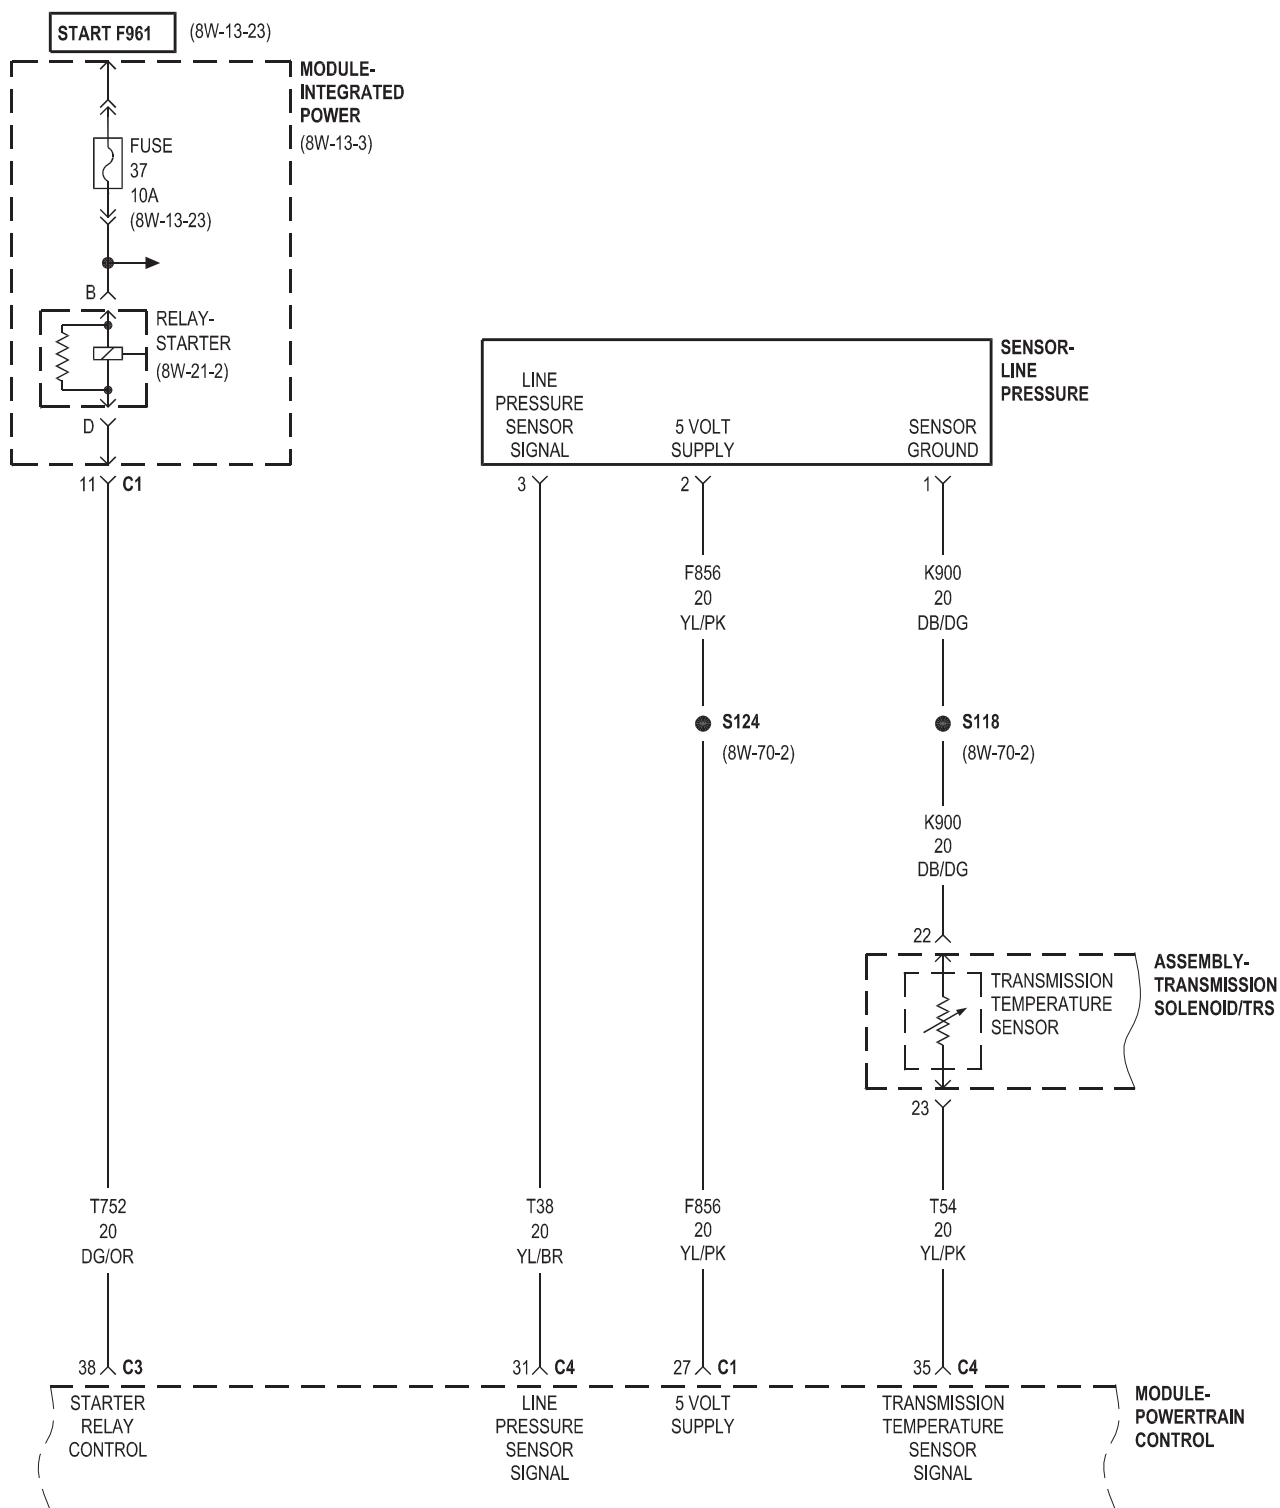

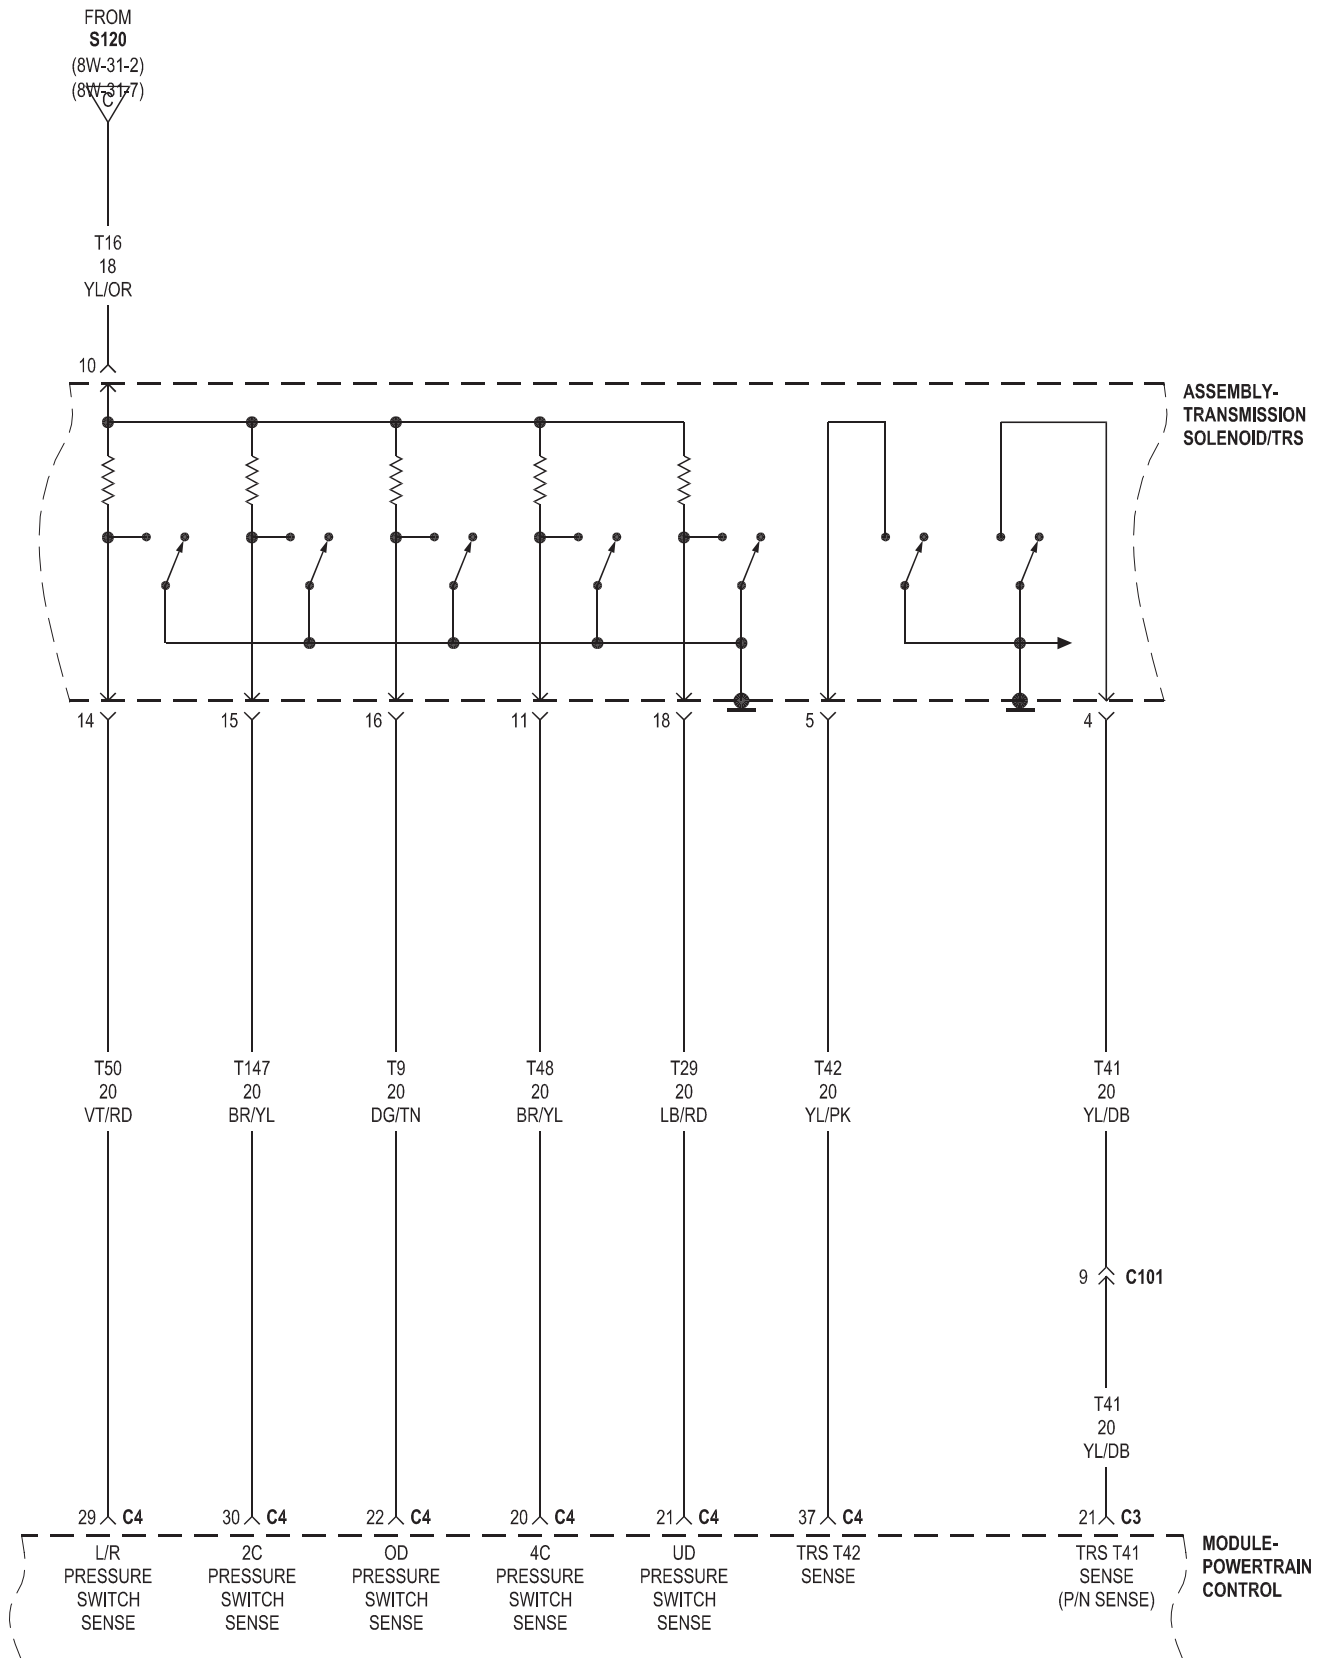

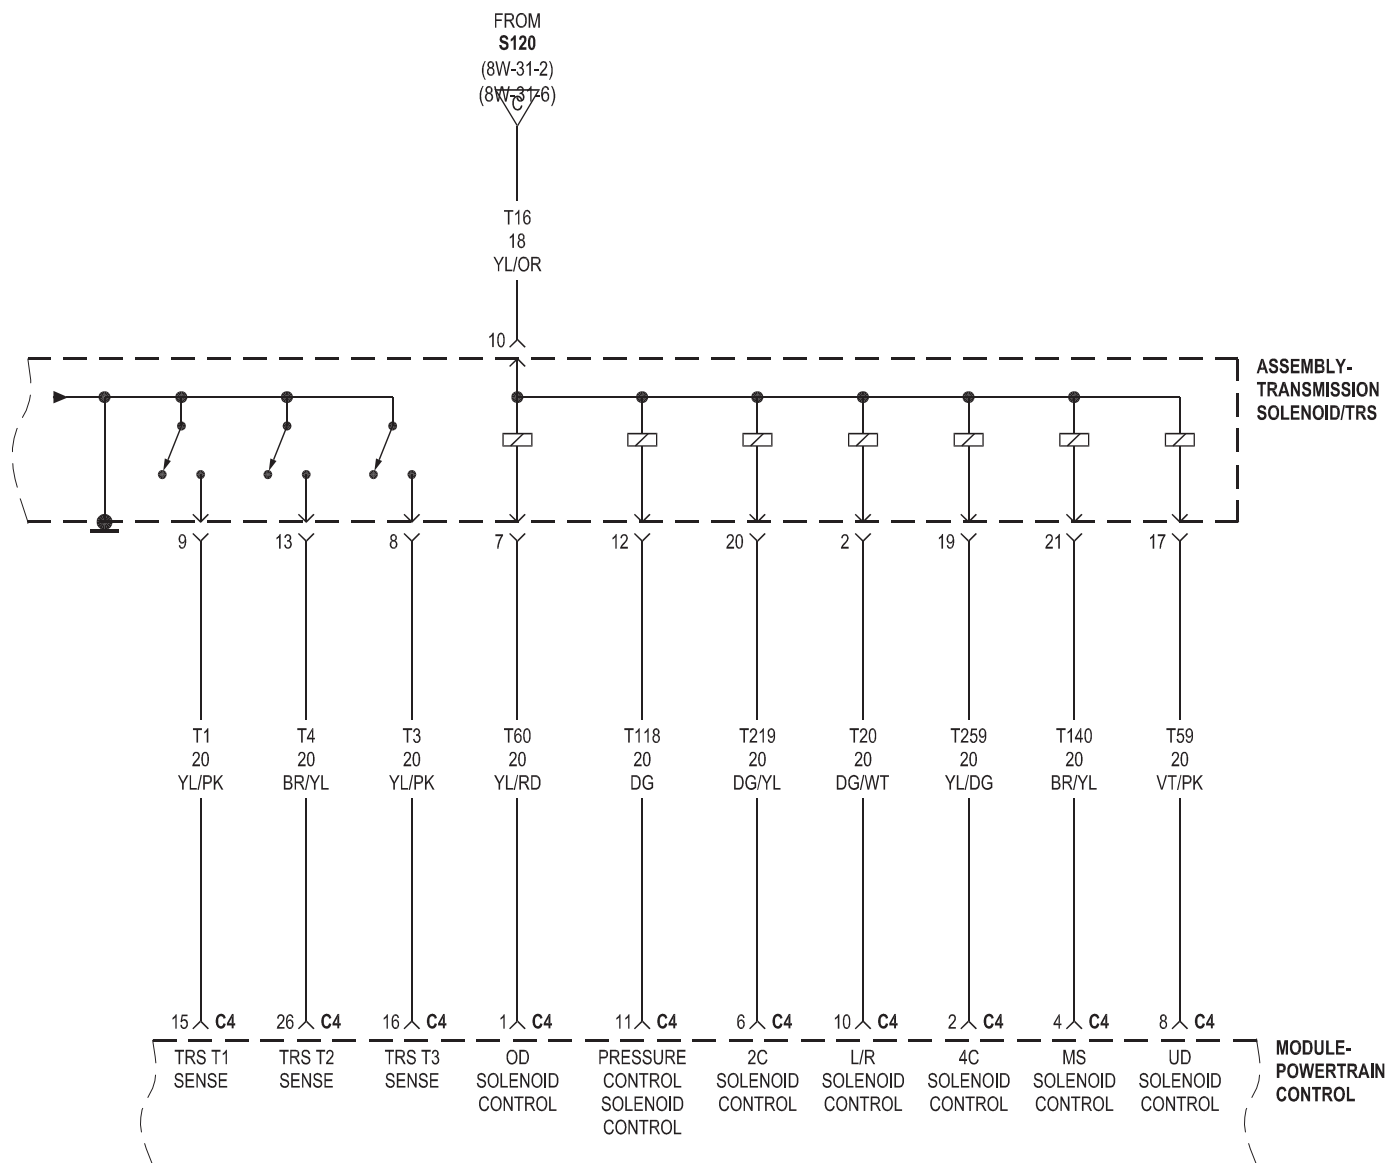

A/T

