





8W-31 TRANSMISSION CONTROL SYSTEM


Component	Page	Component	Page
Assembly-Line Pressure Sensor/Variable Force		Module-Front Control	8W-31-2, 10
Solenoid	8W-31-2, 3	Module-Integrated Power	8W-31-2, 3, 5, 9, 10
Assembly-Shift Motor/Mode Sensor	8W-31-10	Module-Powertrain	
Assembly-Transmission Solenoid/Pressure		Control	8W-31-2, 3, 4, 5, 6, 7, 8, 9
Switch	8W-31-2, 4	Relay-Starter	8W-31-3, 5
Assembly-Transmission		Relay-Transmission Control	8W-31-2
Solenoid/TRS	8W-31-2, 5, 6, 7	Sensor-Input Speed	8W-31-8
Cluster	8W-31-9	Sensor-Line Pressure	8W-31-5
Fuse 8	8W-31-9	Sensor-Output Speed	8W-31-8
Fuse 15	8W-31-2	Sensor-Transmission Range	8W-31-2, 3
Fuse 20	8W-31-10	Solenoid-Brake Transmission Shift	8W-31-9
G101	8W-31-2	Switch-Backup Lamp	8W-31-2
G107	8W-31-2	Switch-Clutch Interlock	8W-31-2
G108	8W-31-2	Switch-Tow/Haul Overdrive Off	8W-31-9
G200	8W-31-9	Switch-Transfer Case Selector	8W-31-9
G201	8W-31-9	Transducer-A/C Pressure	8W-31-10

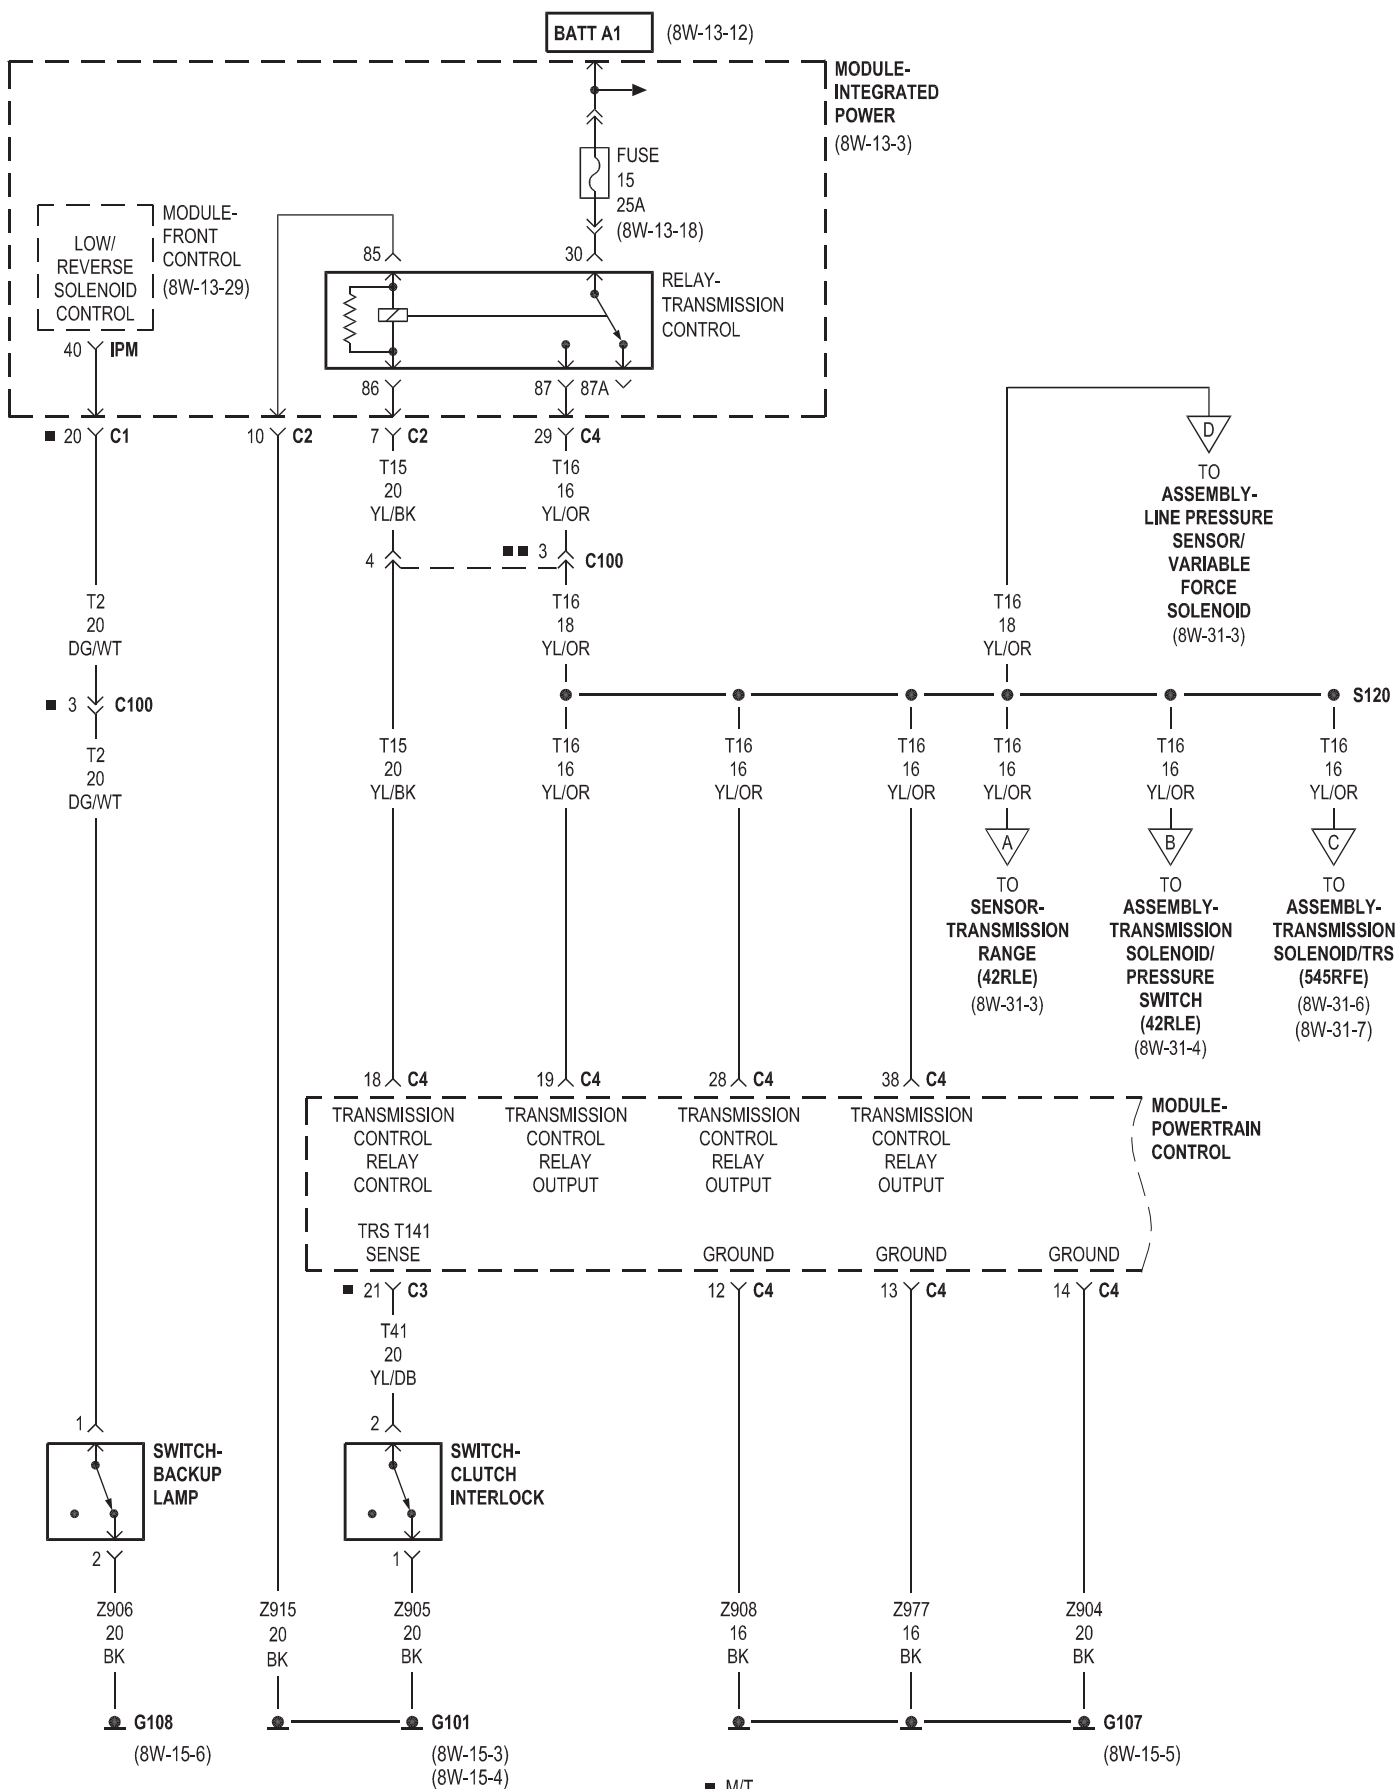


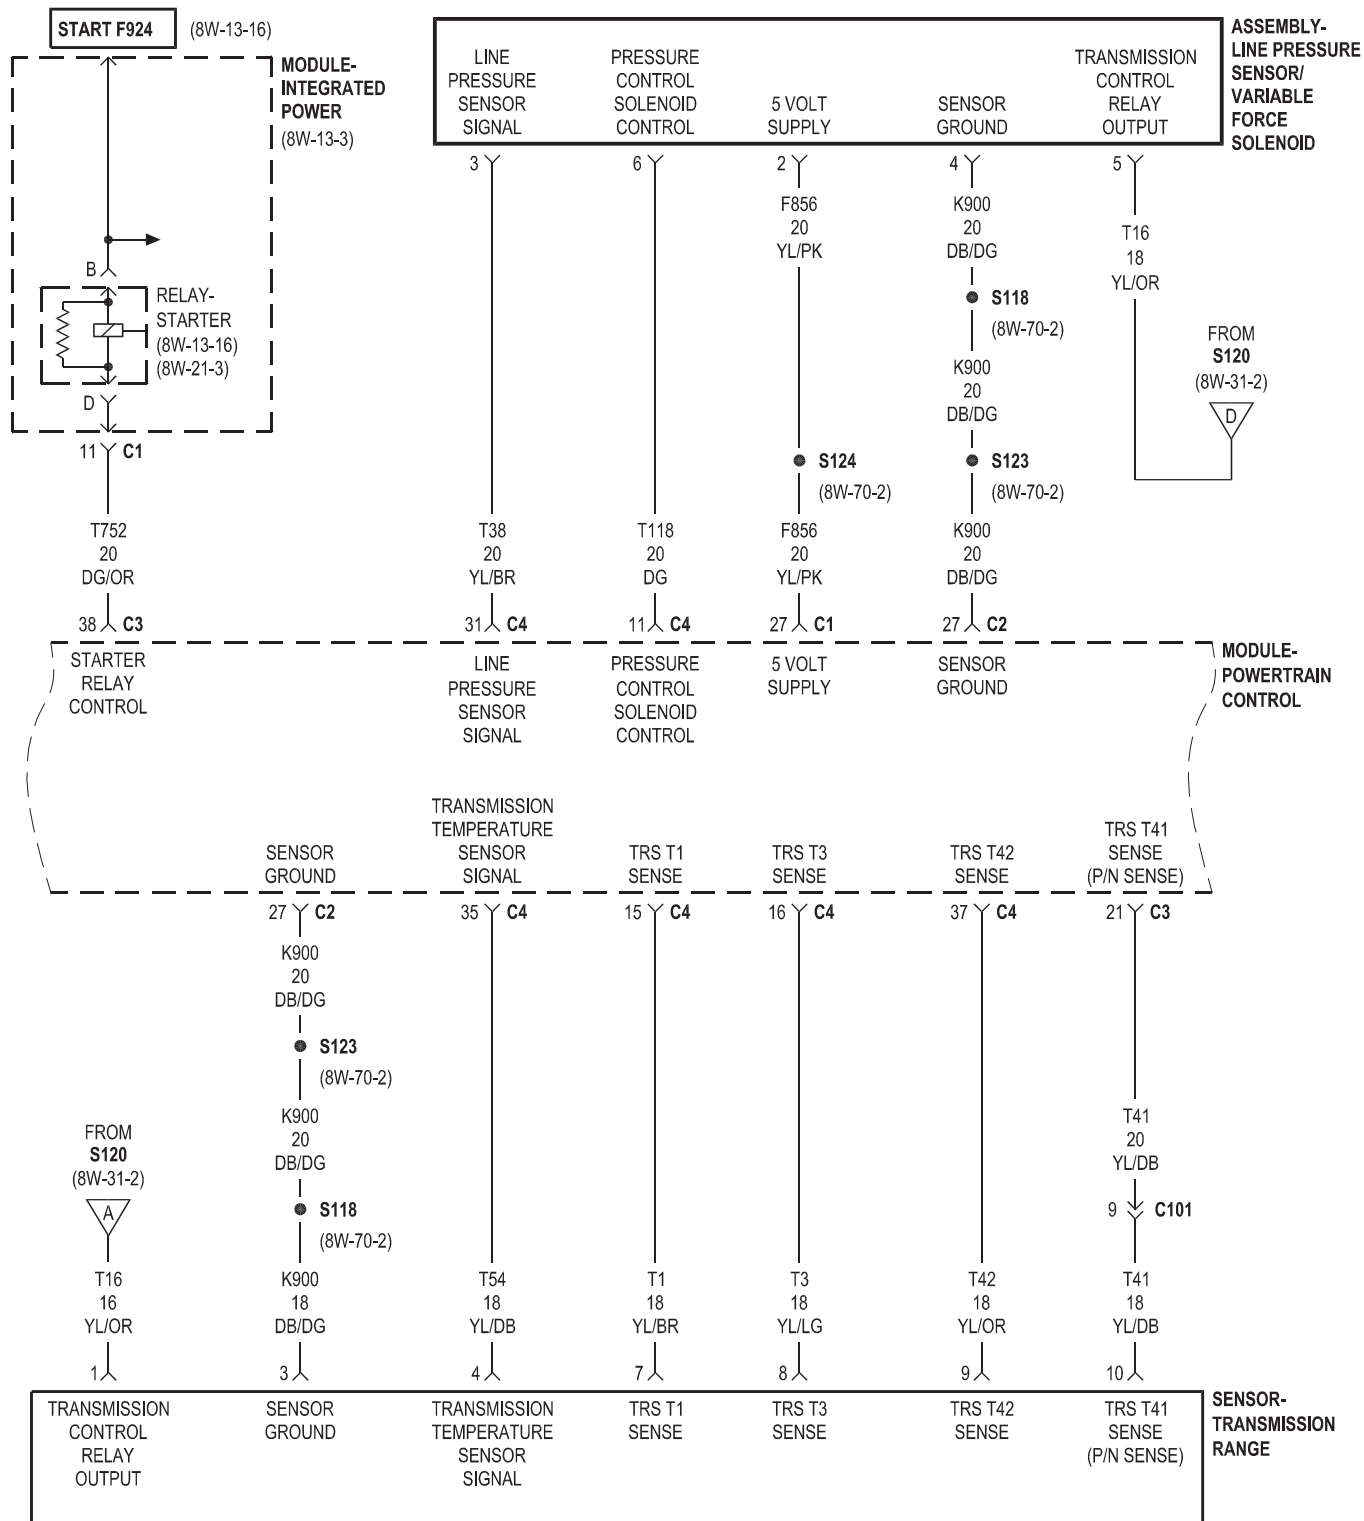

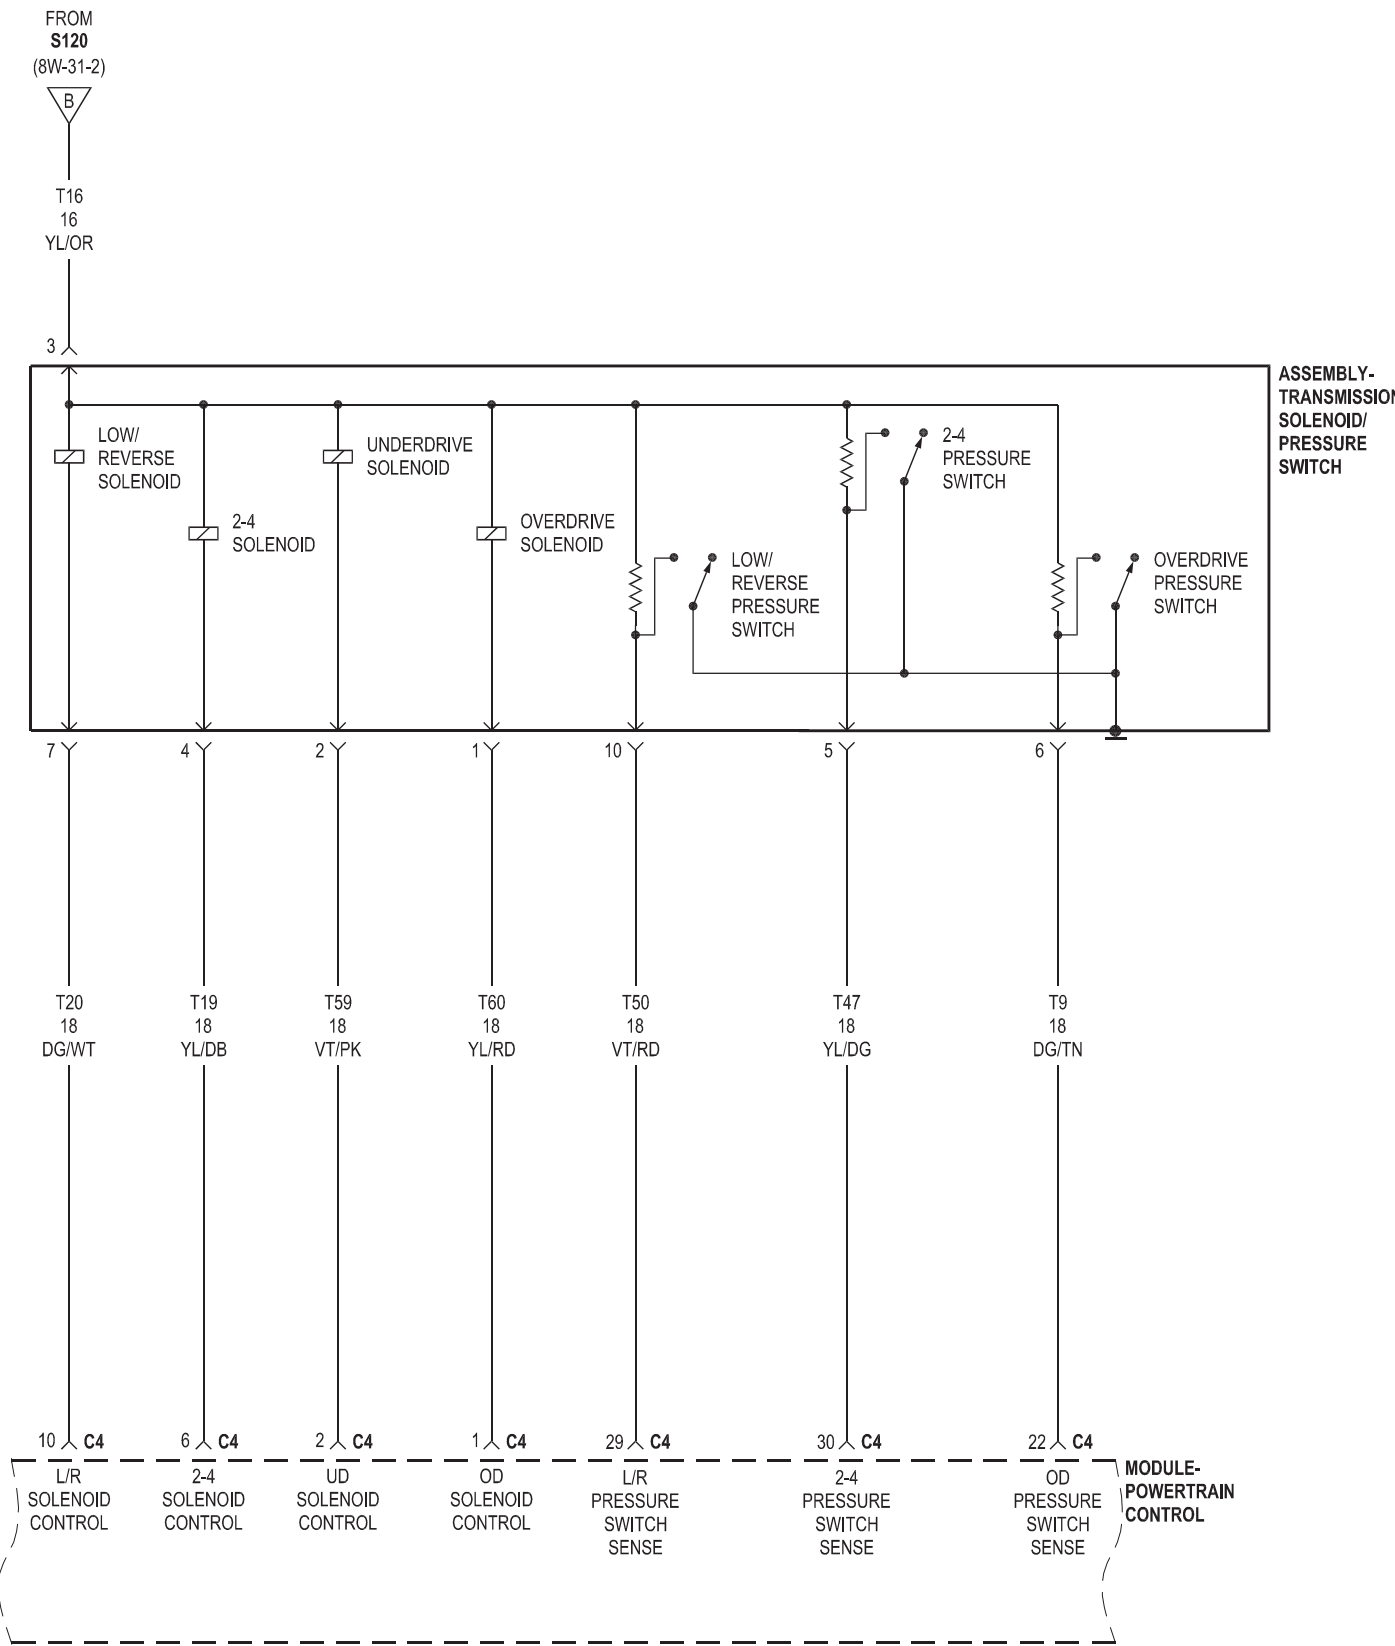

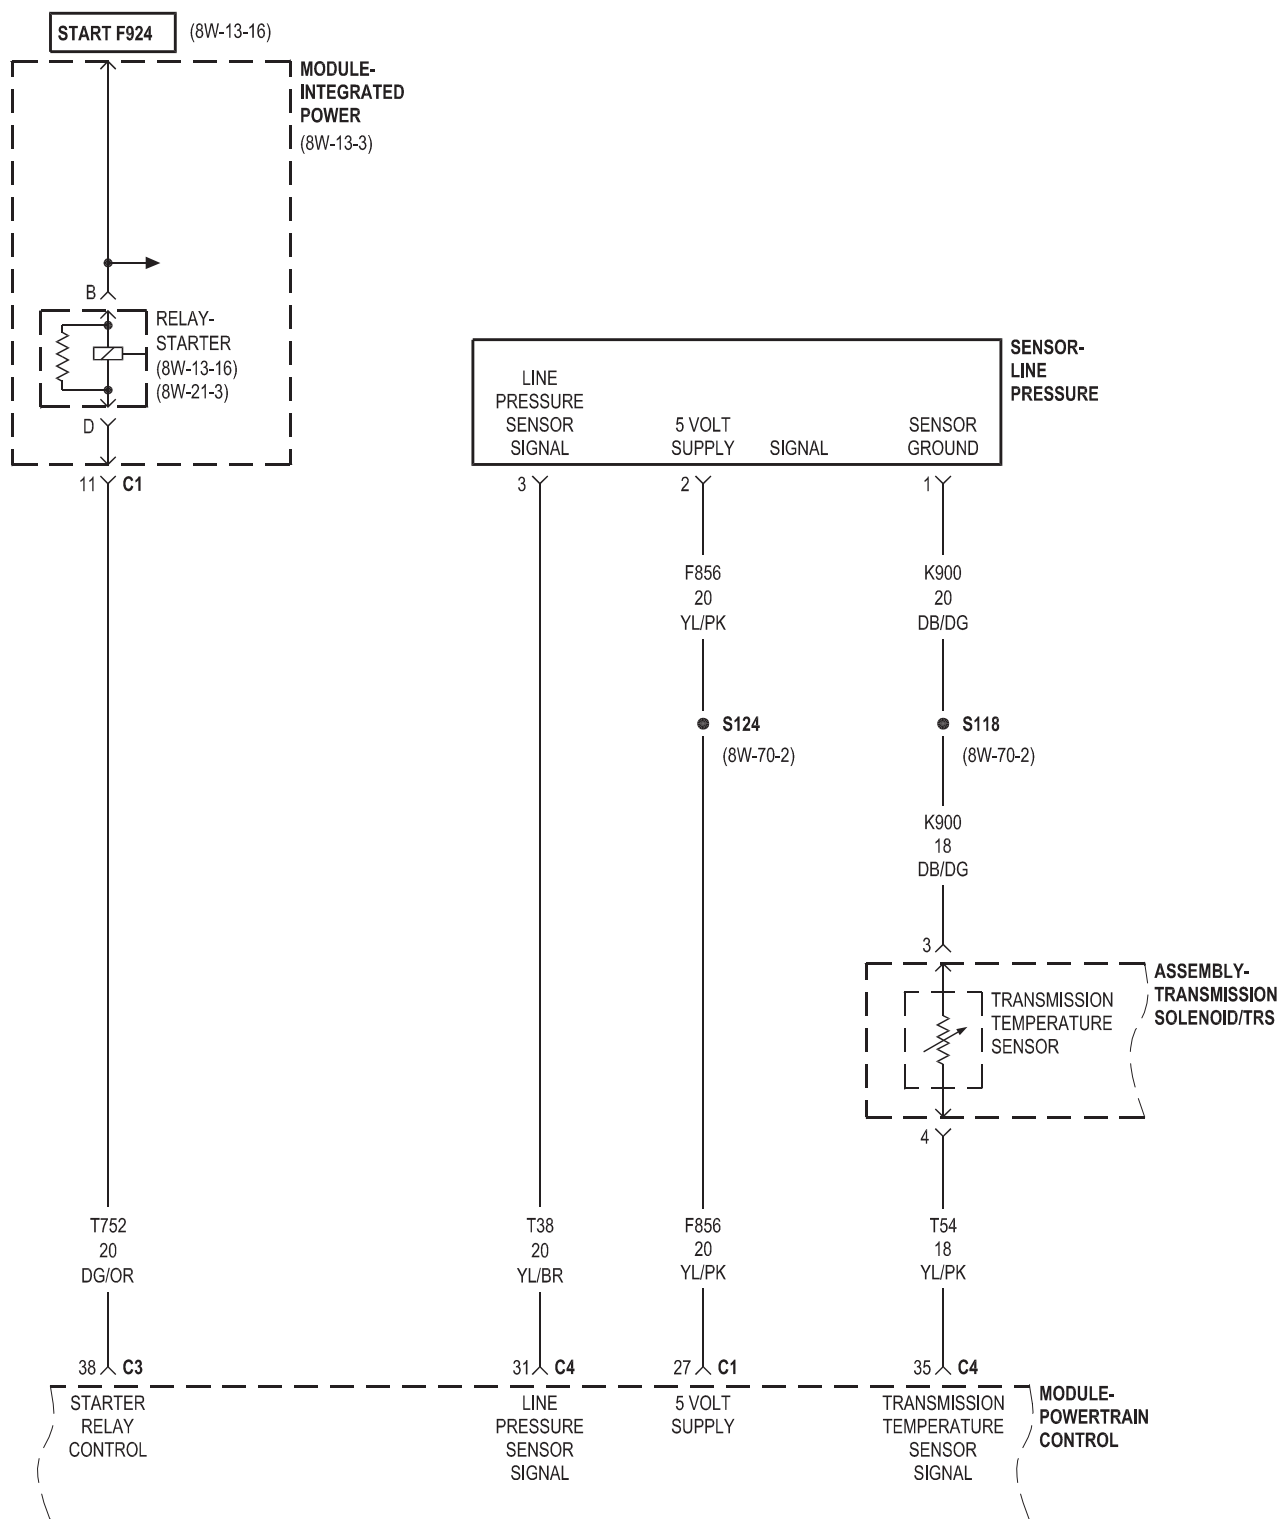

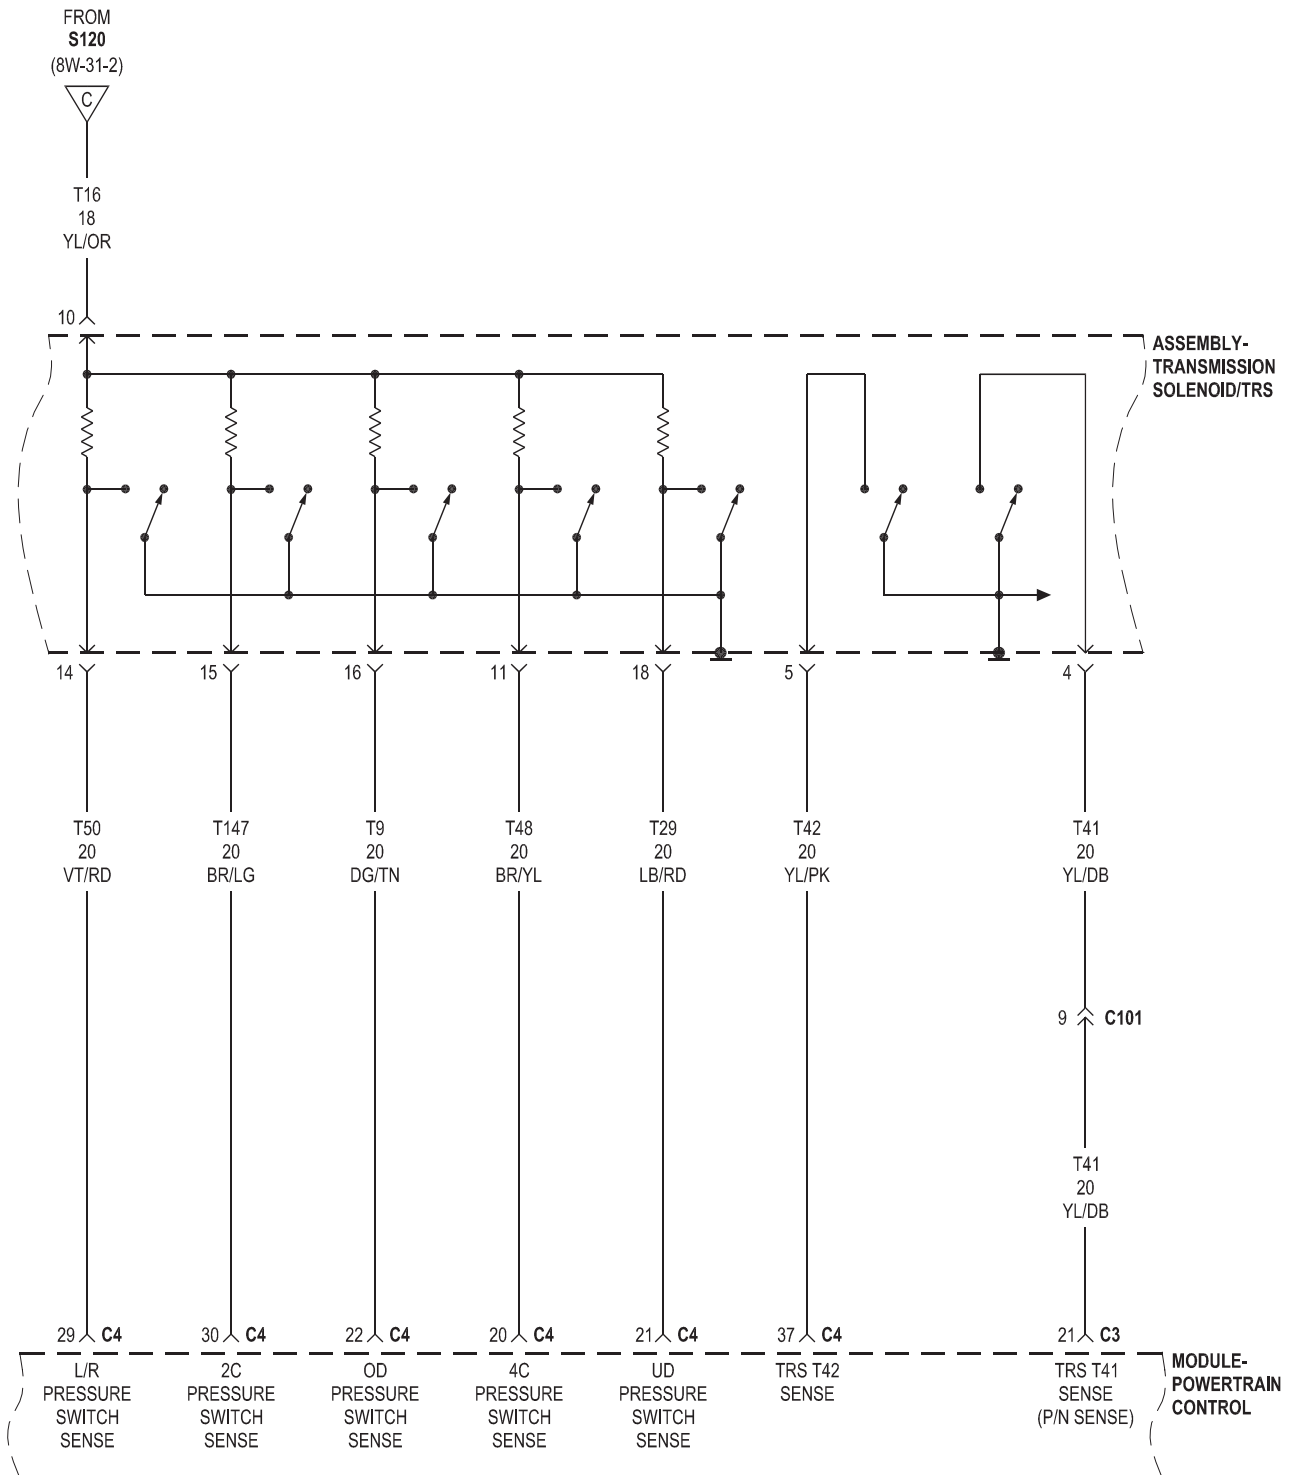

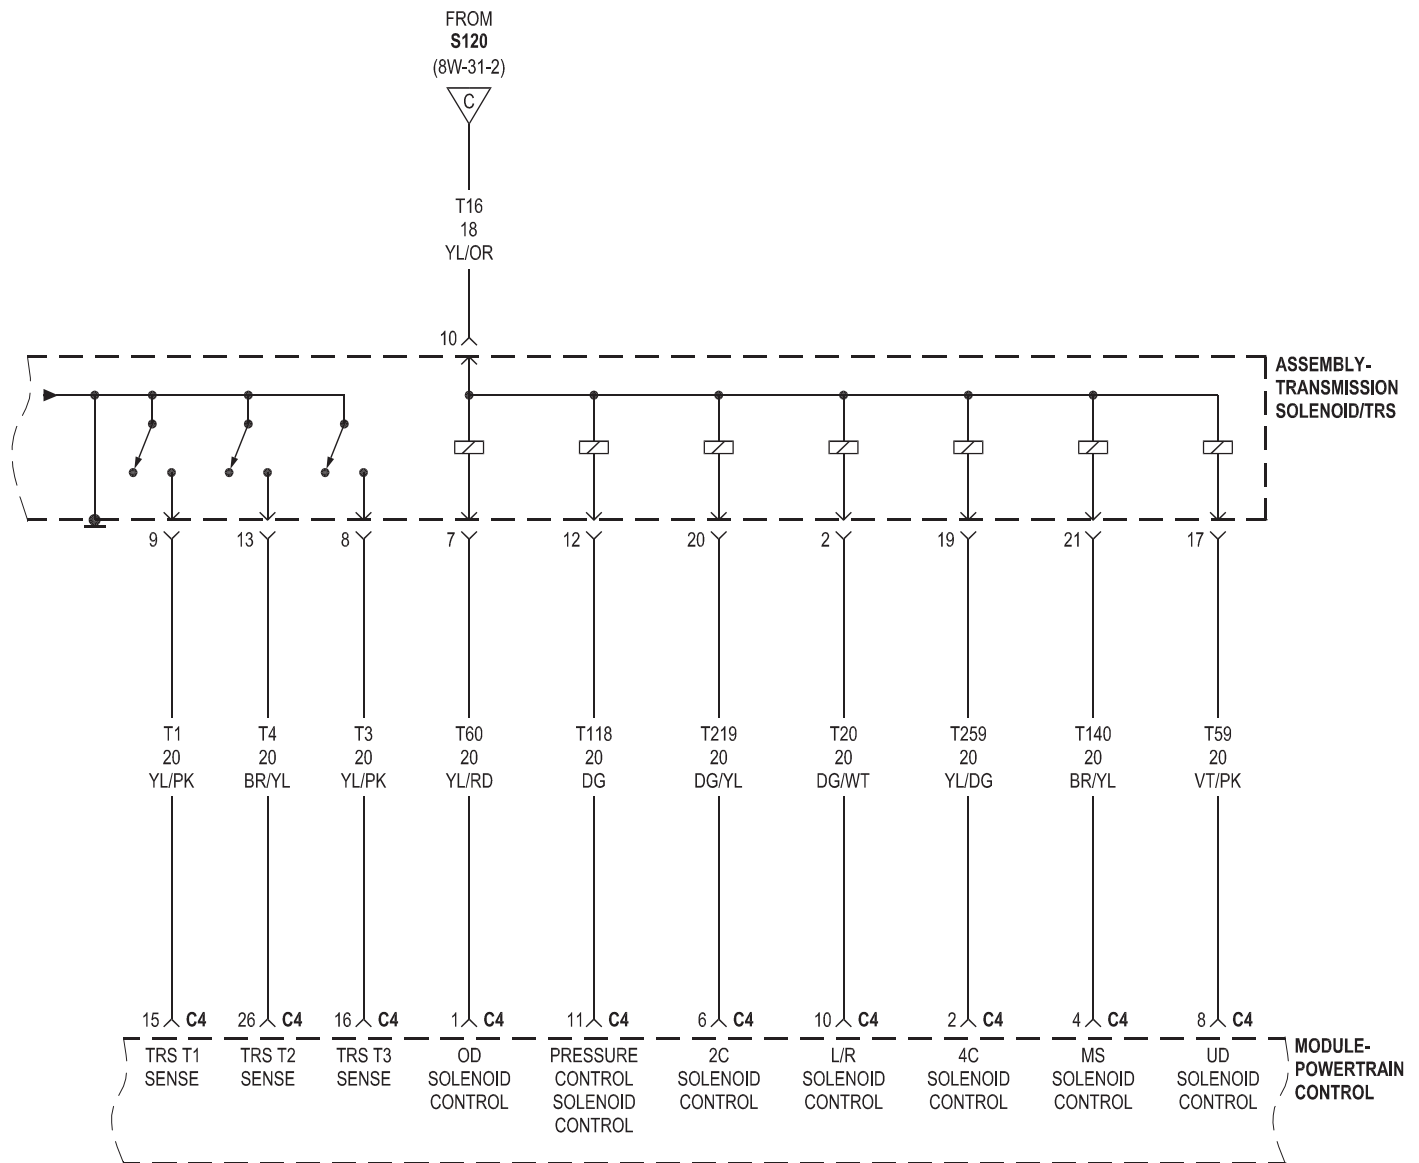

A/T

