

## 8W-54 TRAILER TOW

<b>Component</b>	<b>Page</b>
Fuse 3 . . . . .	8W-54-2
Fuse 12 . . . . .	8W-54-4
Fuse 13 . . . . .	8W-54-4
Fuse 45 . . . . .	8W-54-3
Fuse 49 . . . . .	8W-54-5
G100 . . . . .	8W-54-5
G101 . . . . .	8W-54-2
G302 . . . . .	8W-54-3
Lamp-Backup-Left . . . . .	8W-54-5
Lamp-Backup-Right . . . . .	8W-54-5
Lamp-High Mounted Stop . . . . .	8W-54-2

<b>Component</b>	<b>Page</b>
Mirror-Inside Rearview . . . . .	8W-54-5
Module-Brake Provision . . . . .	8W-54-2
Module-Front Control . . . . .	8W-54-2, 4, 5
Module-Integrated Power . . . . .	8W-54-2, 3, 4, 5
Relay-Park Lamp . . . . .	8W-54-3
Relay-Trailer Tow-Left . . . . .	8W-54-4
Relay-Trailer Tow-Right . . . . .	8W-54-4
Switch-Stop Lamp . . . . .	8W-54-2
Wiring-Trailer Tow 4-Way . . . . .	8W-54-3, 4
Wiring-Trailer Tow 7-Way . . . . .	8W-54-2, 3, 4, 5







