

8W-02 COMPONENT INDEX

Component	Page	Component	Page
Actuators-Door	8W-42	Module-Powertrain Control	8W-30, 31
Airbags	8W-43	Module-Sentry Key Remote Entry	8W-39
Amplifier-Radio	8W-47	Modules-Heated Seat	8W-63
Amplifier-Subwoofer	8W-47	Motor-Blower	8W-42
Antenna-Satellite	8W-47	Motor-IAC	8W-30
Assembly-EGR Valve	8W-30	Motor-Sunroof	8W-64
Assembly-Line Pressure Sensor/Variable Force Solenoid	8W-31	Motor-Windshield Wiper	8W-53
Assembly-Seat Motor	8W-63	Motors-Window	8W-60
Assembly-Shift Motor/Mode Sensor	8W-31	Power Outlets	8W-41
Assembly-Transmission Solenoids	8W-31	Pump-Washer-Windshield	8W-53
Backlite-Heated	8W-48	Radio	8W-47
Battery	8W-13	Receiver-Satellite	8W-47
Circuit Breaker-Window/Door Lock	8W-13, 47	Relay-A/C Clutch	8W-13, 42
Clockspring	8W-33, 40, 43, 47	Relay-Auto Shut Down	8W-30
Cluster	8W-40	Relay-Blower Motor	8W-42
Clutch-A/C Compressor	8W-42	Relay-Fog Lamp	8W-50
Coils-Ignition	8W-30	Relay-Fuel Pump	8W-13, 30
Control-A/C-Heater	8W-42	Relay-Horn	8W-41
Data Link Connector	8W-18	Relay-Ignition Run	8W-13
Fuses	8W-13	Relay-Ignition Run-Acc	8W-13
Fusible Link	8W-13	Relay-Park Lamp	8W-50, 51
Generator	8W-20	Relay-Rear Window Defogger	8W-48
Grounds	8W-15	Relay-Run/Start	8W-13
Heaters-Seats	8W-63	Relay-Starter	8W-13, 21
Horns	8W-41	Relay-Transmission Control	8W-31
Injectors-Fuel	8W-30	Relays-Trailer Tow	8W-54
Lamp-CHMSL-Aftermarket	8W-51	Relays-Wiper	8W-53
Lamp-Center Bezel	8W-44	Resistor-Blower Motor	8W-42
Lamp-High Mounted Stop	8W-51	Seat Belt-Tensioners	8W-43
Lamp-License-Left	8W-51	Sensor-Accelerator Pedal Position	8W-30
Lamp-Passenger Airbag On/Off Indicator	8W-43	Sensor-Ambient Air Temperature	8W-30
Lamps-Backup	8W-51, 54	Sensor-Brake Fluid Level	8W-34, 35
Lamps-Dome	8W-44	Sensor-Camshaft Position	8W-30
Lamps-Fog	8W-50	Sensor-Crankshaft Position	8W-30
Lamps-Headlamp	8W-50	Sensor-Engine Coolant Temperature	8W-30
Lamps-Park/Turn	8W-50, 52	Sensor-Evaporator Temperature	8W-42
Lamps-Tail/Stop/Turn	8W-51, 52	Sensor-Input Speed	8W-31
Latches-Door	8W-61	Sensor-Intake Air Temperature	8W-30
Mirror-Inside Rearview	8W-49	Sensor-Knocks	8W-30
Mirrors-Outside Rearview	8W-62	Sensor-Line Pressure	8W-31
Module-Anti-Lock Brakes	8W-34, 35	Sensor-MAP	8W-30
Module-Brake Provision	8W-54	Sensor-Output Speed	8W-31
Module-Electronic Overhead	8W-49	Sensor-Seat Track Position-Driver	8W-43
Module-Front Control	8W-13	Sensor-Sun	8W-40
Module-Fuel Pump	8W-30	Sensor-Throttle Position	8W-30
Module-Hands Free	8W-55	Sensor-Transmission Range	8W-31
Module-Integrated Power	8W-13	Sensor-Washer Fluid Level-Front Rear	8W-53
Module-Occupant Restraint Controller	8W-43	Sensors-Impact	8W-43
		Sensors-Oxygen	8W-30

Component	Page
Sensors-Wheel Speed-ABS	8W-35
Servo-Speed Control	8W-33
Solenoid-Brake Transmission Shift	8W-31
Solenoid-EVAP/Purge	8W-30
Speakers	8W-47
Splices	8W-70
Starter	8W-21
Switch-Backup Lamp	8W-31, 51
Switch-Clutch Interlock	8W-31
Switch-EVAP System Monitor	8W-30
Switch-Headlamp	8W-44, 50
Switch-Hood Ajar	8W-21
Switch-Horn	8W-41
Switch-Ignition	8W-13
Switch-Mirror	8W-62
Switch-Multifunction	8W-53
Switch-Oil Pressure	8W-30

Component	Page
Switch-Parking Brake	8W-40
Switch-Passenger Airbag On/Off	8W-43
Switch-Seat Belt-Driver	8W-43
Switch-Seat-Driver	8W-63
Switch-Stop Lamp	8W-51
Switch-Sunroof	8W-64
Switch-Tow/Haul Overdrive Off	8W-31
Switch-Transfer Case Selector	8W-31
Switches-Power Window	8W-60
Switches-Remote Radio	8W-47
Switches-Speed Control	8W-33
Switches-Window/Door Lock	8W-60, 61
Throttle Body	8W-30
Transducer-A/C Pressure	8W-42
Wiring-Trailer Tow	8W-54