


8W-13 INTEGRATED POWER MODULE

Component	Page	Component	Page
Amplifier-Subwoofer	8W-13-15, 17	Fuse 9	8W-13-9
Assembly-Shift Motor/Mode Sensor . .	8W-13-16, 22, 23	Fuses	8W-13-5, 6
Assembly-Transmission Solenoid	8W-13-31	Fusible Link	8W-13-7
Assembly-Transmission Solenoid/TRS	8W-13-9	G100	8W-13-7
Assembly-Winch	8W-13-7	G101	8W-13-7
Backlite-Heated	8W-13-9	G102	8W-13-7
Battery	8W-13-7	G104	8W-13-19, 20, 22
Battery-Auxiliary	8W-13-7	G106	8W-13-31
Cluster	8W-13-8, 10, 14, 16, 18, 26	G107	8W-13-31
Clutch-A/C Compressor	8W-13-29	G108	8W-13-7
Control-A/C-Heater	8W-13-12, 15	G109	8W-13-7
Data Link Connector	8W-13-10, 25	Gauge-Engine Oil Temperature	8W-13-13
Drive-Fan-Radiator	8W-13-8	Generator	8W-13-7
Electronics	8W-13-11, 12, 17, 18, 19, 20, 21, 22, 23, 24, 25, 26, 27, 28, 29, 30, 31	Heater-Fuel	8W-13-29
Fuse 1	8W-13-8	Horn-No. 1	8W-13-31
Fuse 10	8W-13-9	Horn-No. 2	8W-13-31
Fuse 11	8W-13-9	Lamp-Fog-Left Front	8W-13-28
Fuse 12	8W-13-11	Lamp-Headlamp-Left	8W-13-24, 27
Fuse 13	8W-13-11	Lamp-Headlamp-Right	8W-13-24, 27
Fuse 14	8W-13-11	Lamp-Park/Turn-Left Front	8W-13-11, 24
Fuse 15	8W-13-11	Lamp-Park/Turn-Right Front	8W-13-11, 24
Fuse 16	8W-13-11	Lamp-Tail Stop/Turn-Left	8W-13-25, 28
Fuse 18	8W-13-12	Lamp-Tail Stop/Turn-Right	8W-13-25
Fuse 19	8W-13-12	Lamp-Underhood	8W-13-9
Fuse 2	8W-13-8	Media System-Monitor/Dvd	8W-13-10
Fuse 20	8W-13-12	Mirror-Inside Rearview	8W-13-13, 28
Fuse 21	8W-13-12	Mirror-Outside Rearview-Driver	8W-13-9
Fuse 22	8W-13-14	Module-Anti-Lock Brakes	8W-13-11, 12, 13, 25, 26
Fuse 23	8W-13-15	Module-Axle Disconnect-Front	8W-13-19, 23
Fuse 24	8W-13-15	Module-Brake Provision	8W-13-11
Fuse 25	8W-13-15	Module-Electronic Overhead	8W-13-15
Fuse 26	8W-13-15	Module-Engine Control	8W-13-9, 13, 17, 18, 19, 20
Fuse 27	8W-13-15	Module-Final Drive Control	8W-13-9, 13
Fuse 28	8W-13-13	Module-Fuel Pump	8W-13-31
Fuse 29	8W-13-13	Module-Gateway	8W-13-13
Fuse 31	8W-13-16	Module-Hands Free	8W-13-10
Fuse 32	8W-13-12	Module-Occupant Restraint Controller . . .	8W-13-12
Fuse 35	8W-13-16	Module-Powertrain Control	8W-13-13, 16, 18, 19, 20, 28, 30, 31
Fuse 36	8W-13-16	Module-Sentry Key Remote Entry . . .	8W-13-10, 13
Fuse 38	8W-13-16	Module-Totally Integrated Power	8W-13-3, 4, 7, 8, 9, 11, 12, 13, 14, 15, 16, 17, 18, 19, 20, 21, 22, 23, 24, 25, 26, 27, 28, 29, 30, 31
Fuse 39	8W-13-17	Motor-Blower	8W-13-21
Fuse 40	8W-13-17	Motor-Condenser Fan	8W-13-29
Fuse 42	8W-13-17	Motor-Windshield Wiper	8W-13-18, 30, 31
Fuse 5	8W-13-8	Motor/Module-Sunroof	8W-13-8
Fuse 6	8W-13-8	Power Outlet	8W-13-16
Fuse 7	8W-13-8	Power Outlet-Console	8W-13-8
Fuse 8	8W-13-9		


Component	Page
Power Outlet-Instrument Panel	8W-13-17
Pump-Washer-Windshield	8W-13-19
Radio	8W-13-10
Receiver-Satellite	8W-13-10
Relay-Intake Air Heater	8W-13-7
Relay-Starter Motor	8W-13-14, 29
Seat Belt-Tension Reducer-Driver	8W-13-17
Sensor-Ambient Air Temperature	8W-13-24
Sensor-Brake Fluid Level	8W-13-20
Sensor-Oxygen-Left Rear	8W-13-29
Sensor-Prop Shaft Speed-Front	8W-13-24
Sensor-Prop Shaft Speed-Rear	8W-13-26
Sensor-Transfer Case Position	8W-13-23
Sensor-Transmission Range	8W-13-9
Solenoid-EVAP/Purge	8W-13-13
Solenoid-Reverse Lock-Out	8W-13-8
Solenoid-Wastegate	8W-13-8
Starter	8W-13-7
Switch-Adjustable Pedals	8W-13-12, 19

Component	Page
Switch-Backup Lamp	8W-13-27
Switch-Clutch Interlock	8W-13-9
Switch-Door Lock-Passenger	8W-13-13
Switch-Heated Seat-Driver	8W-13-12, 20
Switch-Heated Seat-Passenger	8W-13-12, 20
Switch-Ignition	8W-13-14
Switch-Passenger Airbag On/Off	8W-13-12
Switch-Power Sliding Backlite	8W-13-30
Switch-Push-Button Starter	8W-13-14
Switch-Seat-Driver	8W-13-15
Switch-Seat-Passenger	8W-13-15
Switch-Stop Lamp	8W-13-13, 15, 25
Switch-Transfer Case Selector	8W-13-13
Switch-Washer Fluid Level	8W-13-18
Switch-Window/Door Lock-Driver	8W-13-15, 30
Transducer-A/C Pressure	8W-13-27, 28
Wiring-Trailer Tow	8W-13-11, 12, 21
Wiring-Trailer Tow 4-Way	8W-13-11, 21

MODULE-
TOTALLY INTEGRATED POWER
(FRONT VIEW)

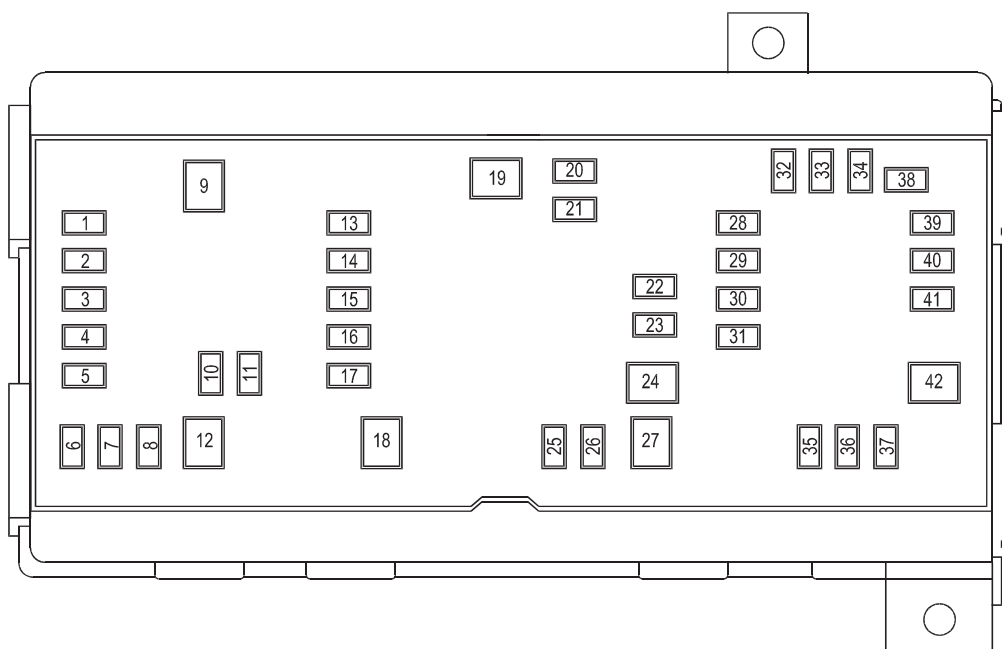

MODULE-
TOTALLY INTEGRATED POWER
(REAR VIEW)

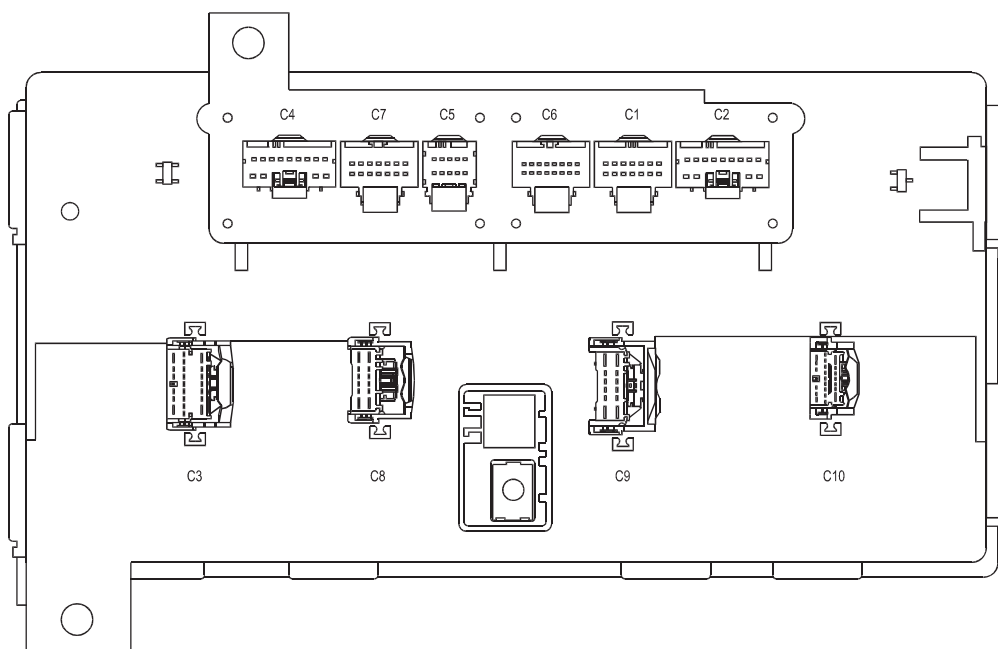





**FUSES
(TIPM)**


FUSE NO.	AMPS	FUSED CIRCUIT	FUNCTION
1	20A	A405 18RD/DB	FUSED B(+)
2	20A	A941 18RD	FUSED B(+)
3	-	-	-
4	-	-	-
5	20A	A310 16RD/LB ▽▽	FUSED B(+)
6	40A	A212 20RD/OR ○○	FUSED B(+)
7	15A	A917 18RD ■■■■	FUSED B(+)
8	10A	C16 18DB/GY ▽▽	REAR WINDOW DEFOGGER CONTROL OUTPUT
9	30A	A121 14RD/YL ▼▼▼▼	FUSED B(+)
10	5A	T41 20YL/DB ■■■■	PARK/NEUTRAL POSITION SWITCH SENSE (T41)
11	20A	A114 18GY/RD	FUSED B(+)
12	30A	A400 14TN/RD ◆◆◆◆	FUSED B(+)
13	25A	A111 14DG/RD ■	FUSED B(+)
14	15A	L7 20WT/YL	FUSED PARK LAMP FEED
15	20A	L678 18BR	FUSED PARK LAMP FEED
16	15A	L70 20WT/GY	FUSED PARK LAMP FEED
17	-	-	-
18	40A	A107 12TN/RD ■	FUSED B(+)
19	30A	A100 14RD/VT ◆◆◆◆	BACKUP LAMP FEED
20	10A	F100 20PK/VT	FUSED IGNITION SWITCH OUTPUT (RUN)
21	10A	F201 20PK/OR	FUSED IGNITION SWITCH OUTPUT (RUN-START)
22	2A	A106 20LB/RD	FUSED B(+)
23	10A	A919 20RD	FUSED B(+)
24	20A	A916 16RD	FUSED B(+)
25	10A	A940 18RD	FUSED B(+)


■ AWAL
 ▽▽ EXCEPT BASE
 ○○ DIESEL
 ▼▼▼▼ POWER WAGON
 ■■■■ SRT
 ■■■■ EXCEPT SRT
 ◆◆◆◆ TRAILER TOW


FUSES
(TIPM)


FUSE NO.	AMPS	FUSED CIRCUIT	FUNCTION
26	15A	A103 18GY/RD	FUSED B(+)
27	40A	A210 12OR/RD	FUSED B(+)
28	10A	F202 20PK/GY	FUSED IGNITION SWITCH OUTPUT (RUN-START)
29	10A	F21 20PK/DG	FUSED IGNITION SWITCH OUTPUT (RUN-START)
30	-	-	-
31	15A	A918 20RD 	FUSED B(+)
32	10A	F504 20GY/PK	FUSED IGNITION SWITCH OUTPUT (RUN)
33	-	-	-
34	-	-	-
35	15A	A944 20RD	FUSED B(+)
36	25A	A116 16YL/RD	FUSED B(+)
37	-	-	-
38	20A	A205 18RD/OR	FUSED B(+)
39	10A	F983 20PK/YL	FUSED IGNITION SWITCH OUTPUT (RUN-ACC)
40	20A	F984 18PK/YL	FUSED IGNITION SWITCH OUTPUT (RUN-ACC)
41	-	-	-
42	30A	A209 10RD 	FUSED B(+)

 DIESEL
 EXCEPT DIESEL MTC

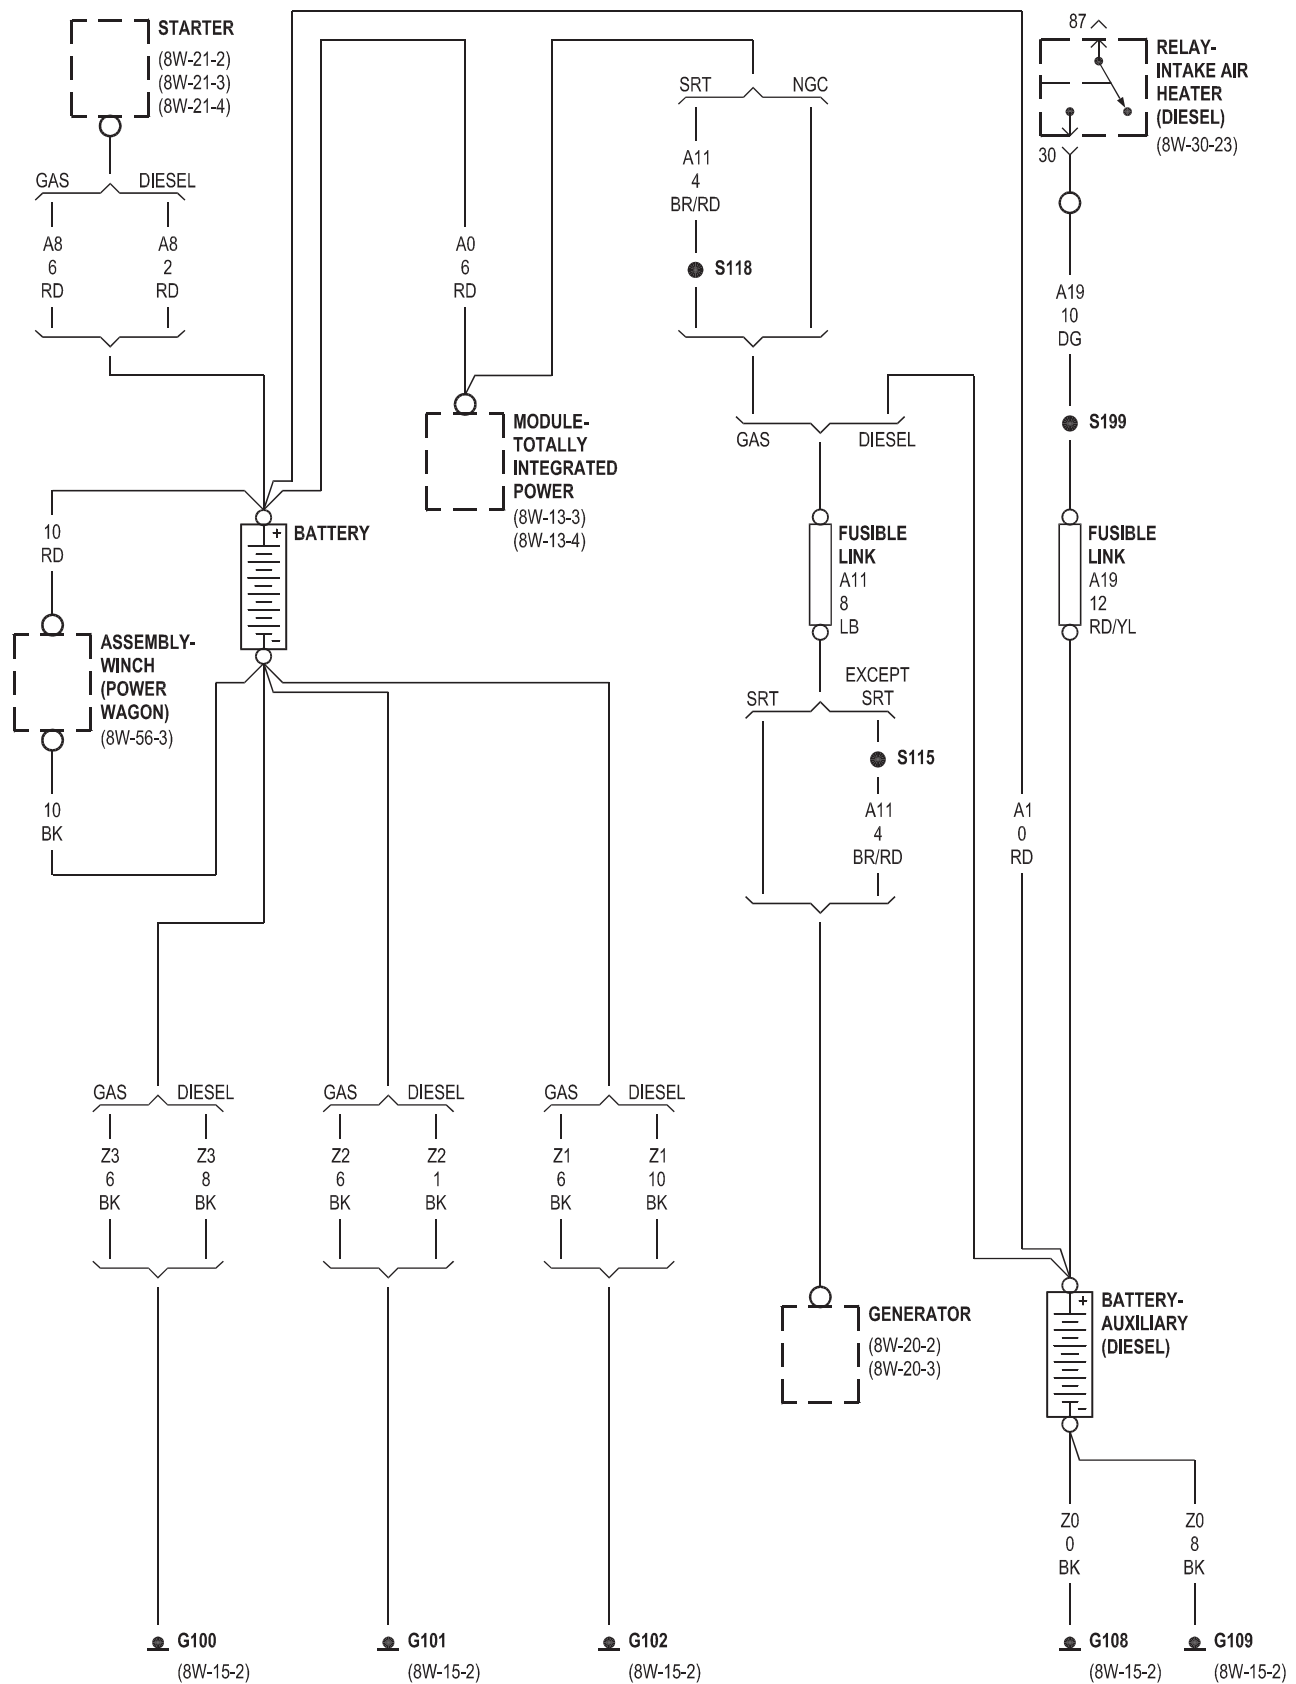

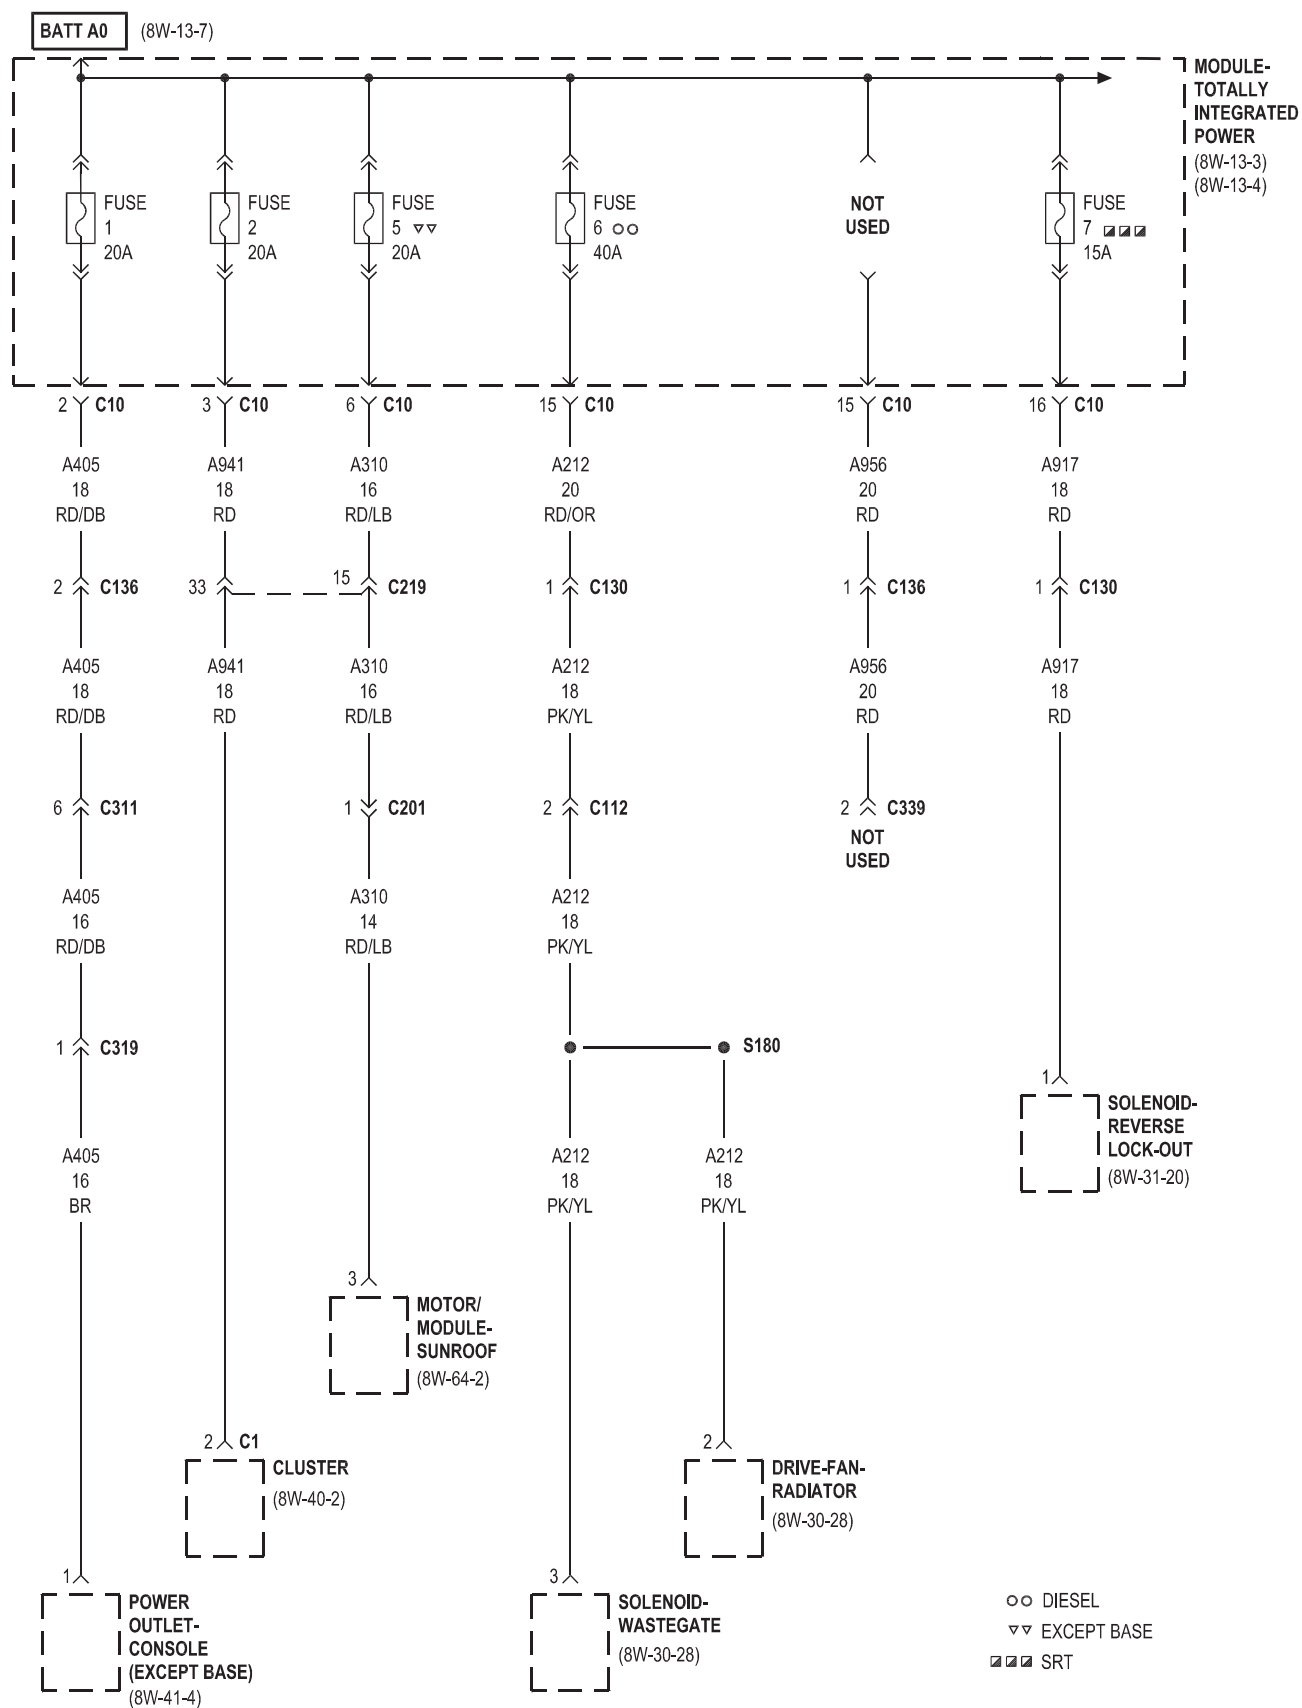

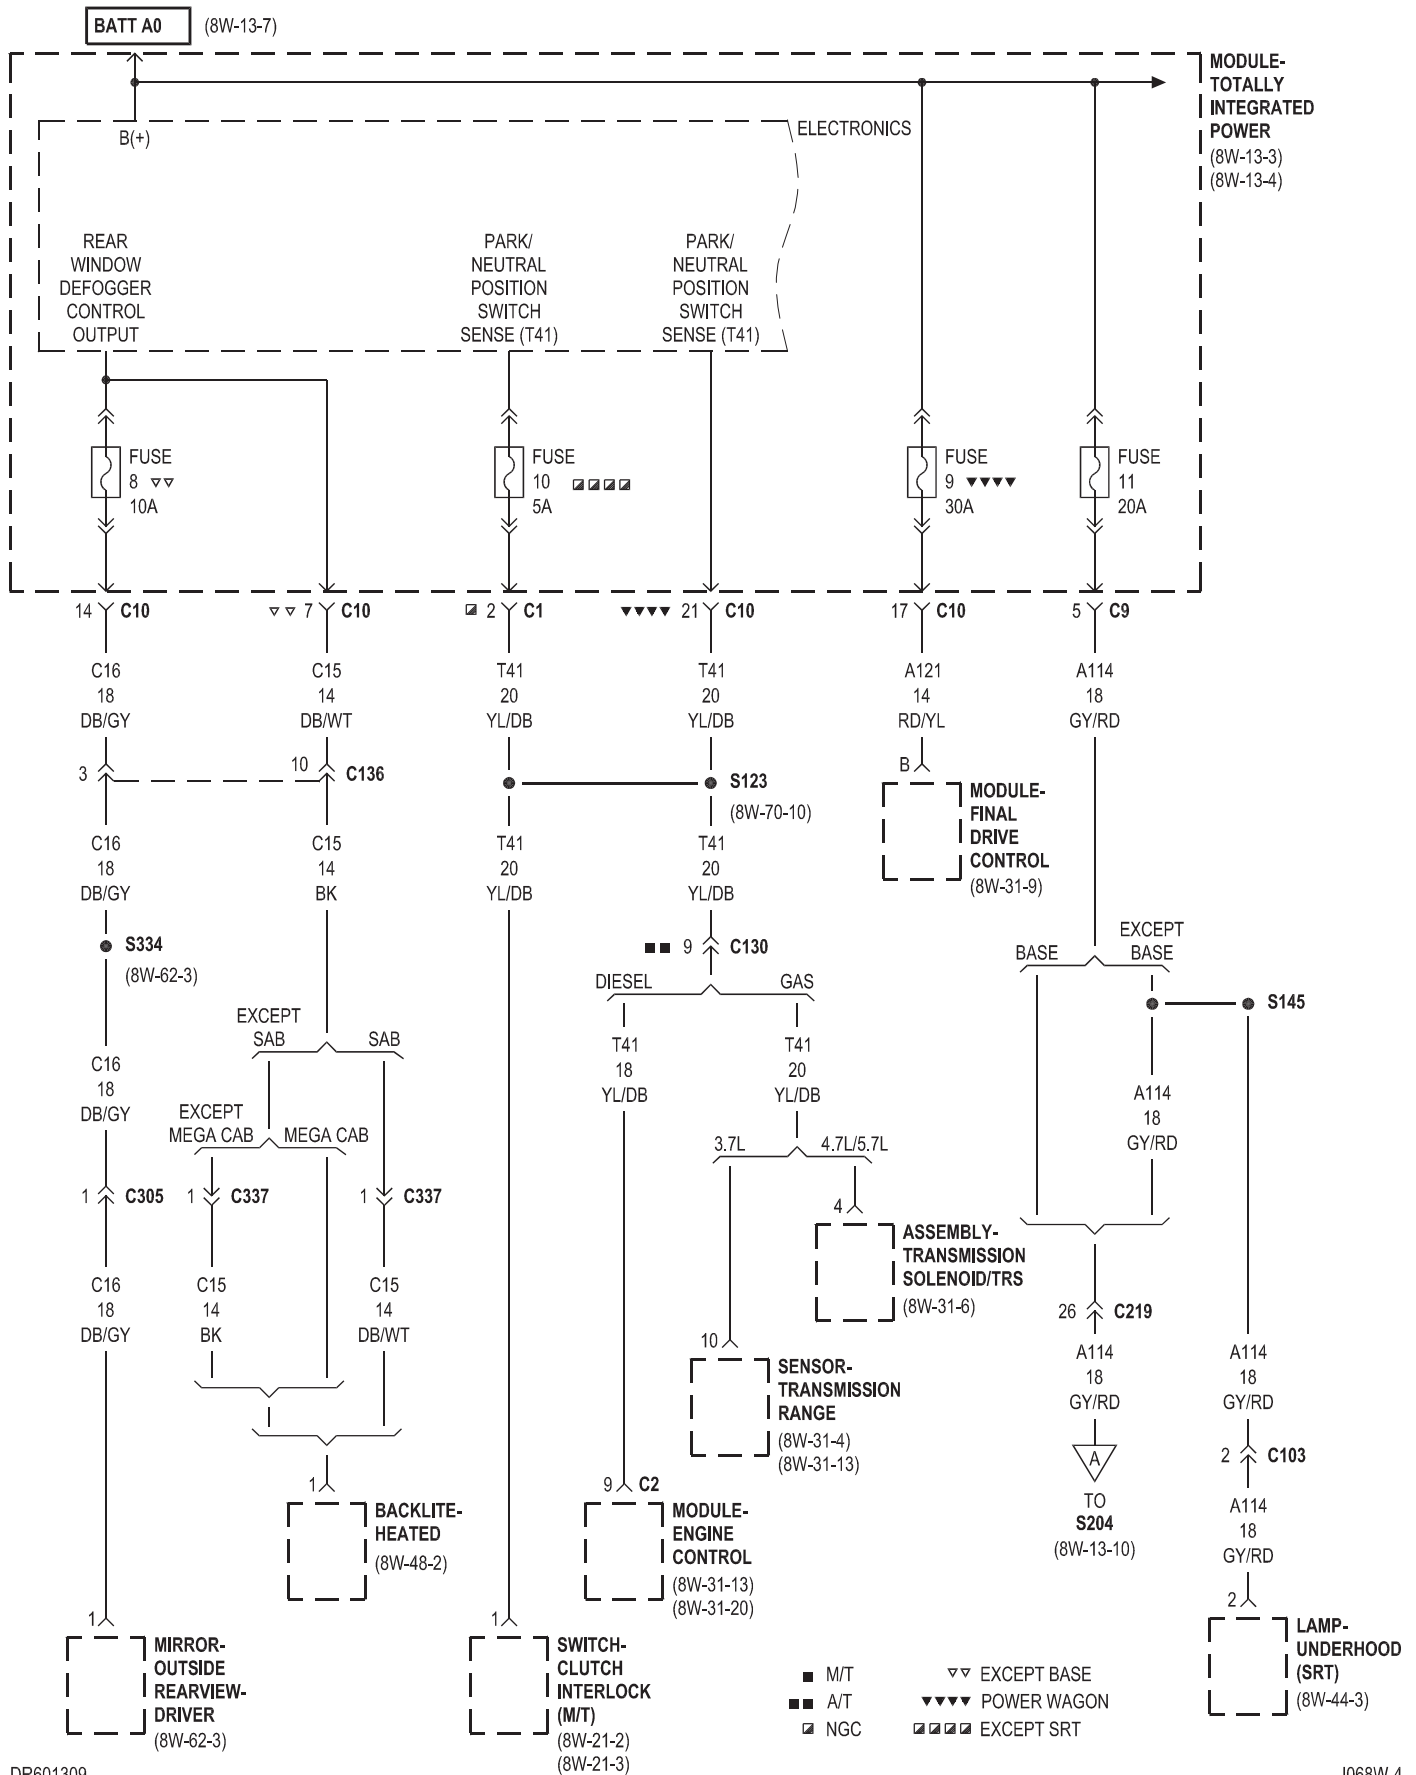

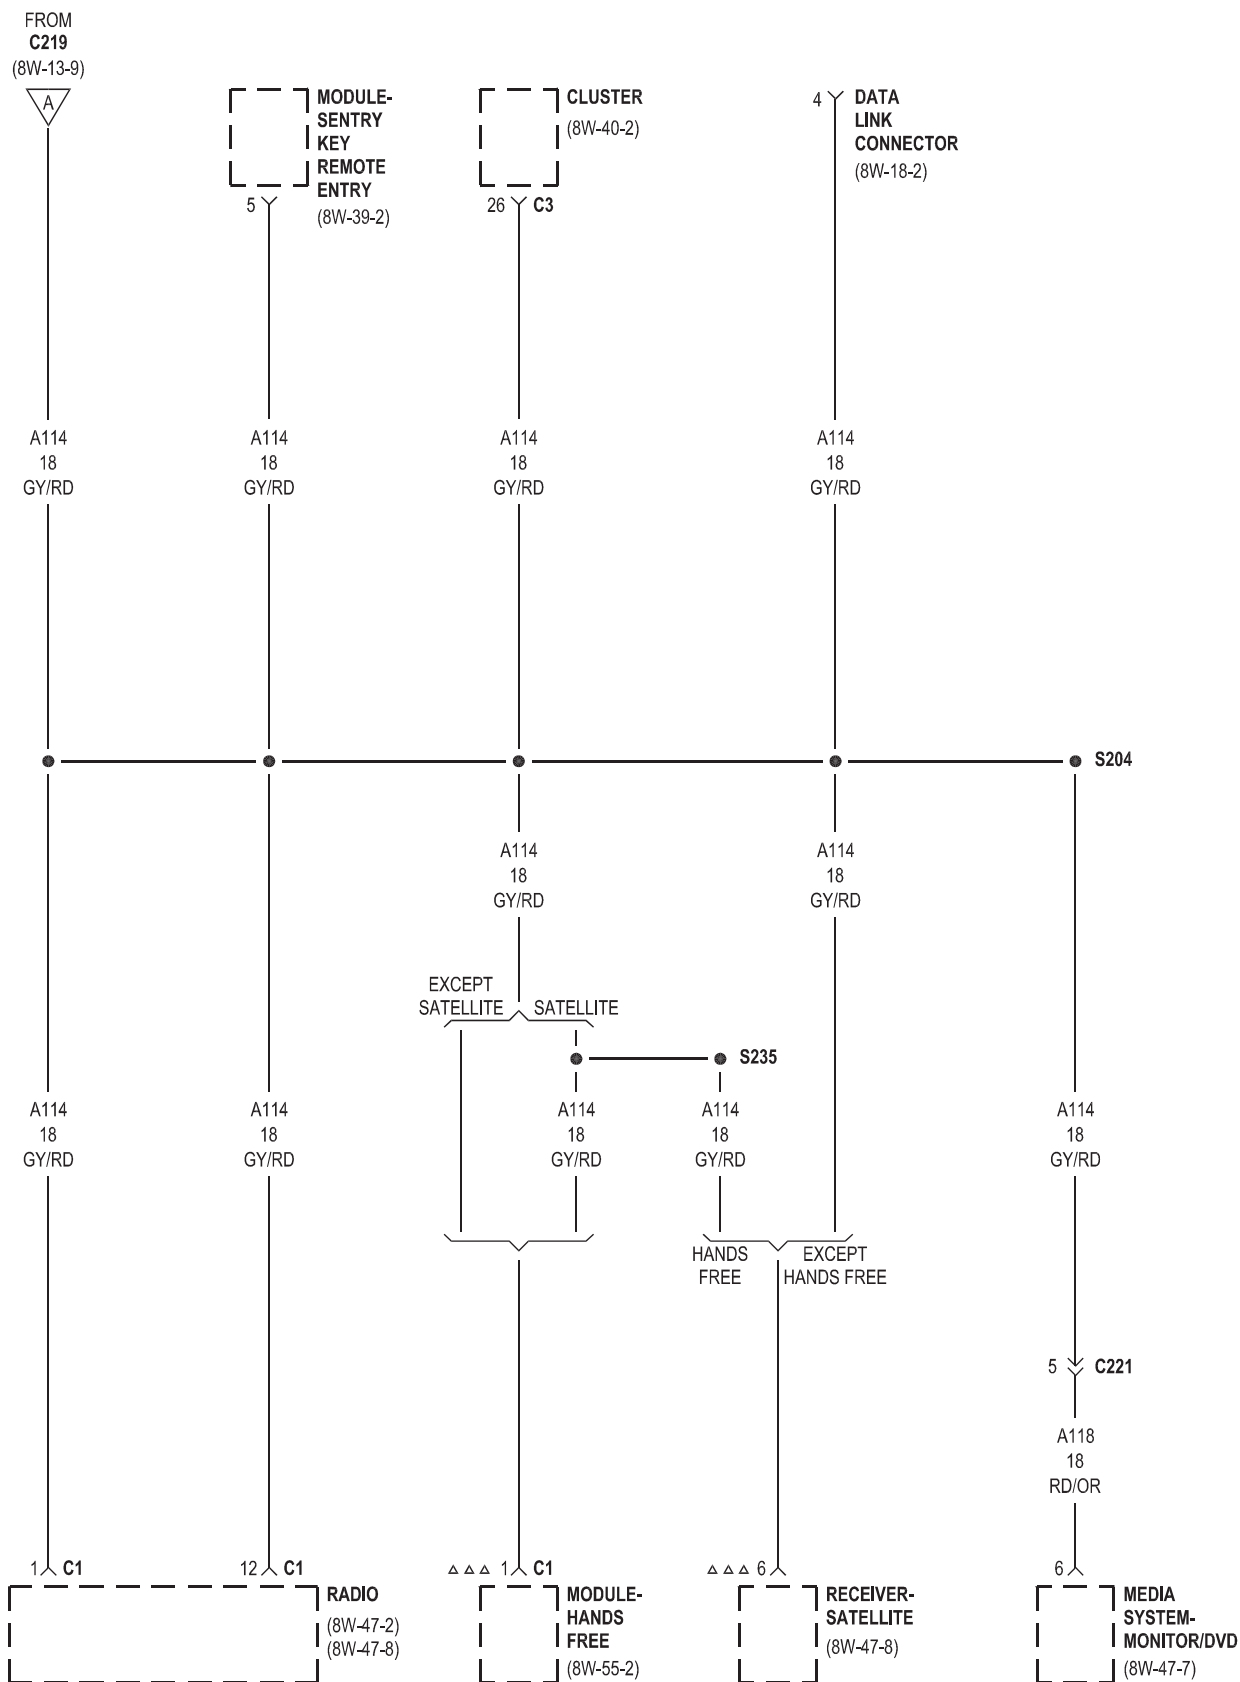

△△△ SLT+/SRT

